

[Manuals.plus](#) /

› [Fisher-Price](#) /

› Fisher-Price Laugh & Learn Smart Stages Learn with Puppy Walker Instruction Manual

## Fisher-Price FHY94

# Fisher-Price Laugh & Learn Smart Stages Learn with Puppy Walker Instruction Manual

Brand: Fisher-Price | Model: FHY94

## PRODUCT OVERVIEW

---

The Fisher-Price Laugh & Learn Smart Stages Learn with Puppy Walker is designed to grow with your baby, offering engaging activities for sitting play and supportive features for first steps. It introduces foundational learning concepts through interactive elements, music, and lights.



Image: The Fisher-Price Laugh & Learn Smart Stages Learn with Puppy Walker, featuring a friendly puppy design with interactive elements.

## WHAT'S INCLUDED

---

- 1 Fisher-Price Laugh & Learn Smart Stages Learn with Puppy Walker toy

## KEY FEATURES

---

- Musical infant walking toy with 2 ways to play: sit & play or stand & walk.
- 3 Smart Stages learning levels with 75+ songs, sounds & phrases.
- Teaches the alphabet, shapes, colors, numbers, and Spanish words.

- 7 hands-on activities including light-up piano keys and nose, roller, spinner, flip page, and more.
- Easy-grasp handle and sturdy, 4-wheel base for stability during first steps.
- Helps strengthen fine and gross motor skills for infants and toddlers ages 6-36 months.

**Fisher-Price®**

A, B, C, D...

**A walking buddy who teaches ABCs & 123s!**

**Learning content changes with baby's age & stage!**

EXPLORE  
PRETEND  
ENCOURAGE  
**SMART STAGES**

Let's walk together!

**Encouraging phrases & music reward baby's every step!**

**7 hands-on activities**  
with light-up nose & piano keys

**75+** songs, sounds, tunes & phrases

**TEACHES**

The Alphabet  
Numbers & Counting  
Colors & Shapes  
Spanish Words  
AND MORE!

**Laugh & Learn®  
Learn with Puppy Walker**

**6-36M**  
infant to preschool

**CAUTION:** This package contains small parts. For adult assembly only.  
**ADULT ASSEMBLY REQUIRED.** Tool needed: Phillips screwdriver (not included).

Image: The product packaging illustrating key features such as Smart Stages, 75+ songs, and 7 hands-on activities.

## SETUP INSTRUCTIONS

### Battery Installation

The Fisher-Price Puppy Walker requires 2 AA batteries for operation. Locate the battery compartment, typically on the underside or back of the toy. Use a Phillips head screwdriver to open the compartment. Insert the batteries, ensuring correct polarity (+/-). Close the compartment securely.

### Assembly

Adult assembly is required for this product. Follow the detailed instructions provided in the included user manual (PDF link available in the Warranty and Support section) for proper assembly of the walker components, including attaching the handle and ensuring the wheels are securely in place.

## OPERATING INSTRUCTIONS

## Smart Stages Levels

The walker features 3 Smart Stages levels, allowing the learning content to change as your baby grows. Use the Smart Stages selector switch (usually located on the puppy's paw) to choose the appropriate level:

- **Level 1 (Explore):** Introduces basic concepts like colors, shapes, and numbers through simple phrases and songs.
- **Level 2 (Encourage):** Expands on learning with more complex phrases, encouraging interaction and discovery. This level may introduce Spanish words.
- **Level 3 (Pretend):** Encourages imaginative play with fun sounds and phrases that inspire role-playing scenarios.



**3 Smart Stages® levels teach the alphabet, colors, shapes & more**

Image: Detail of the Smart Stages switch and the interactive flip book on the puppy's body.

## Interactive Activities

The puppy walker offers various hands-on activities to engage your child:

- **Light-Up Nose:** Press the puppy's nose for lights and sounds.
- **Piano Keys:** Press the numbered piano keys (1, 2, 3) to hear songs, sounds, and learn numbers/colors.
- **Flip Page Book:** Flip the pages of the book on the puppy's chest to change content and learn alphabet letters.
- **Roller:** Spin the roller on the puppy's ear for sounds and motor skill development.

- **Spinner:** Rotate the spinner on the puppy's foot for tactile exploration.
- **Slide:** Move the slider on the puppy's other foot for additional sounds and engagement.
- **Keys:** Rattle the attached keys for sensory play.

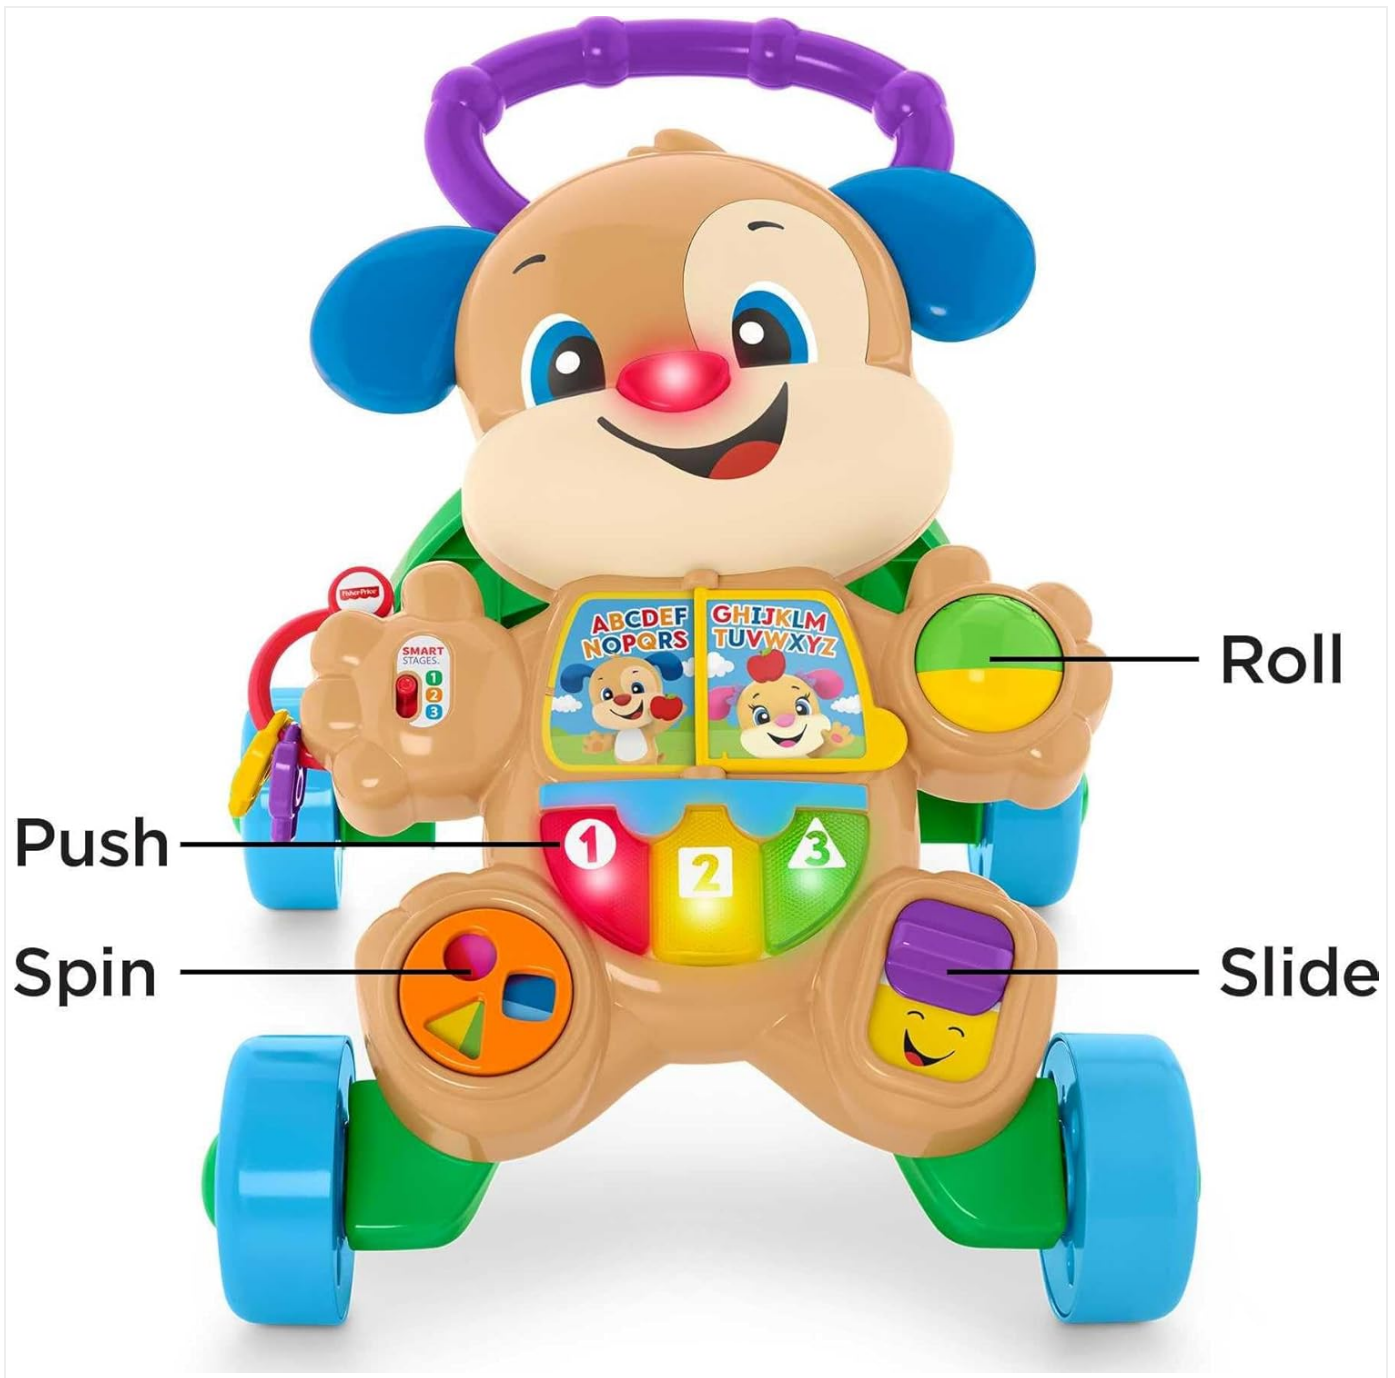


Image: A visual guide pointing out the interactive "Push," "Spin," "Roll," and "Slide" features on the walker.

### Sit & Play Mode

For younger infants (6+ months), the walker can be used in a stationary position for sit-and-play activities. This allows them to interact with the front panel features while developing fine motor skills.



## 7 hands-on activities for baby to flip, press, spin, roll & slide

Image: A baby sitting on the floor, engaging with the interactive front panel of the puppy walker.

### Stand & Walk Mode

As your baby begins to pull up and take their first steps, the sturdy 4-wheel base and easy-grasp handle provide support and encouragement. The walker responds with encouraging phrases and music as it is pushed, motivating movement and gross motor skill development.



Take a stroll or sit and play  
with this musical puppy pal

6-36  
m

Image: A toddler standing and pushing the puppy walker across a rug, demonstrating its use as a walking aid.

## CARE AND MAINTENANCE

- **Cleaning:** Wipe the toy with a damp cloth and mild soap. Do not immerse in water.
- **Battery Replacement:** Replace batteries when sounds become distorted or lights dim. Always use fresh AA batteries and dispose of old batteries responsibly.
- **Storage:** Store the toy in a cool, dry place away from direct sunlight when not in use.

## TROUBLESHOOTING

- **No Sound/Lights:**
  - Check if the power switch (located on the back) is in the "ON" position.
  - Ensure batteries are correctly installed with proper polarity.
  - Replace old batteries with new AA batteries.

• **Intermittent Function:**

- This may indicate low battery power. Replace batteries.
- Ensure all interactive elements are clean and free from obstructions.

## PRODUCT SPECIFICATIONS

---

Specification	Detail
Model Number	FHY94
Product Dimensions	16.2 x 19.31 x 18.19 inches
Item Weight	0.01 ounces
Material Type	Plastic
Batteries Required	2 AA batteries
Age Range (Description)	6 - 36 months
Maximum Weight Recommendation	25 Pounds
Country/Region of Origin	China

## WARRANTY AND SUPPORT

---

For detailed warranty information or further assistance, please refer to the official user manual or contact Fisher-Price customer support.

You can access the User Manual (PDF) [here](#).