



Manuals.plus /

› Fisher-Price /

› Fisher-Price Laugh & Learn Smart Stages Sis Walker Instruction Manual FHY95

Fisher-Price FHY95

Fisher-Price Laugh & Learn Smart Stages Sis Walker Instruction Manual

Model: FHY95

INTRODUCTION

The Fisher-Price Laugh & Learn Smart Stages Sis Walker is designed to support your child's development from sitting play to their first steps. This interactive toy features educational music, lights, and activities to engage infants aged 6 months to 3 years. It offers two modes of play: sit & play and stand & walk, with Smart Stages technology that adapts learning content as your child grows.

IMPORTANT SAFETY INFORMATION

- Always supervise children during play.
- Ensure all parts are securely assembled before use.
- Do not use on uneven surfaces or near stairs.
- Keep small parts away from children under 3 years to prevent choking hazards.
- Batteries should be installed and replaced by an adult.

WHAT'S INCLUDED

- 1 Fisher-Price Laugh & Learn Smart Stages Sis Walker unit

SETUP

1. Assembly

Adult assembly is required. Follow the diagrams carefully to connect the handle and wheels to the main body of the walker. Ensure all connections click into place securely.

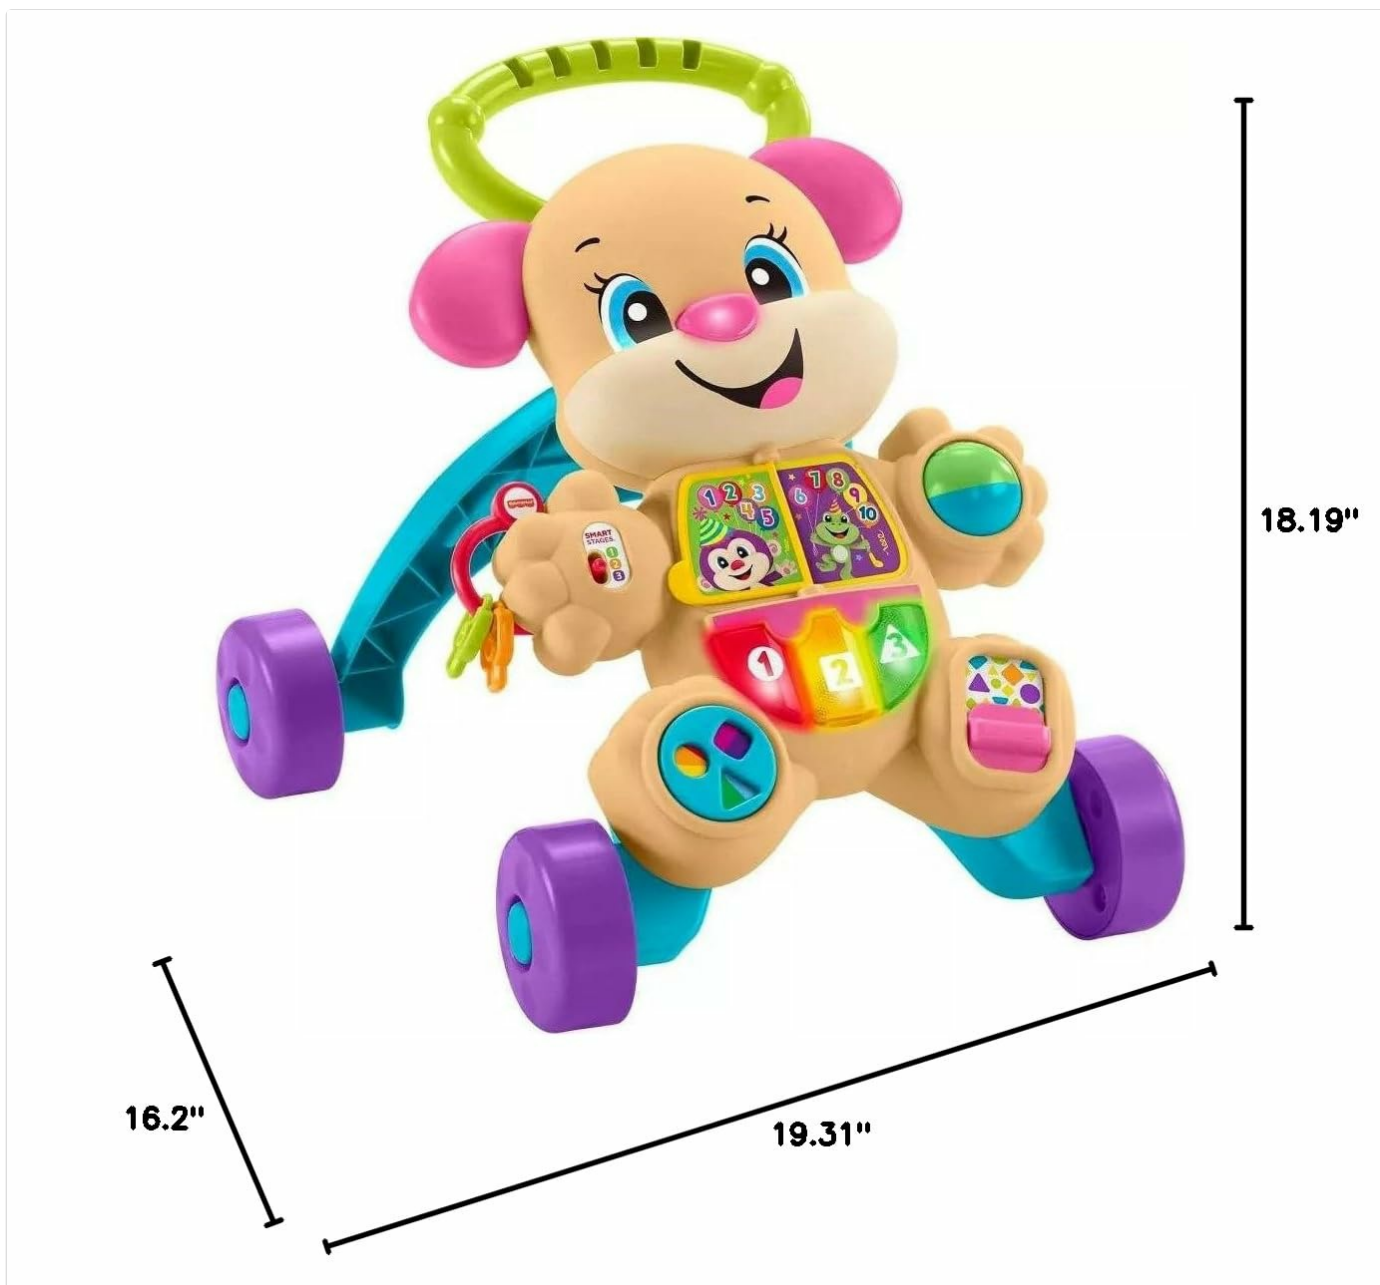


Image: Dimensions of the Sis Walker, useful for assembly and space planning.

2. Battery Installation

1. Locate the battery compartment, typically on the back or underside of the main unit.
2. Using a Phillips head screwdriver, open the battery compartment cover.
3. Insert 2 AA (LR6) alkaline batteries, ensuring correct polarity (+/-).
4. Replace the cover and tighten the screw.

Note: Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Remove exhausted batteries promptly.

OPERATING INSTRUCTIONS

1. Power On/Off and Volume Control

Locate the power switch and volume control on the side or back of the walker's main unit. Slide the switch to turn the unit on or off, and adjust the volume to a comfortable level.

2. Smart Stages Technology

The Sis Walker features Smart Stages technology with three levels of learning content. A switch on the side of the walker allows you to select the appropriate stage for your child's development:

- **Level 1 - Explore (6+ Months):** Introduces first words and sounds to spark curiosity.
- **Level 2 - Encourage (12+ Months):** Prompts baby through questions and simple directions.
- **Level 3 - Pretend (18+ Months):** Engages baby in imaginative play and early role-playing.



Image: Baby interacting with the activity panel, highlighting the educational features.

3. Interactive Activities

The walker includes various hands-on activities:

- **Light-up Piano Keys:** Press the keys to hear music, sounds, and learn numbers and colors.
- **Light-up Nose:** Press Sis's nose for fun sounds and phrases.
- **Roller and Spinner:** Manipulate these elements for sensory engagement.

- **Flip Page:** Turn the pages of the book to learn letters and words.



Image: Baby engaging with the sit-and-play features of the walker.

4. Walking Mode

When your child is ready to take their first steps, the sturdy 4-wheel base and easy-grasp handle provide support. As the walker is pushed, it plays encouraging phrases and music to motivate movement.



Image: Baby using the walker in stand-and-walk mode.

MAINTENANCE

- **Cleaning:** Wipe the walker with a damp cloth and mild soap. Do not immerse in water.
- **Storage:** Store in a cool, dry place away from direct sunlight.
- **Battery Care:** Remove batteries if the toy will not be used for an extended period.

TROUBLESHOOTING

Problem	Solution
No sound or lights	Check battery installation and replace with fresh AA batteries if necessary. Ensure the power switch is in the "On" position.
Intermittent sound or lights	Batteries may be low. Replace with fresh AA batteries. Ensure battery contacts are clean.
Walker does not move smoothly	Check wheels for any obstructions (e.g., carpet fibers, hair). Ensure the walker is used on a flat, clear surface.

SPECIFICATIONS

- **Model Number:** FHY95
- **Product Dimensions:** 16.2"L x 19.31"W x 18.19"H
- **Batteries Required:** 2 AA (LR6) alkaline batteries (not included)
- **Material:** Cotton, Plastic
- **Recommended Age:** 6 months to 3 years

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the official Fisher-Price website or contact their customer service department. You can find more information at the Fisher-Price Brand Store.

PRODUCT VIDEOS

Watch these videos for additional guidance and demonstrations:

No official product videos from the seller are available for embedding in this manual.