

OXO 3113600UK

OXO Steel Leakproof Expanding Wine Stopper Instruction Manual

Brand: OXO | Model: 3113600UK

1. PRODUCT OVERVIEW

The OXO Steel Leakproof Expanding Wine Stopper is designed to preserve the freshness of opened wine bottles. Its unique expanding silicone seal creates an airtight closure, preventing leaks and maintaining wine quality. The flat top design allows for convenient storage in refrigerators, both upright and lying down.



Image: Two OXO Steel Leakproof Expanding Wine Stoppers, illustrating their design.

2. SETUP AND INSTALLATION

1. **Prepare the Bottle:** Ensure the wine bottle opening is clean and free from debris.
2. **Insert the Stopper:** Place the silicone end of the wine stopper into the bottle opening.
3. **Seal the Bottle:** Firmly push down on the stainless steel top of the stopper. The silicone base will expand outward within the bottle neck, creating a leakproof seal.



Image: A hand demonstrating the insertion of the wine stopper into a bottle.

3. OPERATING INSTRUCTIONS

3.1 Sealing

To seal the bottle, simply push down on the stainless steel top. The internal mechanism will cause the silicone stopper to expand, creating a tight, leakproof seal. This action helps to preserve the wine's freshness.



Image: The silicone stopper expanding to seal the bottle.

3.2 Unsealing

To unseal and remove the stopper, pull up on the stainless steel top. The silicone stopper will automatically contract, allowing for easy removal from the bottle.

**Unseals
automatically
when top
is pulled**



Image: The stopper unsealing as the top is pulled up.

3.3 Storage

The flat top design of the stopper allows bottles to be stored upright on refrigerator shelves without obstruction. The leakproof seal also ensures that bottles can be stored lying down without any spillage.



Image: Bottle stored upright with flat-top stopper.



Image: Bottle stored lying down without leakage.

4. CARE AND MAINTENANCE

To ensure the longevity and hygiene of your OXO Steel Leakproof Expanding Wine Stopper, follow these care instructions:

- **Hand Wash Only:** This product is not dishwasher safe. Wash the stopper by hand with warm, soapy water.
- **Rinse Thoroughly:** After washing, rinse the stopper thoroughly to remove all soap residue.
- **Dry Completely:** Allow the stopper to air dry completely before storing to prevent water spots or mildew.
- **Inspect Regularly:** Periodically inspect the silicone seal for any signs of wear or damage. Replace if necessary to maintain optimal sealing performance.

5. TROUBLESHOOTING

- **Stopper is difficult to insert or remove:**
Ensure the stopper is in its contracted state before insertion. If removing, ensure it is fully contracted by pulling up the top. Check for any residue on the bottle neck or stopper that might be causing friction.

- **Wine is leaking or not sealing properly:**

Verify that the stopper is fully pushed down and expanded. The silicone should be flush with the bottle opening. Inspect the silicone for any tears or damage that could compromise the seal. Ensure the bottle opening is clean.

- **Stopper feels loose:**

Confirm that the stopper is fully engaged by pushing down firmly on the stainless steel top until it clicks or feels secure.

6. SPECIFICATIONS

Feature	Detail
Model Number	3113600UK
Color	Silver
Material	Silicone, Stainless Steel
Product Dimensions	2.5"W x 1.5"H (6.3 cm W x 3.8 cm H)
Item Weight	0.705 ounces
Care Instructions	Hand Wash



Image: Product dimensions for the wine stopper.

7. WARRANTY AND SUPPORT

OXO stands by the quality of its products. If you experience any issues with your OXO SteelL Leakproof Expanding Wine Stopper, please contact OXO customer support for assistance, repair, or replacement. For further support or to learn more about OXO products, please visit the official OXO website or contact their customer service department.