

USARMT KR008Y008

USARMT Sceptre KR008Y008 Remote Control

INSTRUCTION MANUAL

INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your new USARMT Sceptre KR008Y008 replacement remote control. This remote is designed to be compatible with a range of Sceptre television models, ensuring seamless control of your entertainment system. Please read this manual thoroughly before use to ensure proper functionality and to maximize your viewing experience.

PRODUCT OVERVIEW

The USARMT Sceptre KR008Y008 remote control is a direct replacement for original Sceptre TV remotes, offering full functionality for compatible models. It is pre-programmed and ready to use with no additional setup required for the listed Sceptre TV models.





Image: Front view of the USARMT Sceptre KR008Y008 remote control, displaying all buttons and their labels.

Button Functions

Familiarize yourself with the functions of each button on your remote control:

Button	Function
Power	Turns the TV on or off.
Source	Selects the input source (e.g., HDMI, AV, Component).

Button	Function
Mute	Mutes or unmutes the TV audio.
CC	Activates or deactivates Closed Captions.
MTS	Selects the Multi-channel Television Sound (MTS) mode.
0-9	Directly enters channel numbers.
- (Dash)	Used for entering sub-channels (e.g., 7-1).
R	Recall button, returns to the previously viewed channel.
Guide	Displays the Electronic Program Guide (EPG).
Info	Displays current program information.
Menu	Accesses the TV's main menu.
Directional Pad (Up/Down/Left/Right)	Navigates through menus and options.
ENTER	Confirms selections in menus.
Exit	Exits the current menu or screen.
Aspect	Changes the screen aspect ratio (e.g., 16:9, 4:3).
Freeze	Freezes the current image on the screen.
Sleep	Sets the TV to turn off automatically after a set period.
VOL + / -	Adjusts the volume level up or down.
CH + / -	Changes channels up or down.
Fav	Accesses favorite channels list.
Add/Del	Adds or deletes channels from the favorite list.
Fav- / Fav+	Navigates through favorite channels.
Picture	Accesses picture settings.
Sound	Accesses sound settings.
TV	Switches to TV mode.
USB	Switches to USB input mode.

SETUP

Battery Installation

1. Open the battery compartment cover on the back of the remote control.
2. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
3. Close the battery compartment cover securely.

The remote control is pre-programmed for compatible Sceptre TV models and should work immediately after battery installation.

OPERATING INSTRUCTIONS

Basic Operation

- **Power On/Off:** Press the **Power** button to turn your Sceptre TV on or off.
- **Volume Control:** Use the **VOL +** and **VOL -** buttons to adjust the sound level.
- **Channel Surfing:** Use the **CH +** and **CH -** buttons to change channels sequentially.
- **Direct Channel Entry:** Use the number buttons **0-9** to directly enter a channel number.

Accessing Menus and Settings

- Press the **Menu** button to open the TV's main menu.
- Use the **Directional Pad** (Up, Down, Left, Right arrows) to navigate through menu options.
- Press the **ENTER** button to select an option or confirm a setting.
- Press the **Exit** button to close the menu and return to normal viewing.

MAINTENANCE

To ensure the longevity and proper functioning of your remote control:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as this can damage internal components.

TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following table:

Problem	Possible Cause	Solution
Remote not working	Dead or incorrectly inserted batteries.	Replace batteries with new ones, ensuring correct polarity (+/-).
Remote not working	Obstruction between remote and TV's IR sensor.	Ensure a clear line of sight to the TV's infrared receiver.
Remote not working	Remote is too far from the TV.	Move closer to the TV. The effective range is typically up to 20 feet.
Some buttons not responding	Dirt or debris under the button.	Gently clean around the unresponsive button.
Remote works intermittently	Low battery power.	Replace batteries.

SPECIFICATIONS

Feature	Detail
Brand	USARMT
Model Number	KR008Y008 (Replacement)
Compatible Devices	Sceptre Televisions (E165BV-HD, E243BV-FHD, E243WV-FHD, E320BV-HD, E320GV-FHD, E325BV-HD, X320BV-HD, X322BV-HD, X405BV-FMD)
Connectivity Technology	Infrared (IR)
Controller Type	Button Control
Special Feature	Ergonomic design
Item Weight	3.2 ounces
Date First Available	August 21, 2017

WARRANTY AND SUPPORT

For any questions, technical support, or warranty inquiries regarding your USARMT Sceptre KR008Y008 remote control, please refer to the seller's contact information or the platform where the product was purchased. Keep your purchase receipt as proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question