

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [kwmobile](#) /

› [kwmobile Digital Wooden Look Alarm Clock Model 40800 User Manual](#)

kwmobile 40800

kwmobile Digital Wooden Look Alarm Clock Model 40800 User Manual

Model: 40800 | Brand: kwmobile

INTRODUCTION

Thank you for choosing the kwmobile Digital Wooden Look Alarm Clock. This manual provides detailed instructions for setting up, operating, and maintaining your new alarm clock. Please read this manual carefully to ensure proper use and to fully utilize all features of the device.

The kwmobile Digital Wooden Look Alarm Clock is designed to display time, temperature, and date with a stylish wood-look finish. It features multiple alarm settings, sound and touch activation for the display, and flexible power options.



Figure 1: kwmobile Digital Wooden Look Alarm Clock with included USB power cable. The clock displays the time and temperature with green LEDs.

PACKAGE CONTENTS

- 1 x kwmobile Digital Wooden Look Alarm Clock
- 1 x USB Power Cable

SETUP

Powering the Device

The alarm clock can be powered in two ways:

1. **USB Power (Recommended for continuous display):** Connect the included USB cable to the DC 5V port on the back of the clock and plug the other end into a USB power adapter (not included) or a powered USB port. When powered via USB, the display remains permanently on.
2. **Battery Power (for backup or power-saving mode):** Insert 3 x AAA batteries (not included) into the battery

compartment on the back of the clock. When operating on batteries, the clock automatically enters power-saving mode to conserve battery life. The display will turn off after approximately 30 seconds.



Figure 2: Rear view of the alarm clock, showing the battery compartment, DC 5V input, and control buttons (SET, UP, DOWN).

Initial Power-On

Once powered, the clock will display the time. If using battery power, the display may turn off after a short period. You can activate the display by touching the clock or making a sound.

OPERATING INSTRUCTIONS

The clock features three control buttons on the back: **SET**, **UP**, and **DOWN**.

Setting Time and Date

1. Press and hold the **SET** button for 3 seconds to enter setting mode. The display will flash.
2. Use the **UP** and **DOWN** buttons to adjust the value.
3. Press **SET** briefly to confirm the current setting and move to the next parameter.
4. The setting sequence is typically: Year → Month → Day → 12/24 Hour Format → Hour → Minute.
5. After setting the minute, press **SET** again to exit time/date setting mode.

Setting Alarms (A1, A2, A3)

The clock supports up to three independent alarms (A1, A2, A3).

1. Press the **SET** button repeatedly until "A1" (or A2, A3) appears on the display.
2. Press and hold the **SET** button for 3 seconds. The alarm hour will flash.
3. Use **UP** and **DOWN** to set the alarm hour, then press **SET**.
4. Use **UP** and **DOWN** to set the alarm minute, then press **SET**.

5. You can then choose alarm activation settings:

- **ON:** Alarm is active every day.
- **--:** Alarm is inactive.
- **E:** Alarm is active only on weekdays (Monday-Friday).

6. Press **SET** to confirm and exit alarm setting mode. Repeat for A2 and A3 if desired.

When an alarm sounds, it will typically last for one minute. To stop the alarm, press any button.

Temperature Display

The clock displays temperature in either Celsius (°C) or Fahrenheit (°F).

1. In normal display mode, press the **DOWN** button to toggle between °C and °F.

Display Modes (dP-1, dP-2)

The clock offers two display modes:

- **dP-1 (Fixed Display):** The display cycles between time, date, and temperature.
- **dP-2 (Time Only Display):** The display shows only the time.

To switch between display modes, press the **UP** button in normal display mode.

Power Saving Mode (oNSd, --Sd)

This mode is primarily active when the clock is battery-powered. In power-saving mode, the display turns off after approximately 30 seconds to conserve energy.

- **oNSd:** Power-saving mode is ON. The display will turn off after 30 seconds of inactivity.
- **--Sd:** Power-saving mode is OFF. The display will remain on (only effective when USB powered).

To activate the display when in power-saving mode, you can either touch the top of the clock or make a sound (e.g., clap your hands).



Figure 3: Activating the display by touching the top surface of the clock.



Figure 4: Activating the display through sound, such as clapping hands.

MAINTENANCE

Cleaning

To clean the clock, gently wipe the surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the finish or internal components.

Battery Replacement

If using batteries, replace all three AAA batteries when the display becomes dim or the clock functions erratically. Ensure correct polarity when inserting new batteries.

Storage

If storing the clock for an extended period, remove the batteries to prevent leakage and potential damage to the device.

TROUBLESHOOTING

- **Display is off or dim:**
 - Check if the clock is in power-saving mode (oNSd). Touch the clock or make a sound to activate the display.
 - If using batteries, they might be low. Replace with fresh AAA batteries.
 - Ensure the USB cable is securely connected and the power source is active if using USB power.
- **Clock not responding to buttons:**
 - Ensure the clock is properly powered.
 - Try removing and re-inserting batteries or unplugging and re-plugging the USB cable to reset the device.
- **Alarm does not sound or stops too quickly:**
 - Verify that the alarm is set to "ON" or "E" (for weekdays) in the alarm settings.
 - Ensure the alarm time is correctly set.
 - The alarm typically sounds for one minute. Pressing any button will stop it.
- **Temperature reading seems inaccurate:**
 - Ensure the clock is not placed near heat sources or in direct sunlight, which can affect temperature readings.
 - Confirm the correct temperature unit (°C or °F) is selected.

SPECIFICATIONS

Brand	kwmobile
Model Number	40800
Material	Wood
Colour	Brown (with Green LEDs)
Product Dimensions	15 x 7 x 4.2 cm
Weight	254.01 g
Power Supply	DC 5V/300mA via USB cable, or 3x AAA batteries (backup/power-saving mode)
Display Type	Digital LED
Special Features	Alarm, Illuminated Display, Temperature Display, Calendar Display, Sound/Touch Activation, Power Saving Mode

WARRANTY AND SUPPORT

kwmobile products are designed for reliability and performance. For warranty information or technical support, please refer to the official kwmobile website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

For further assistance, please visit the [kwmobile Store on Amazon](#).

