

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [SPC](#) /

> [SPC 3608B Analog Telephone User Manual](#)

## SPC 3608B

# SPC 3608B Analog Telephone User Manual

Model: 3608B

## 1. INTRODUCTION

---

Thank you for choosing the SPC 3608B Analog Telephone. This manual provides comprehensive instructions for setting up, operating, and maintaining your new telephone. Please read this manual carefully before use and retain it for future reference.

## 2. PACKAGE CONTENTS

---

Before proceeding with the installation, please verify that all items are present in the package:

- SPC 3608B Analog Telephone Unit
- Handset
- Coiled Handset Cord
- Telephone Line Cord
- User Manual (this document)

## 3. PRODUCT OVERVIEW

---

Familiarize yourself with the components of your SPC 3608B telephone.



Image: The SPC 3608B analog telephone in white, featuring a blue backlit LCD screen displaying time and caller ID, a numeric keypad, and function buttons. The handset is cradled on the left side of the base unit.

## Key Components:

- **LCD Display:** Shows caller ID, time, date, and menu options.
- **Numeric Keypad:** For dialing numbers.
- **Function Buttons:** (e.g., Redial, Flash, Mute, Speakerphone, Menu, Up/Down arrows).
- **Handset:** For private conversations.
- **Speakerphone:** For hands-free communication.

## 4. SETUP

---

### 4.1 Connecting the Telephone

1. **Connect the Handset:** Plug one end of the coiled handset cord into the handset and the other end into the handset jack on the side of the telephone base unit.
2. **Connect the Telephone Line:** Plug one end of the telephone line cord into the LINE jack on the back of the telephone base unit and the other end into your wall telephone jack.
3. **Power Source (if applicable):** The SPC 3608B is battery-powered for certain functions (e.g., display backlight, caller ID memory). Insert the required batteries (not specified in product data, assume standard AAA or AA) into the battery compartment, usually located on the underside of the unit, observing polarity.

### 4.2 Initial Settings

Upon first use or after battery replacement, you may need to set the date and time. Refer to the "Operating Instructions" section for details on navigating the menu.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Making a Call

1. Lift the handset or press the **Speakerphone** button.
2. Dial the desired telephone number using the numeric keypad.
3. To end the call, replace the handset or press the **Speakerphone** button again.

## 5.2 Answering a Call

When the telephone rings:

- Lift the handset, or
- Press the **Speakerphone** button to answer hands-free.

## 5.3 Caller ID

When a call comes in, the caller's number (and name, if available and subscribed to the service) will be displayed on the LCD screen. You can scroll through recent calls using the **Up/Down** arrow buttons.

## 5.4 Redial Function

To redial the last number called, lift the handset or press **Speakerphone**, then press the **Redial** button.

## 5.5 Volume Adjustment

During a call, use the **Up/Down** arrow buttons to adjust the handset or speakerphone volume.

## 6. MAINTENANCE

- **Cleaning:** Wipe the telephone with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Location:** Place the telephone on a stable surface, away from direct sunlight, heat sources, and moisture.
- **Battery Replacement:** If the display becomes dim or functions are impaired, replace the batteries in the battery compartment.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No dial tone.	Telephone line cord is loose or disconnected.	Ensure the telephone line cord is securely plugged into both the telephone and the wall jack.
Caller ID not displayed.	Caller ID service not subscribed or batteries are low.	Contact your telephone service provider to ensure Caller ID service is active. Replace batteries if necessary.
Display is dim or blank.	Low or depleted batteries.	Replace the batteries in the telephone unit.
Cannot hear caller / Caller cannot hear me.	Volume too low or handset/speakerphone connection issue.	Adjust volume using arrow buttons. Check handset cord connection.

## 8. SPECIFICATIONS

- **Brand:** SPC
- **Model:** 3608B
- **Type:** Corded Analog Telephone
- **Color:** White
- **Caller ID:** Yes

- **Speakerphone:** Yes
- **Power Source:** Battery operated (for display/memory functions)
- **Dimensions:** 16.51 x 19.99 x 10.01 cm (approx. 6.5 x 7.87 x 3.94 inches)
- **Weight:** 607.81 g (approx. 1.34 lbs)
- **Model Year:** 2014

## 9. WARRANTY AND SUPPORT

---

For warranty information and technical support, please refer to the documentation provided with your purchase or visit the official SPC website. Keep your proof of purchase for warranty claims.

**SPC Website:** [www.spc.es](http://www.spc.es)

