

LG T7269NDDLZ

LG 6.2 kg Fully-Automatic Top Loading Washing Machine User Manual

Model: T7269NDDLZ

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your LG 6.2 kg Fully-Automatic Top Loading Washing Machine, model T7269NDDLZ. Please read it thoroughly before using the appliance and keep it for future reference. This washing machine features a 6.2 kg capacity, a Smart Inverter Motor for energy efficiency, and Turbo Drum technology for effective washing.



Image 1.1: Front-side view of the LG 6.2 kg Fully-Automatic Top Loading Washing Machine (Model T7269NDDLZ).

2. SAFETY INFORMATION

Always follow basic safety precautions to reduce the risk of fire, electric shock, or injury when using this appliance.

- Ensure the washing machine is properly grounded.
- Do not allow children to play on or in the appliance.
- Keep flammable materials away from the machine.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not wash items that have been soiled with gasoline, dry-cleaning solvents, or other flammable or explosive substances.
- Do not reach into the washer if the tub is moving.

3. UNPACKING AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. The package includes the Washing Machine unit, a Drainage Pipe, a Water Inlet Pipe, and a Warranty Card. Inspect the machine for any damage during transit.

3.2 Location Requirements

- Place the washing machine on a firm, level surface.
- Ensure adequate clearance around the machine for ventilation and maintenance.
- Avoid direct sunlight or exposure to freezing temperatures.

3.3 Water Supply Connection

Connect the provided water inlet pipe to the water tap and the inlet valve on the back of the washing machine. Ensure connections are tight to prevent leaks.

3.4 Drainage Connection

Attach the drainage pipe securely. Ensure the drain hose is not kinked or blocked and is positioned to allow proper water drainage.



Image 3.1: Rear view of the washing machine, illustrating water inlet and drainage pipe connections.

3.5 Power Connection

Plug the power cord into a grounded electrical outlet. The machine operates on 230 Volts.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview



Image 4.1: Close-up of the control panel, showing buttons for Water, Wash, Rinse, Spin, Air Dry, and Program selection. The control panel features buttons for various functions and program selection. Familiarize yourself with the layout:

- **POWER (AUTO OFF):** Turns the machine on or off.
- **START/PAUSE:** Starts or pauses the selected wash cycle.
- **PROGRAM:** Selects the desired wash program (e.g., Normal, Heavy Duty).

- **WATER:** Adjusts water level.
- **WASH:** Sets wash time.
- **RINSE:** Sets rinse cycles.
- **SPIN:** Sets spin time.
- **AIR DRY:** Activates the air dry function.

4.2 Loading Laundry

Open the lid and load clothes loosely into the tub. Do not overload the machine; ensure there is enough space for clothes to move freely during washing. The maximum capacity is 6.2 kg.



Image 4.2: Top view of the washing machine with the lid open, revealing the stainless steel drum.

4.3 Adding Detergent and Softener

Add the appropriate amount of detergent to the detergent dispenser. If using fabric softener, add it to the designated softener dispenser. The machine features an automatic detergent dispenser.

4.4 Starting a Wash Cycle

1. Press the **POWER** button to turn on the machine.
2. Select the desired wash program using the **PROGRAM** button.
3. Adjust water level, wash, rinse, and spin times if necessary.
4. Press the **START/PAUSE** button to begin the cycle.

5. WASHING PROGRAMS

The LG T7269NDDLZ offers several wash programs to suit different fabric types and soil levels:

- **Normal:** For everyday cottons and mixed fabrics.
- **Gentle (Wool):** For woolens and other delicate items.
- **Aqua Reserve:** A water-saving option.
- **Quick Wash:** For lightly soiled clothes that need a fast wash.
- **Favorite:** Allows saving a custom wash setting.
- **Strong (Jeans):** For sturdy fabrics like jeans.
- **Tub Clean:** For cleaning the washing machine tub.

Refer to the control panel for specific program indicators and options.

6. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

6.1 Cleaning the Tub

Use the **Tub Clean** program regularly to prevent mold and mildew buildup. Add a washing machine cleaner or a cup of white vinegar to the empty tub before starting the cycle.

6.2 Cleaning the Lint Filter

Locate and clean the lint filter periodically. Remove any accumulated lint to ensure efficient water drainage and prevent lint transfer to clothes.

6.3 Exterior Cleaning

Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.

7. TROUBLESHOOTING

If you encounter issues with your washing machine, refer to the following common problems and solutions. The machine also features **Smart Diagnosis** for advanced troubleshooting.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Lid not closed properly; Power outage.	Check power connection; Ensure lid is fully closed; Check household circuit breaker.
No water supply	Water tap off; Water inlet hose kinked or blocked.	Open water tap; Straighten hose; Clean inlet filter.
Machine vibrates excessively	Machine not level; Laundry unevenly distributed.	Adjust leveling feet; Redistribute laundry evenly in the tub.
Water not draining	Drain hose kinked or blocked; Drain pump filter clogged.	Straighten drain hose; Clean drain pump filter.

For more complex issues, utilize the **Smart Diagnosis** feature or contact customer support.

8. SPECIFICATIONS

Brand	LG
Model Name	T7269NDDLZ
Type	Fully-Automatic Top Loading
Capacity	6.2 Kilograms
Special Features	Smart Inverter Motor, Turbo Drum, Smart Diagnosis, 3 Smart Motions, 36% Energy Savings
Drum Material	Stainless Steel
Voltage	230 Volts
Item Weight	31000 Grams
Color	Blue and White (Product images show white/grey)
Included Components	Washing Machine, Drainage Pipe, Water Inlet Pipe, Warranty Card

9. WARRANTY AND SUPPORT

9.1 Warranty Information

Your LG T7269NDDLZ washing machine comes with a **2-year warranty on the product** and a **10-year warranty on the motor** from the date of purchase. Please retain your purchase receipt and warranty card for any warranty claims.

9.2 Customer Support

For technical assistance, service requests, or warranty inquiries, please contact LG customer support. Refer to the warranty card or LG's official website for the most current contact information.



Image 9.1: Side view of the LG T7269NDDLZ washing machine.

