

[Manuals.plus](#) /

› [EVACH](#) /

› EVACH Active Stylus Digital Pen User Manual

EVACH K825

Active Stylus Digital Pen User Manual

Brand: EVACH | Model: K825

1. PRODUCT OVERVIEW

The EVACH Active Stylus Digital Pen is designed for precise writing, drawing, and navigation on various touchscreen devices. It features a 1.5mm fine tip for accuracy and a durable anodized aluminum body. The pen is lightweight and offers comfortable control, making it suitable for artists, journalists, teachers, and students.



Figure 1.1: EVACH Active Stylus Digital Pen

Key Features:


- **Fine Tip Accuracy:** 1.5mm tip for pinpoint precision in writing and drawing.
- **Durable Design:** Anodized aluminum body for durability and a stylish appearance.
- **Magnetic Cap:** Protects the charging port and provides an alternative normal tip when the active stylus is out of power.
- **Broad Compatibility:** Works with most touchscreen devices, including iPads, iPhones, Samsung tablets, and other capacitive devices. No Bluetooth connection required.
- **Long Battery Life:** Provides up to 8 hours of active use on a full charge (approx. 60 minutes charging time).
- **Smart Saver:** Automatic shutdown after 30 minutes of inactivity to conserve battery.
- **2-in-1 Design:** Features both a 1.5mm fine tip and a 7.0mm fabric tip for versatile use.

2-in-1 Design



Φ7,0mm Fabric Tip

Smooth Drawing without
Fingerprints and Smudges.
Available anytime without Power.

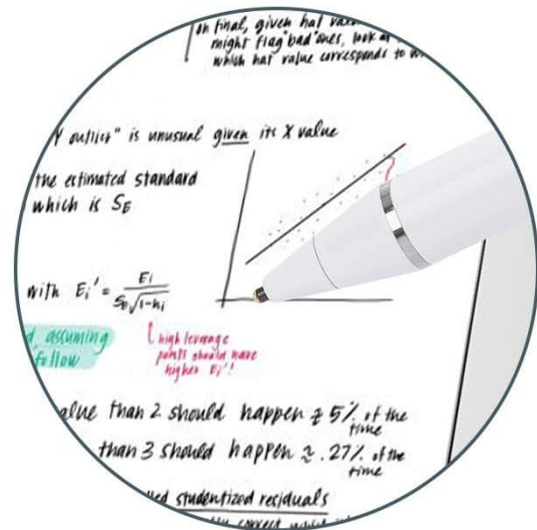

Φ1.5mm Fine Tip

Precise Writing Control
by Good Power Signal.

Figure 1.2: 2-in-1 Design of the Stylus

2. SETUP AND CHARGING

2.1 Initial Charging

Before first use, it is recommended to fully charge the stylus. The stylus has a built-in 140mAh polymer battery.

1. Access the micro USB charging port by removing the magnetic cap from the top of the stylus.
2. Plug the micro USB end of the provided charging cable into the stylus.
3. Connect the other end of the USB cable to a 5V/0.2A USB power source (e.g., computer USB port, wall adapter).
4. The LED indicator light will turn **RED** during charging.
5. Once fully charged (approximately 60-80 minutes), the LED indicator light will turn **GREEN**.

Important: Do not use a fast charger adapter, as high current may damage the internal chip.

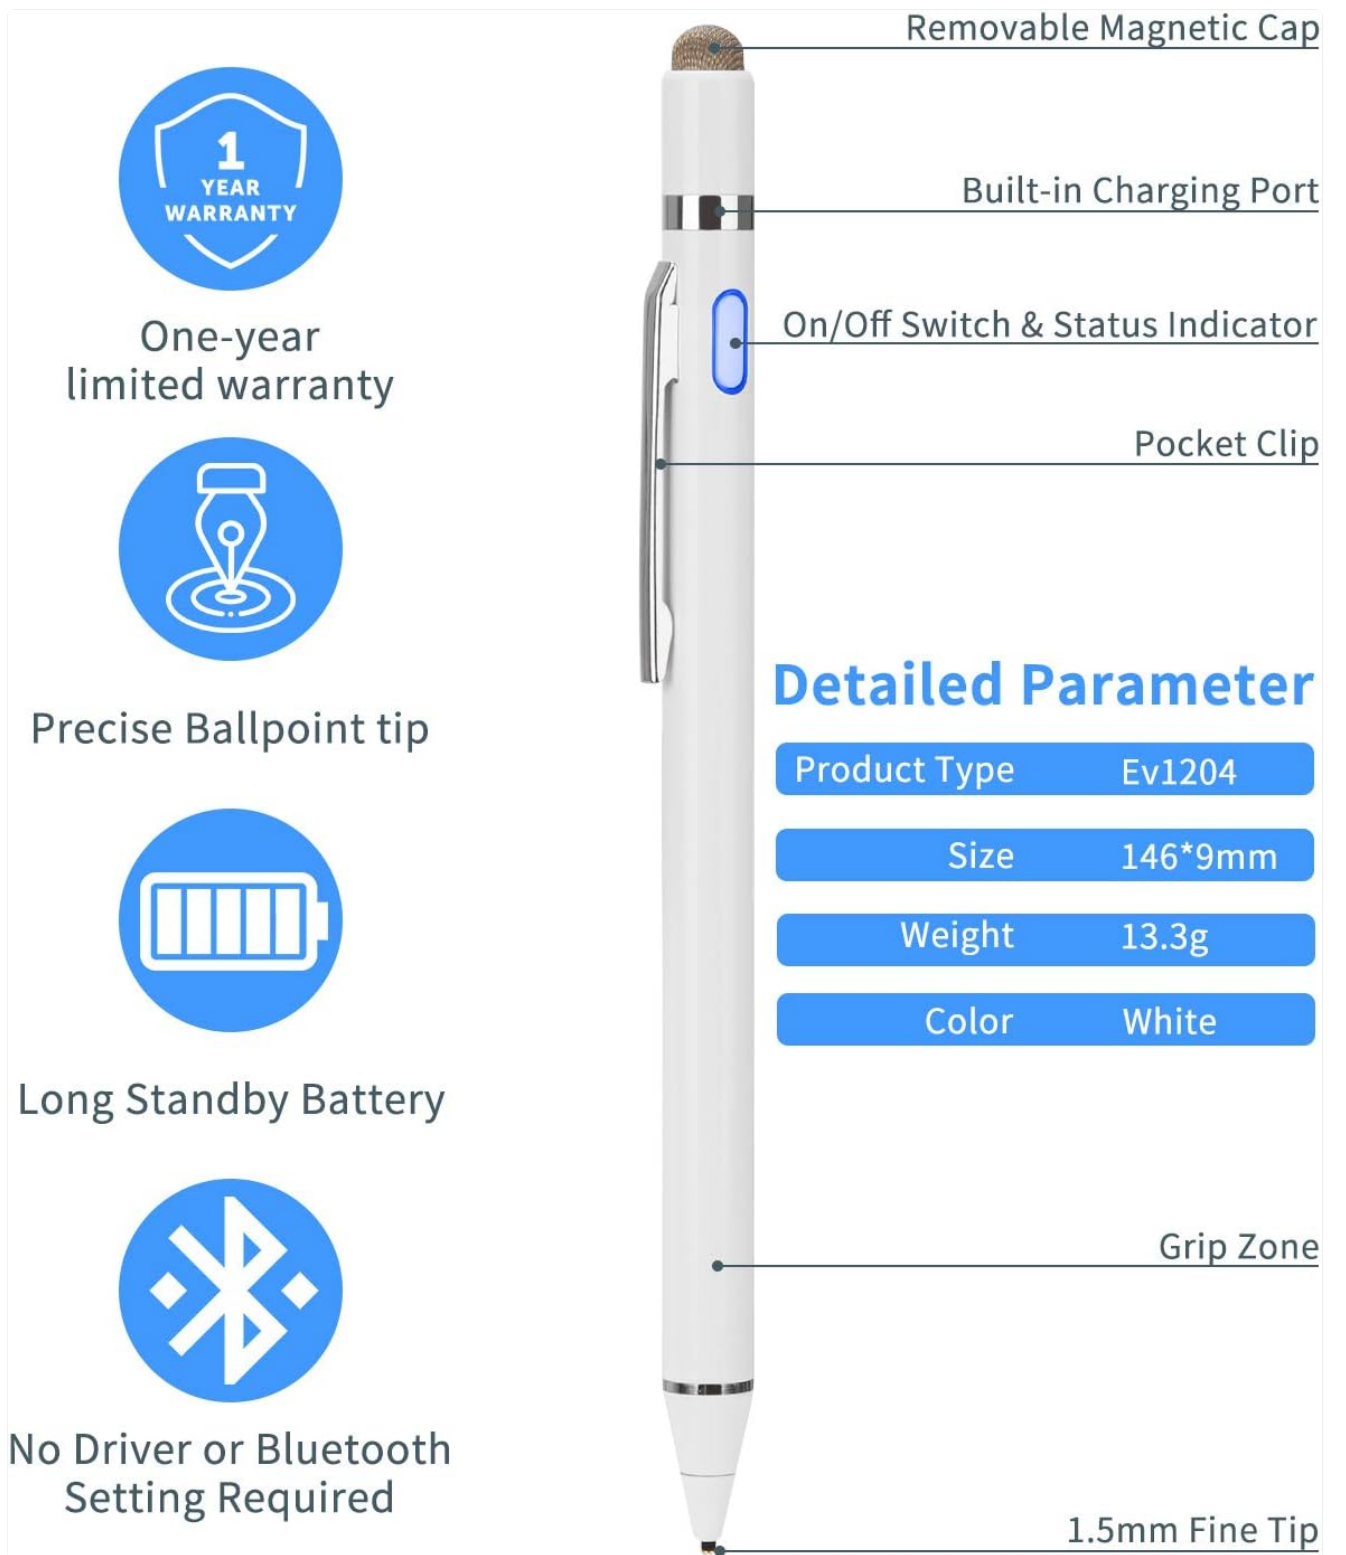 


Figure 2.1: Stylus Components and Charging Port Location

3. OPERATING INSTRUCTIONS

3.1 Basic Operation

1. To power on the stylus, press the power button located on the side of the pen. The LED indicator will illuminate **BLUE**.
2. To power off the stylus, press the power button again until the blue LED light turns off.
3. The stylus does not require Bluetooth pairing or cable connection with your device. Simply turn it on and begin using it.

4. When using the stylus, write and draw softly. Excessive pressure may cause damage to the tip or screen.
5. For the best writing experience, hold the stylus in the grip zone with a slight inclination angle to the screen.

Enjoy Amazing Writing & Experience On Multiple Devices

Compatible with any capacitive devices

Works for any capacitive device and
perfect for note-taking or drawing



Figure 3.1: Stylus Compatibility Across Devices

3.2 Compatibility and Usage Tips

The EVACH Active Stylus is compatible with most capacitive touchscreen devices. This includes a wide range of iPads, iPhones, Samsung tablets, and other Android/Windows devices.

- **Recommended Applications (iOS):** GoodNotes, UPAD3, Notesshelf, Notes Plus, Notability (for writing); ArtRage, Procreate, Sketches, Paper, SketchBook, ArtStudio, Zen Brush (for drawing).
- **Recommended Applications (Android):** Meta Moji Note, Notepad+, Bamboo Paper (for writing); Autodesk SketchBook, ArtFlow, Painter, Design, Zen Brush (for drawing).
- **Screen Protectors:** Using a screen protector will not affect the performance of the stylus.

Special Instructions for iPad/iPad Pro (Newer iOS Systems):

If you are using an iPad or iPad Pro with a newer iOS system, you may need to adjust a setting to ensure proper functionality:

1. Go to your device's **Settings**.
2. Select the specific application you intend to use for drawing or writing (e.g., Notes).
3. Locate the option related to Apple Pencil (e.g., "Only Draw with Apple Pencil") and **turn this function OFF**.
4. You can now use the EVACH stylus as intended.



Figure 3.2: Stylus Dimensions and Elastic Fine Tip

4. CARE AND MAINTENANCE

- To ensure optimal performance and longevity, handle your stylus with care. Avoid dropping it, exposing it to fire, or submerging it in water.
- Always use the stylus on capacitive devices' screens only. Do not use it for other purposes.
- The stylus will automatically shut down after 30 minutes of inactivity to save battery life.
- If the battery power is low, the LED light will turn off automatically, indicating it's time to recharge.
- When disposing of the stylus, please follow local laws and regulations for electronic waste due to the built-in polymer battery. Do not litter.

5. TROUBLESHOOTING

If you encounter any issues with your EVACH Active Stylus, please refer to the following common solutions:

- **Stylus not responding:**
 - Ensure the stylus is powered on (blue LED indicator).
 - Check battery level and recharge if necessary.
 - Verify that the stylus tip is clean and free from debris.
- **Inaccurate or inconsistent writing/drawing:**
 - Ensure you are holding the stylus with a slight inclination angle to the screen.
 - For iPad/iPad Pro users, ensure the "Only Draw with Apple Pencil" setting is turned OFF in your device's application settings.
 - If using a screen protector, ensure it is properly applied and not interfering with touch sensitivity.
- **Stylus not connecting (no Bluetooth):**
 - The EVACH Active Stylus does not require Bluetooth or any other wireless connection. It operates by simply being powered on and touching the screen. If you are attempting to pair it, this is not necessary and will not work.
- **Stylus not working with specific Android devices (e.g., Xiaomi Redmi Pad, Android Tab A9 Plus):**
 - While compatible with most capacitive touchscreens, some specific device models or their software configurations may have limitations. Ensure your device's touchscreen is fully functional.
 - Test the stylus on another compatible device to determine if the issue is with the stylus or the specific device.

If the problem persists after trying these steps, please refer to the "Warranty and Support" section for further assistance.

6. SPECIFICATIONS

Feature	Detail
Product Model Number	K825
Product Dimensions (L x W x H)	7.09 x 1.57 x 0.79 inches (180 x 40 x 20 mm)
Item Weight	0.494 ounces (14 grams)
Material	Anodized Aluminum
Color	White
Tip Size	1.5mm Fine Tip, 7.0mm Fabric Tip
Battery Type	1 Lithium Metal battery (included)
Battery Capacity	140mAh
Charging Input	5V/0.2A (Micro USB)

Feature	Detail
Charging Time	Approx. 60-80 minutes
Active Use Time	Up to 8 hours
Standby Time	Up to 30 days (or 365 days as per some specs)
Auto Shutdown	After 30 minutes of inactivity
Compatible Devices	Most capacitive touchscreen devices (Tablets, Smartphones)

7. WARRANTY AND SUPPORT

7.1 Limited Warranty

The EVACH Active Stylus Digital Pen comes with a **One-Year Limited Warranty** from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or improper maintenance.

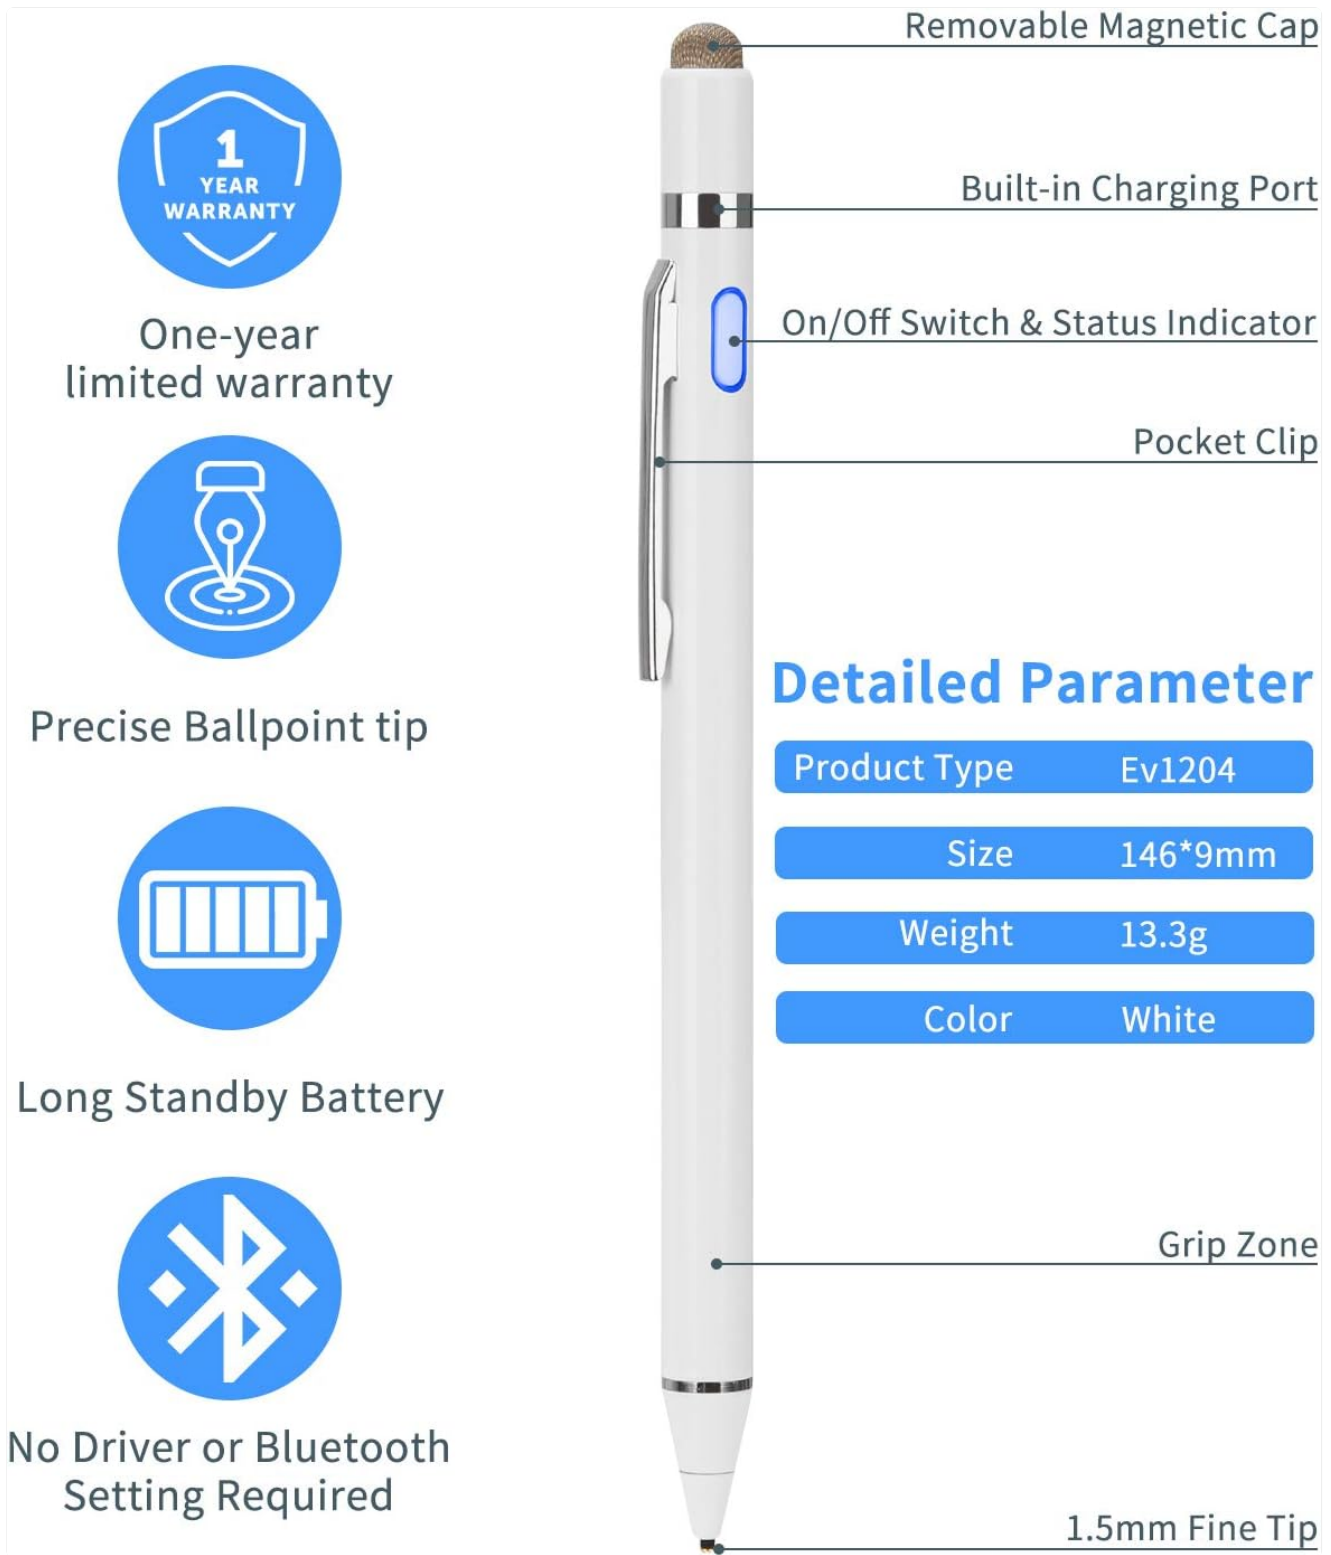 


Figure 7.1: Warranty Information

7.2 After Sales Service

For any questions, concerns, or issues regarding your product or service, please contact EVACH customer support. Our team is dedicated to providing excellent customer service and will assist you with troubleshooting and resolving any problems you may encounter.

Please refer to the contact information provided with your product packaging or visit the official EVACH website for support details.

