

[Manuals.plus](#) /

› [ZdalaMit](#) /

› ZdalaMit AA59-00443A Replacement Remote Control User Manual for Samsung LED LCD TVs

ZdalaMit AA59-00443A

ZdalaMit AA59-00443A Replacement Remote Control User Manual

Model: AA59-00443A

Brand: ZdalaMit

INTRODUCTION

This manual provides instructions for the ZdalaMit AA59-00443A replacement remote control, designed for various Samsung LED LCD TV models. This remote is pre-programmed and requires no additional setup beyond battery installation. Please read this manual thoroughly before use to ensure proper operation and longevity of your device.

SAFETY INFORMATION

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.
- Dispose of used batteries properly according to local regulations.
- Keep the remote control away from water, direct sunlight, and high temperatures.

PACKAGE CONTENTS

The package includes:

- 1 x ZdalaMit AA59-00443A Replacement Remote Control

Note: Batteries and a printed user manual are not included in the package.

SETUP: BATTERY INSTALLATION

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards and remove it.
3. Insert two (2) AAA 1.5V alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover by sliding it upwards until it clicks into place.



Figure 1: Battery installation for the remote control. Insert two AAA batteries, matching the polarity markings.

The remote control is now ready for use. No programming or pairing is required.

OPERATING INSTRUCTIONS

This replacement remote control functions identically to the original Samsung remote control it replaces. Simply point the remote at your Samsung LED LCD TV and press the desired function button.

Compatible TV Models:

- UN40D6300SFXZA
- UN55D6300SFXZA
- UN46D6300SFXZA
- UN32D6000SFXZA
- UN46D6050TFXZA
- UN46D6000SFXZA

- UN55D6050TFXZA
- UN40D6050TFXZA
- UN55D6000SFXZA
- UN40D6000SFXZA
- UN32D6000
- UN40D6000
- UN46D6000
- UN55D6000
- UN46D6050
- UN55D6050
- UN40D6050
- UN46D6050TF

If your TV model is listed above, the remote should work without any additional setup.

TROUBLESHOOTING

- **Remote not responding:** Ensure batteries are inserted correctly with the proper polarity. Replace old batteries with new AAA alkaline batteries.
- **Weak signal:** Ensure there are no obstructions between the remote control and the TV's infrared receiver. The maximum effective range is 33 feet (10 meters).
- **Specific buttons not working:** Check for any physical damage or debris under the buttons. If the issue persists, the remote may be faulty and require replacement.
- **TV not listed as compatible:** This remote is specifically designed for the listed Samsung TV models. Compatibility with other models is not guaranteed.

SPECIFICATIONS

Feature	Detail
Brand	ZdalaMit
Model Name	AA59-00443A-RH
Special Feature	Pre Programmed
Color	Black
Compatible Devices	Television
Connectivity Technology	Infrared
Maximum Range	33 Feet (10 meters)
Power Supply	2 x AAA 1.5V Alkaline Batteries (not included)
Item Weight	2 Ounces (approx. 56.7 grams)
Dimensions (L x W x H)	8.54" x 1.99" x 0.55" (approx. 21.7cm x 5.05cm x 1.4cm)

MAINTENANCE

- Clean the remote control regularly with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- Avoid exposing the remote to extreme temperatures, humidity, or direct sunlight.
- Do not drop the remote control or subject it to strong impacts.
- If the remote is not used for an extended period, remove the batteries to prevent leakage and corrosion.

WARRANTY AND SUPPORT

This ZdalaMit remote control comes with a 1-year warranty from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or improper battery installation.

For warranty claims or technical support, please contact your retailer or the ZdalaMit customer service. Refer to your purchase documentation for specific contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question