

Rival 3205

Rival Crock-Ette Model 3205 1 Quart Slow Cooker Instruction Manual

Your guide to safe and efficient use

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before operating this appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or heating unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

The Rival Crock-Ette Model 3205 is a 1-quart slow cooker designed for convenient meal preparation. It features a durable stoneware pot and a simple control knob for ease of use.



This image displays the Rival Crock-Ette Model 3205 1 Quart Slow Cooker within its original packaging. The box highlights the 'Rival Crock-Ette 1 Quart Slow Cooker' branding, 'Model 3205', and a 'Made in the USA' emblem. The slow cooker itself features a white ceramic pot with a blue Delft-style floral pattern and a blue rim, containing what appears to be a fruit dish. The packaging also lists features such as suitability for 'singles, couples, entertaining' and mentions 'heat surrounds stoneware'.

SETUP

1. **Unpacking:** Carefully remove the slow cooker and all its components from the packaging. Retain packaging for future storage or transport if needed.
2. **Initial Cleaning:** Before first use, wash the stoneware pot and lid in warm, soapy water. Rinse thoroughly and dry completely. The stoneware pot is dishwasher safe. Wipe the exterior of the heating unit with a damp cloth. Do not immerse the heating unit in water.
3. **Placement:** Place the slow cooker on a flat, stable, heat-resistant surface, away from walls or cabinets to allow for proper ventilation. Ensure the power cord is not dangling where it can be pulled or tripped over.

OPERATING INSTRUCTIONS

- 1. Prepare Ingredients:** Prepare your recipe ingredients as directed.
- 2. Add Ingredients:** Place all ingredients into the stoneware pot. The capacity of this model is 1 quart. Do not overfill; leave at least one inch of space from the rim.
- 3. Cover:** Place the lid securely on the stoneware pot.
- 4. Connect Power:** Plug the slow cooker into a standard electrical outlet.
- 5. Select Setting:** Turn the control knob to your desired cooking setting (e.g., LOW, HIGH, WARM, if available on your model). This model features a knob control method.
- 6. Cook:** Allow the food to cook for the recommended time. Avoid lifting the lid frequently, as this releases heat and can extend cooking time.
- 7. Serve:** Once cooking is complete, turn the control knob to 'OFF' and unplug the appliance. Carefully remove the lid and serve.

MAINTENANCE AND CLEANING

- 1. Unplug and Cool:** Always unplug the slow cooker from the outlet and allow it to cool completely before cleaning.
- 2. Stoneware Pot and Lid:** The stoneware pot and lid are dishwasher safe. Alternatively, they can be washed by hand in warm, soapy water. For stubborn food residue, soak the pot in warm water before cleaning. Avoid using abrasive cleaners or scouring pads that could scratch the surface.
- 3. Heating Unit:** Wipe the exterior of the heating unit with a soft, damp cloth. Do not use abrasive cleaners. Never immerse the heating unit in water or any other liquid.
- 4. Storage:** Ensure all parts are clean and dry before storing. Store the slow cooker in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Slow cooker does not turn on.	Not plugged in; power outlet malfunction; control knob not set.	Ensure unit is securely plugged into a working outlet. Check if the control knob is set to an 'ON' position.
Food not cooking properly or taking too long.	Lid not sealed properly; too much liquid; frequent lid removal.	Ensure lid is seated correctly. Reduce liquid if recipe allows. Avoid lifting the lid during cooking.
Exterior of unit is hot.	Normal operation.	This is normal. Always use oven mitts or handles when moving the unit. Do not touch hot surfaces.

SPECIFICATIONS

Brand: Rival

Model Number: 3205

Capacity: 1 Quart

Shape: Round

Control Method: Touch (Knob)

Dishwasher Safe Parts: Stoneware Pot, Lid

UPC: 073056004155

WARRANTY INFORMATION

This product is typically covered by a limited manufacturer's warranty. Please refer to the warranty card included with your original product packaging for specific terms, conditions, and duration of coverage. Keep your purchase receipt as proof of purchase for any warranty claims.

CUSTOMER SUPPORT

For further assistance, questions, or to inquire about replacement parts, please refer to the contact information provided in your product's original documentation or visit the official Rival brand website. When contacting support, please have your model number (3205) and purchase date available.