

[Manuals.plus](#) /

› [Corbero](#) /

› CORBERO CCH450MX Multifunction Oven User Manual

Corbero CCH450MX

CORBERO CCH450MX Multifunction Oven

USER MANUAL

Introduction

Welcome to the user manual for your new CORBERO CCH450MX Multifunction Oven. This guide provides essential information for the safe and efficient operation, installation, maintenance, and troubleshooting of your appliance. Please read this manual thoroughly before using the oven and keep it for future reference.

Your CORBERO oven is designed to offer versatility and convenience in your kitchen, featuring multiple cooking functions and a user-friendly interface. Adhering to the instructions in this manual will ensure optimal performance and longevity of your appliance.

Product Overview



This image displays the Corbero CCH450MX Multifunction Oven. It features a stainless steel control panel at the top with three rotary knobs for function, temperature, and timer settings. The main body of the oven is black, with a large double-glazed glass door providing visibility into the oven cavity, which contains a wire rack. A stainless steel handle runs horizontally across the top of the oven door.

The CORBERO CCH450MX is a built-in multifunction oven designed for modern kitchens.

Key Features:

- **Multifunction Cooking:** Offers 8 distinct cooking programs for diverse culinary needs.
- **Tangential Fan:** Ensures even heat distribution and efficient cooling of the oven's exterior.
- **Oven Light:** Provides clear visibility of food during cooking.
- **Easy-Clean Enamel:** Interior coating designed for effortless cleaning.
- **Generous Capacity:** 58 liters net usable volume.
- **Double-Glazed Door:** Enhances insulation and keeps the exterior cooler.
- **Safety Features:** Includes electronic lock and child safety lock.
- **Auto-Defrost System:** Convenient defrosting function.

Safety Instructions

Always observe the following safety precautions to prevent personal injury or damage to the appliance.

- **Electrical Safety:** Ensure the oven is properly grounded. Do not use extension cords. Disconnect power before any maintenance or cleaning.
- **Heat Safety:** The oven and its accessible parts become hot during use. Use oven mitts when handling hot items. Keep children away from the appliance.
- **Child Safety:** Activate the child safety lock to prevent accidental operation. Never allow children to play with or near the oven.
- **Cleaning:** Always allow the oven to cool down before cleaning. Use only recommended cleaning agents.
- **Ventilation:** Ensure proper ventilation around the oven as per installation instructions.
- **General Use:** Do not store flammable materials in or near the oven. Do not use the oven for space heating.

Installation and Setup

Proper installation is crucial for the safe and efficient operation of your oven. It is recommended that installation be performed by a qualified technician.

Pre-Installation Checks:

- Verify that the electrical supply matches the specifications on the oven's rating plate.
- Ensure the cabinet opening dimensions are suitable for a built-in wall oven.
- Check for adequate ventilation space around the oven.

Mounting the Oven:

1. Carefully slide the oven into the prepared cabinet opening.
2. Secure the oven to the cabinet using the provided screws through the designated mounting holes.

Electrical Connection:

- Connect the oven to a dedicated, properly grounded electrical circuit.
- Ensure all connections are secure and comply with local electrical codes.

Initial Cleaning:

Before first use, wipe the interior of the oven with a damp cloth and mild detergent. Run the oven empty at a high temperature (e.g., 200°C) for approximately 30 minutes to burn off any manufacturing residues. Ensure the kitchen is well-ventilated during this process.

Operating Instructions

Familiarize yourself with the control panel and functions of your CORBERO CCH450MX oven.

Control Panel:

The oven features three rotary knobs:

- **Left Knob:** Function Selector (to choose one of the 8 cooking programs).
- **Middle Knob:** Temperature Control (to set the desired cooking temperature).
- **Right Knob:** Timer/Clock (if applicable, for setting cooking duration or kitchen timer).

Basic Operation:

1. **Turning On:** Rotate the Function Selector knob to the desired cooking program.
2. **Setting Temperature:** Rotate the Temperature Control knob to the required temperature.
3. **Setting Timer (if available):** Use the Timer/Clock knob to set the cooking duration. The oven will switch off automatically once the time expires.
4. **Oven Light:** The oven light typically activates when a function is selected or can be turned on independently via a specific setting on the function knob.
5. **Child Safety Lock:** Refer to the specific instructions for activating and deactivating the electronic child lock, usually a combination of button presses or a specific knob position.
6. **Auto-Defrost System:** Select the defrost function from the Function Selector knob. This uses the tangential fan to circulate air at room temperature, gently defrosting food.

Cooking Programs (Examples):

Your oven offers 8 programs. Common programs include:

- Conventional Heating (Top and Bottom Heat)
- Fan-Assisted Cooking
- Grill
- Defrost
- Bottom Heat Only
- Pizza Function (if applicable)

Consult the symbols next to the Function Selector knob for detailed descriptions of each program.

Cleaning and Maintenance

Regular cleaning and maintenance will ensure your oven remains in excellent condition and operates efficiently.

Daily Cleaning:

- Wipe down the interior and exterior surfaces with a soft cloth and mild detergent after each use, once the oven has cooled.
- The **easy-clean enamel** interior allows for quick removal of spills and splatters.

Deep Cleaning:

- For stubborn stains, use a non-abrasive oven cleaner specifically designed for enamel surfaces. Follow the product instructions carefully.
- Remove oven racks and clean them separately in warm soapy water.

Door Cleaning:

The **double-glazed door** can be cleaned with a glass cleaner. For cleaning between the glass panes (if removable), refer to specific instructions in the full product manual or consult a service technician.

Replacing the Oven Light:

Ensure the oven is disconnected from the power supply before attempting to replace the oven light bulb. Unscrew the protective cover, replace the bulb with a new one of the same type and wattage, and then reattach the cover.

Troubleshooting

Before contacting customer service, please refer to the following common issues and their solutions.

Problem	Possible Cause	Solution
Oven does not heat up.	No power supply; oven not switched on; timer not set.	Check power connection and circuit breaker. Ensure function and temperature knobs are set. Set the timer if required.
Oven light not working.	Bulb is faulty.	Replace the oven light bulb (ensure oven is disconnected from power).
Uneven cooking.	Incorrect rack position; overloaded oven; door not fully closed.	Use recommended rack positions. Do not overload the oven. Ensure the door is fully closed.
Child lock activated.	Child lock engaged.	Deactivate the child lock as per operating instructions.

If the problem persists after attempting these solutions, please contact customer support.

Specifications

Brand:	Corbero
Model:	CCH450MX
Type:	Multifunction Built-in Wall Oven
Color:	Black with Inox (Stainless Steel) Trim
Net Volume:	58 Liters
Cooking Programs:	8
Special Features:	Tangential Fan, Oven Light, Easy-Clean Enamel, Double-Glazed Door, Auto-Defrost System, Electronic Lock, Child Safety Lock
Material:	Stainless Steel (trim), Enamel (interior)
Heating Method:	Conduction

Warranty Information

Your CORBERO CCH450MX Multifunction Oven comes with a manufacturer's warranty. Please refer to the separate warranty card or documentation provided with your appliance for full details regarding warranty terms, conditions, and duration. Keep your proof of purchase for any warranty claims.

Customer Support

For technical assistance, spare parts, or service inquiries, please contact Corbero customer support. Have your oven's model number (CCH450MX) and serial number ready when you call.

You may find contact information on the Corbero official website or in the documentation included with your product.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question