

[Manuals.plus](#) /

> [Jocca](#) /

> Jocca 5923 Bagless Cyclonic Vacuum Cleaner User Manual

Jocca 5923

Jocca 5923 Bagless Cyclonic Vacuum Cleaner User Manual

INTRODUCTION

Thank you for choosing the Jocca 5923 Bagless Cyclonic Vacuum Cleaner. This manual provides essential information for the safe and efficient use of your appliance. Please read it thoroughly before first use and keep it for future reference. This vacuum cleaner is designed for household use to clean dry surfaces.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not use the vacuum cleaner to pick up water or other liquids, hot ashes, sharp objects, or flammable/explosive materials.
- Never immerse the appliance, power cord, or plug in water or other liquids.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Unplug from the outlet when not in use and before cleaning or maintenance.
- Do not operate the vacuum cleaner with a damaged cord or plug.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Jocca 5923 vacuum cleaner.



Figure 1: Overview of the Jocca 5923 Bagless Cyclonic Vacuum Cleaner, showing the main unit, flexible hose, telescopic tube, and floor brush.

1. Main Unit with Dust Container (2.2 Liters capacity)

2. Flexible Hose (70 cm long)
3. Telescopic Metal Tube
4. Floor Brush (suitable for all floor types)
5. Crevice Tool
6. Upholstery Brush
7. Power Cord (4.5 meters with auto-rewind function)
8. Power Button
9. Cord Rewind Button



Figure 2: Detail of the main unit showing the power button and the cord auto-rewind button.



Figure 3: Detail of the hose inlet on the main unit, where the flexible hose connects.

SETUP AND ASSEMBLY

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for storage or future transport.
2. **Attach Flexible Hose:** Insert the end of the flexible hose into the air inlet opening on the main unit until it clicks securely into place.
3. **Assemble Telescopic Tube:** Connect the telescopic metal tube to the handle end of the flexible hose. Adjust the tube length by pressing the release button and extending or retracting the tube.
4. **Attach Floor Brush:** Connect the desired cleaning attachment (e.g., floor brush) to the end of the telescopic tube.
5. **Power Connection:** Pull out the power cord to the desired length. The cord has a maximum length of 4.5 meters. Insert the plug into a suitable electrical outlet.

OPERATING INSTRUCTIONS

1. **Power On:** Press the power button (refer to Figure 2) located on the main unit to start the vacuum cleaner.
2. **Vacuuming:** Guide the floor brush or other attachment over the surface to be cleaned. The powerful cyclonic suction will collect dust and debris into the transparent dust container.
3. **Using Accessories:**
 - The **floor brush** is suitable for both hard floors and carpets.
 - The **crevice tool** is ideal for narrow gaps, corners, and edges.
 - The **upholstery brush** is designed for cleaning sofas, curtains, and other fabric surfaces.
4. **Power Off:** Press the power button again to turn off the vacuum cleaner.
5. **Cord Rewind:** After use, unplug the vacuum cleaner from the wall outlet. Press the cord rewind button (refer to Figure 2) to automatically retract the power cord into the unit.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

Emptying the Dust Container

1. Ensure the vacuum cleaner is unplugged from the power outlet.
2. Locate the dust container release button/latch on the main unit.
3. Press the release button and carefully remove the dust container.
4. Hold the dust container over a waste bin and open its bottom lid to empty the collected dust and debris.
5. Close the lid and reattach the dust container to the main unit, ensuring it clicks securely into place.

Cleaning the Filters

The Jocca 5923 features 5 filtration systems. Regular cleaning of these filters is crucial for maintaining suction power.

1. Unplug the vacuum cleaner.
2. Remove the dust container as described above.
3. Access the filters (typically located within or around the dust container). There may be a pre-motor filter and an exhaust filter.
4. Gently tap the filters over a waste bin to remove loose dust.
5. If washable, rinse the filters under cold running water. Do not use detergents.
6. Allow filters to air dry completely for at least 24 hours before reinserting them. Do not use a hairdryer or other heating devices.
7. Reassemble the filters and dust container.

Cleaning Attachments and Exterior

- Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners.
- Remove any tangled hair or debris from the floor brush and other attachments.

TROUBLESHOOTING

Before contacting customer support, please refer to the following troubleshooting guide for common issues.

| Problem | Possible Cause | Solution |
|----------------------------------|---|--|
| Vacuum cleaner does not turn on. | Not plugged in; no power at outlet; power button not pressed. | Check power cord connection; test outlet with another appliance; press power button firmly. |
| Loss of suction. | Dust container full; filters clogged; hose/attachments blocked. | Empty dust container; clean or replace filters; check hose and attachments for blockages. |
| Unusual noise. | Blockage in hose/brush; foreign object in fan; motor issue. | Turn off and unplug. Check for blockages in hose, tube, and brush. If noise persists, contact support. |
| Dust escaping from unit. | Dust container not properly sealed; filters not correctly installed or damaged. | Ensure dust container is securely latched. Check filters for proper installation and damage. |

SPECIFICATIONS

| | |
|-------------------------------|-------------------------------|
| Brand | Jocca |
| Model Number | 5923 |
| Special Feature | Compact, Bagless |
| Surface Recommendation | Floors |
| Power Source | Corded Electric |
| Product Weight | 4 Kilograms |
| Capacity | 2.2 Liters |
| Form Factor | Canister |
| Cord Length | 4.5 meters (with auto-rewind) |
| Filtration System | 5-stage cyclonic filtration |

WARRANTY INFORMATION

This Jocca 5923 Bagless Cyclonic Vacuum Cleaner comes with a **3-year warranty** from the date of purchase. This warranty covers manufacturing defects and material faults under normal household use. It does not cover damage caused by misuse, neglect, accident, unauthorized repair, or normal wear and tear. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

If you have any questions, require assistance, or encounter issues not covered in this manual, please contact Jocca customer service. For the most up-to-date contact information, please visit the official Jocca website or refer to your purchase documentation.

You can also visit the [Jocca Brand Store on Amazon](#) for more product information and support resources.