

## Karlsson PTG-KA5651DW

# Karlsson Silent Hexagon Wooden Alarm Clock KA5651DW Instruction Manual

Model: PTG-KA5651DW

## INTRODUCTION

---

Thank you for purchasing the Karlsson Silent Hexagon Wooden Alarm Clock. This manual provides detailed instructions for setting up, operating, and maintaining your new alarm clock. Please read this manual thoroughly before use and retain it for future reference.



Image 1: Front view of the Karlsson Silent Hexagon Wooden Alarm Clock, displaying the time 10:10.

## PACKAGE CONTENTS

---

- Karlsson Silent Hexagon Wooden Alarm Clock (Model: PTG-KA5651DW)
- Instruction Manual
- *Note: Batteries are not included.*

## SETUP

---

### 1. Battery Installation

1. Locate the battery compartment cover on the back of the alarm clock.
2. Gently slide or unclip the cover to open the compartment.
3. Insert the required batteries (typically 3x AAA, refer to the compartment markings for correct polarity).
4. Replace the battery compartment cover, ensuring it is securely closed.



Image 2: Rear view of the Karlsson Silent Hexagon Wooden Alarm Clock, indicating the location of controls and the battery compartment.

## 2. Initial Time Setting

Upon battery installation, the display will illuminate. Refer to the "Operating" section for detailed instructions on setting the current time.

## OPERATING

---

### 1. Setting the Time

- Locate the "SET" button (or similar, usually on the back). Press and hold it until the hour digits begin to flash.
- Use the "+" and "-" buttons (or similar, often labeled "UP" and "DOWN") to adjust the hour.
- Press "SET" again to confirm the hour and move to the minute setting.
- Use the "+" and "-" buttons to adjust the minutes.
- Press "SET" one more time to confirm the minutes and exit time setting mode.

### 2. Setting the Alarm

- Locate the "ALARM SET" button (or similar). Press and hold it until the alarm hour digits begin to

flash.

- Use the "+" and "-" buttons to adjust the alarm hour.
- Press "ALARM SET" again to confirm the alarm hour and move to the alarm minute setting.
- Use the "+" and "-" buttons to adjust the alarm minutes.
- Press "ALARM SET" one more time to confirm the alarm minutes and exit alarm setting mode.

3. Alarm On/Off

- To activate or deactivate the alarm, locate the "ALARM ON/OFF" switch or button (often indicated by an alarm icon).
- When the alarm is active, an alarm indicator icon (e.g., a bell) will typically appear on the display.

MAINTENANCE

1. Cleaning

To clean the alarm clock, use a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the finish or electronic components. Avoid exposing the clock to excessive moisture.

2. Battery Replacement

When the display dims or the clock functions become erratic, it is time to replace the batteries. Follow the "Battery Installation" steps in the Setup section to replace the old batteries with new ones. Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

| Problem                        | Possible Cause   | Solution  |
|--------------------------------|--|---|
| Clock display is blank or dim. | Low or depleted batteries.                             | Replace batteries with new ones. Ensure correct polarity.                               |
| Alarm does not sound.          | Alarm is not activated or set incorrectly.             | Ensure the alarm is turned ON and the alarm time is set correctly. Check battery level. |
| Time is incorrect.             | Time was not set accurately or batteries were removed. | Reset the current time following the "Setting the Time" instructions.                   |

SPECIFICATIONS

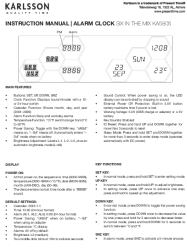

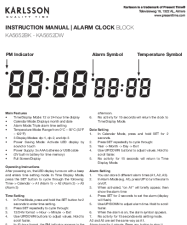

|                         |                       |
|-------------------------|-----------------------|
| Brand:                  | Karlsson              |
| Model Number:           | PTG-KA5651DW          |
| Material:               | Wood                  |
| Color:                  | Naturel               |
| Dimensions (L x W x H): | 14.8 x 3.81 x 14.2 cm |
| Weight:                 | 200 g                 |



|                         |  |
|-------------------------|--|
| <b>Power Source:</b>    | Battery Powered (Batteries not included) |
| <b>Special Feature:</b> | Silent Clock                             |

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

### Related Documents - PTG-KA5651DW

|   |  |
|---|--|
|    | <p><a href="#">Karlsson Alarm Clock Six In The Mix KA5805 Instruction Manual</a></p> <p>Comprehensive user manual for the Karlsson Alarm Clock Six In The Mix KA5805, covering features, settings, operation, and troubleshooting.</p>   |
|   | <p><a href="#">Karlsson KA6070 LED Cuckoo Alarm Clock Instruction Manual</a></p> <p>Detailed instructions and warnings for the Karlsson KA6070 LED Cuckoo Alarm Clock, covering setup, functions, alarm settings, temperature, and maintenance.</p>  |
|  | <p><a href="#">Karlsson KA5652BK/KA5652DW Block Alarm Clock: Instruction Manual &amp; Features</a></p> <p>Official instruction manual for the Karlsson KA5652BK and KA5652DW Block alarm clock. Learn how to set time, date, alarms, use temperature display, and power saving features.</p>               |
|  | <p><a href="#">Karlsson Alarm Clock Instruction Manual and Warranty Information</a></p> <p>Official instruction manual and warranty details for Karlsson alarm clocks, including setup, maintenance, and disposal guidelines. Covers various models like Peekaboo Dog, Belle Numbers, Globe, and more.</p> |

|   |   |
|---|---|
|  | <p><a href="#">Karlsson KA5868 Boxed LED Alarm Clock: Instruction Manual</a></p> <p>Comprehensive guide for the Karlsson KA5868 Boxed LED Alarm Clock, detailing features, setup, alarm functions, display options, and important warnings. Learn how to set time, date, alarms, and adjust brightness.</p> |
|  | <p><a href="#">Karlsson KA5654 Instruction Manual - Digital Alarm Clock</a></p> <p>Comprehensive guide for the Karlsson KA5654 digital alarm clock, detailing features, setup, operation, and precautions. Learn to set alarms, adjust brightness, and utilize sound control.</p>                           |