

## Einhell GE-LC 18 Li T

# Einhell GE-LC 18 Li T Cordless Hedge Trimmer Instruction Manual

Model: GE-LC 18 Li T (3410818)

## 1. INTRODUCTION

Thank you for choosing the Einhell GE-LC 18 Li T Cordless Hedge Trimmer. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new tool. Please read these instructions carefully before first use and keep them for future reference.

The Einhell GE-LC 18 Li T is designed for trimming hedges, shrubs, and bushes in domestic gardens. Its cordless design offers flexibility and ease of use.



*Image 1: The Einhell GE-LC 18 Li T Cordless Hedge Trimmer blade attachment and a portion of the handle. The blade features multiple cutting teeth along its length, designed for efficient trimming. The handle section shows the Einhell logo.*

## 2. GENERAL SAFETY INSTRUCTIONS

Always observe basic safety precautions when using electric tools to reduce the risk of fire, electric shock, and personal injury. Keep this manual in a safe place for future reference.

- **Read all instructions:** Familiarize yourself with the controls and proper use of the tool.
- **Wear appropriate personal protective equipment (PPE):** This includes safety glasses, gloves, sturdy footwear, and hearing protection.
- **Keep work area clear:** Remove debris, obstacles, and ensure good lighting.

- **Do not operate in wet conditions:** Avoid using the tool in rain or damp environments.
- **Keep children and bystanders away:** Maintain a safe distance from the operating area.
- **Inspect the tool before use:** Check for damaged parts, loose connections, or any other condition that may affect operation.
- **Use the correct battery and charger:** Only use batteries and chargers specified by Einhell for this model.
- **Disconnect battery when not in use:** Always remove the battery pack before cleaning, servicing, or storing the tool.
- **Maintain good footing and balance:** Do not overreach.

### 3. PACKAGE CONTENTS

---

Upon unpacking, please ensure all items are present and undamaged:

- Einhell GE-LC 18 Li T Cordless Hedge Trimmer (main unit/attachment)
- Blade guard
- Instruction Manual
- *(Battery and charger sold separately, depending on specific product variant)*

If any parts are missing or damaged, please contact your retailer or Einhell customer service.

### 4. SETUP AND ASSEMBLY

---

#### 4.1. Battery Installation

1. Ensure the hedge trimmer is switched off.
2. Align the battery pack with the battery slot on the tool's handle.
3. Slide the battery pack into the slot until it clicks securely into place.
4. To remove, press the release button on the battery pack and slide it out.

#### 4.2. Attaching the Blade Guard

The blade guard should always be attached when the tool is not in use or during transport.

1. Carefully slide the blade guard over the cutting blade until it fully covers the teeth.
2. Ensure it is snug and will not fall off accidentally.

### 5. OPERATING INSTRUCTIONS

---

#### 5.1. Before Starting

- Ensure the battery is fully charged.
- Inspect the hedge for foreign objects (wires, stones, etc.) that could damage the blade.
- Plan your cutting path to ensure safety and efficiency.

#### 5.2. Starting and Stopping

- To start: Press and hold the safety switch, then squeeze the trigger switch.
- To stop: Release the trigger switch. The blade will stop quickly.

### 5.3. Cutting Techniques

- **Horizontal Cutting:** Hold the trimmer with both hands, keeping the blade parallel to the ground. Move the trimmer in a sweeping motion along the top of the hedge.
- **Vertical Cutting:** Hold the trimmer vertically, moving it upwards or downwards along the side of the hedge.
- **Shaping:** For detailed shaping, use short, controlled movements. The tool's design allows for versatility, including use for pruning poles and as a tall grass shrub trimmer, depending on the specific application and accessories.
- Avoid cutting branches thicker than the recommended maximum cutting capacity (refer to specifications).

## 6. MAINTENANCE AND CARE

Regular maintenance ensures optimal performance and extends the lifespan of your hedge trimmer.

### 6.1. Cleaning

- Always remove the battery before cleaning.
- Use a stiff brush or compressed air to remove debris from the blade and ventilation slots.
- Wipe the housing with a damp cloth. Do not use solvents or abrasive cleaners.

### 6.2. Blade Care

- After each use, clean the blade thoroughly.
- Apply a light machine oil or blade lubricant to the cutting edges to prevent rust and ensure smooth operation.
- If the blade becomes dull, it can be sharpened by a qualified service technician or replaced. The tips are designed to resist erosion for a long time.

### 6.3. Storage

- Store the hedge trimmer in a dry, secure place, out of reach of children.
- Always attach the blade guard before storing.
- Remove the battery pack if storing for extended periods.

## 7. TROUBLESHOOTING

| Problem                  | Possible Cause   | Solution   |
|--------------------------|--|--|
| Tool does not start      | Battery not inserted correctly or discharged. Safety switch not engaged. | Ensure battery is fully charged and properly inserted. Engage safety switch before pressing trigger.                     |
| Poor cutting performance | Dull or dirty blade. Overloading the tool.                               | Clean and lubricate the blade. Sharpen or replace if necessary. Do not attempt to cut branches thicker than recommended. |
| Excessive vibration      | Damaged blade or loose components.                                       | Inspect blade for damage. Tighten any loose screws. If problem persists, seek professional service.                      |

## 8. TECHNICAL SPECIFICATIONS

| Feature                        | Detail                       |
|--------------------------------|------------------------------|
| Brand                          | Einhell                      |
| Model Number                   | 3410818                      |
| Power Source                   | Battery Powered              |
| Color                          | Red                          |
| Product Dimensions (L x W x H) | 4.33"L x 3.54"W x 25"H       |
| Item Weight                    | 1.35 Kilograms (2.97 pounds) |
| Blade Length                   | 450 Millimeters              |
| Material                       | Metal Alloy Steel            |
| Blade Material                 | Alloy Steel                  |
| Cutting Width                  | 0.4 Meters                   |

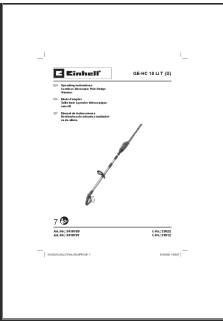
## 9. WARRANTY AND SUPPORT

Einhell products are manufactured to high-quality standards and undergo strict quality controls. Should you experience any issues with your product, please refer to the warranty conditions provided with your purchase documentation.

For technical support, spare parts, or warranty claims, please contact Einhell customer service or visit the official Einhell website for more information. Please have your model number (GE-LC 18 Li T) and serial number (if applicable) ready when contacting support.

Official Einhell Website: [www.einhell.com](http://www.einhell.com)

### Related Documents - GE-LC 18 Li T

|   |   |
|---|---|
|  | <p><a href="#">Einhell GE-HC 18 Li T (II) Cordless Telescopic Pole Hedge Trimmer Operating Instructions</a></p> <p>Comprehensive operating instructions and safety guide for the Einhell GE-HC 18 Li T (II) cordless telescopic pole hedge trimmer, covering assembly, operation, maintenance, and troubleshooting.</p> |
|---|---|

|   |  |
|---|--|
|    | <p><a href="#">Einhell ARCURRA 18/55 Cordless Hedge Trimmer - Instruction Manual</a></p> <p>Official instruction manual for the Einhell ARCURRA 18/55 cordless hedge trimmer. Includes product overview, parts identification, safety instructions, operation guide, and charging information.</p>   |
|    | <p><a href="#">Einhell GE-LM 36/4in1 Li Cordless Multi-Tool: Operation and Parts</a></p> <p>This document provides the original operating instructions for the Einhell GE-LM 36/4in1 Li Cordless Telescoping Pole Chain Saw, Hedge Trimmer, String Trimmer, and Brush Cutter. It includes detailed diagrams of parts and assembly.</p>   |
|    | <p><a href="#">Einhell GE-CH 1855/1 Li Akku-Heckenschere: Bedienungsanleitung</a></p> <p>Die offizielle Bedienungsanleitung für die Einhell GE-CH 1855/1 Li Akku-Heckenschere. Enthält detaillierte Informationen zu Sicherheit, Bedienung, Wartung, technischen Daten und Fehlerbehebung für Ihr Gartenwerkzeug.</p>  |
|   | <p><a href="#">Einhell GE-CH 1855/1 Li Kit Akku-Heckenschere Bedienungsanleitung</a></p> <p>Umfassende Bedienungsanleitung für die Einhell GE-CH 1855/1 Li Kit Akku-Heckenschere. Enthält wichtige Sicherheitshinweise, Anleitungen zur Montage, Bedienung, Wartung und Fehlerbehebung für dieses kabellose Gartengerät.</p>   |
|  | <p><a href="#">Einhell GE-EH 6560 / GE-EH 7067 Elektro-Heckenschere Bedienungsanleitung</a></p> <p>Finden Sie detaillierte Bedienungsanleitungen, Sicherheitshinweise und technische Daten für die Einhell Elektro-Heckenscheren GE-EH 6560 und GE-EH 7067. Erfahren Sie alles über die bestimmungsgemäße Verwendung, Wartung und sichere Handhabung dieser leistungsstarken Gartengeräte von Einhell.</p> |