

USARMT AH59-02631J

USARMT Replacement Remote Control Instruction Manual

For Samsung Sound Bar Model AH59-02631J

INTRODUCTION

This manual provides detailed instructions for the USARMT replacement remote control, model AH59-02631J. This remote is designed to operate various Samsung Sound Bar systems, offering a direct replacement for the original unit without requiring complex programming.

PRODUCT OVERVIEW

Remote Control Layout

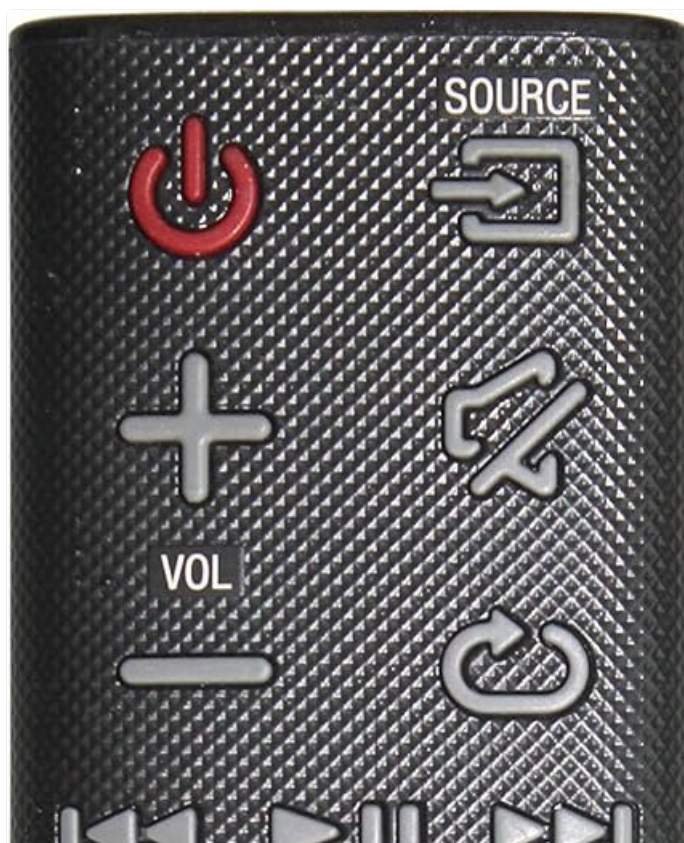




Figure 1: USARMT AH59-02631J Replacement Remote Control. This image displays the full layout of the remote, featuring a textured black finish and clearly labeled grey buttons for various functions including power, source selection, volume control, playback, sound effects, and Bluetooth.

Compatible Models

This remote control is compatible with the following Samsung Sound Bar models:

- HW-H430
- HW-H450
- HW-HM45
- HW-HM45C
- HWH430

- HWH450
- HWHM45
- HWHM45C
- And other similar Samsung Sound Bar models.

SETUP

Battery Installation

The remote control requires one (1) 3V button cell battery (not included) for operation. Follow these steps to install the battery:

1. Locate the battery compartment on the back of the remote control.
2. Open the battery compartment cover.
3. Insert the 3V button cell battery, ensuring the positive (+) side is facing upwards as indicated inside the compartment.
4. Close the battery compartment cover securely.

No programming or pairing is required after battery installation. The remote is ready for use.

OPERATING INSTRUCTIONS

Point the remote control directly at your Samsung Sound Bar for optimal performance.

POWER Button: Press to turn the Sound Bar on or off.

SOURCE Button: Press to cycle through available input sources (e.g., TV, Bluetooth, HDMI, Optical).

VOL +/- Buttons: Press '+' to increase volume, '-' to decrease volume.

Mute Button: Press to mute or unmute the sound. (Represented by a crossed-out speaker icon).

Playback Controls (Rewind, Play/Pause, Fast Forward): Use these buttons to control media playback when applicable (e.g., via Bluetooth or USB input).

SOUND EFFECT Button: Press to cycle through various pre-set sound effects or modes.

3D SOUND Button: Activates or deactivates the 3D Sound feature for an immersive audio experience.

AUDIO SYNC Button: Adjusts audio delay to synchronize sound with video.

BLUETOOTH POWER Button: Activates or deactivates Bluetooth functionality on the Sound Bar.

EQUALIZER WOOFER Button: Adjusts equalizer settings or controls the subwoofer level.

DIMMER Button: Adjusts the brightness of the Sound Bar's display.

MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace the battery promptly when the remote's performance degrades. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you experience issues with your remote control, refer to the following common troubleshooting steps:

- **Remote Not Responding:**
 - Ensure the battery is correctly installed with the correct polarity.
 - Replace the battery with a new 3V button cell battery.
 - Check for any obstructions between the remote control and the Sound Bar's sensor.
 - Ensure you are within the effective operating range and pointing the remote directly at the Sound Bar.
- **Intermittent Functionality:**
 - This often indicates a low battery. Replace the battery.
 - Avoid using the remote in areas with strong electromagnetic interference.

SPECIFICATIONS

Feature	Detail
Brand	USARMT
Model Number	AH59-02631J
Item Weight	1 pounds
Connectivity Technology	Infrared
Controller Type	Button Control
Special Feature	Ergonomic
Compatible Devices	Stereo System (Samsung Sound Bars)
Power Supply	1x 3V Button Cell Battery (Not Included)

WARRANTY AND SUPPORT

This product is a replacement remote control. For specific warranty information or technical support, please refer to the documentation provided by the original seller or contact the manufacturer, USARMT, directly. General product support and return policies are typically handled by the point of purchase.