

[Manuals.plus](#) /

› [Motorola](#) /

› Motorola MOTO700 Digital Cordless Phone User Manual

Motorola MOTO700

Motorola MOTO700 Digital Cordless Phone User Manual

Model: MOTO700

1. PRODUCT OVERVIEW

The Motorola MOTO700 is a digital cordless phone designed for ease of use and reliable communication. It features DECT 6.0 technology for clear, secure calls and is expandable to support multiple handsets.



Image 1.1: Front view of the Motorola MOTO700 Digital Cordless Phone handset. The handset is black with a smooth finish, featuring a speaker grille at the top and a microphone at the bottom. The keypad and display are not visible in this view.

2. SETUP GUIDE

2.1 Unpacking and Components

Carefully remove all components from the packaging. Ensure you have the following items:

- Motorola MOTO700 Handset
- Base Unit

- Power Adapter (100-240VAC automatic)
- Telephone Line Cord
- 2 AAA Rechargeable Batteries

2.2 Battery Installation

1. Locate the battery compartment cover on the back of the handset.
2. Slide the cover downwards and remove it.
3. Insert the two AAA rechargeable batteries, observing the correct polarity (+ and -).
4. Replace the battery compartment cover, sliding it upwards until it clicks into place.

2.3 Connecting the Base Unit

1. Connect one end of the telephone line cord to the TEL LINE jack on the base unit.
2. Connect the other end of the telephone line cord to your telephone wall jack.
3. Plug the small end of the power adapter into the DC IN 6V jack on the base unit.
4. Plug the large end of the power adapter into a standard electrical outlet.

2.4 Initial Charging

Place the handset on the base unit. The handset will begin charging. For optimal battery performance, allow the handset to charge continuously for at least 12-15 hours before its first use, even if the display indicates a full charge.

3. OPERATING INSTRUCTIONS

3.1 Making and Receiving Calls

- **To Make a Call:** Press the **TALK** button, then dial the desired phone number.
- **To Receive a Call:** When the phone rings, press the **TALK** button.
- **To End a Call:** Press the **END** button or place the handset back on the base unit.

3.2 Caller ID

The phone stores the last 10 incoming call records. To view the Caller ID list, press the **CID** button and use the navigation buttons to scroll through the entries.

3.3 Phonebook

The phonebook can store up to 20 names and numbers. Refer to the on-screen menu for instructions on adding, editing, and deleting entries.

3.4 Volume Adjustment

During a call, use the **UP** and **DOWN** navigation buttons to adjust the earpiece volume. There are 5 distinct volume levels.

3.5 Ringtones

The phone offers 5 standard ringtones and 5 polyphonic melodies. To change the ringtone, navigate through the handset's menu settings.

3.6 Multi-Handset Expansion

The Motorola MOTO700 system is expandable, allowing you to register up to 4 additional handsets to a single base unit,

for a total of 5 handsets. Refer to the advanced settings menu for handset registration procedures.

4. MAINTENANCE

4.1 Cleaning

Wipe the handset and base unit with a soft, damp cloth. Do not use harsh cleaning agents or abrasive materials, as these can damage the surfaces. Avoid getting moisture into any openings.

4.2 Battery Care

To prolong battery life:

- Always use the provided rechargeable AAA batteries.
- Avoid exposing the batteries to extreme temperatures.
- If the phone will not be used for an extended period, remove the batteries.

5. TROUBLESHOOTING

If you encounter issues with your Motorola MOTO700, try the following solutions:

Problem	Solution
No dial tone	Ensure the telephone line cord is securely connected to both the base unit and the wall jack. Check if the power adapter is properly connected.
Cannot make or receive calls	Verify that the handset is charged and within range of the base unit. Check the telephone line connection.
Low earpiece or ringer volume	Adjust the earpiece volume during a call using the navigation buttons. Check the ringer volume settings in the handset menu.
Handset not charging	Ensure the handset is correctly seated on the base unit. Check that the power adapter is plugged into a working electrical outlet. Clean the charging contacts on both the handset and base unit.
Display is blank or unresponsive	Ensure batteries are correctly installed and charged. Try removing and reinserting the batteries.

6. SPECIFICATIONS

- **Model:** MOTO700
- **Brand:** Motorola
- **Color:** Black
- **Frequency:** DECT 6.0 Digital
- **Caller ID Memory:** Stores last 10 calls
- **Phonebook Capacity:** 20 names and numbers
- **Volume Levels:** 5 earpiece levels

- **Ringtone Types:** 5 standard tones + 5 polyphonic melodies
- **Power Supply:** Automatic 100VAC to 240VAC
- **Expandability:** Up to 5 total handsets (including base unit)
- **Material:** Plastic
- **Batteries:** 2 x AAA rechargeable (included)
- **Product Dimensions:** 10.5 x 17.5 x 13.2 cm (approximate)
- **Product Weight:** 320 grams (approximate)

7. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official Motorola support website. You can also visit the [Motorola Store on Amazon](#) for additional product information and resources.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question