



[Manuals.plus](#) /

› [Tamagotchi](#) /

› First Generation Tamagotchi JAL Limited Model Instruction Manual

Tamagotchi JAL Limited Model (ASIN: B0755V2PYR)

First Generation Tamagotchi JAL Limited Model Instruction Manual

Brand: Tamagotchi

INTRODUCTION

Welcome to the world of the First Generation Tamagotchi JAL Limited Model! This virtual pet device allows you to raise and care for your very own digital creature. This manual will guide you through the initial setup, daily care, and troubleshooting to ensure a fulfilling experience with your Tamagotchi.



Image: The Tamagotchi JAL Limited Model, still in its blister packaging, featuring a white device with blue accents and a JAL airplane design on the packaging background.

SETUP

Battery Installation

Your Tamagotchi comes with pre-installed batteries. If the screen is blank or unresponsive, you may need to activate or replace the batteries.

1. Locate the battery compartment on the back of the device.
2. Using a small Phillips head screwdriver, carefully open the battery cover.
3. Insert two (2) LR44 alkaline button batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery cover and secure it with the screw.
5. Press the reset button (usually a small recessed button) with a pointed object (like a pen tip) to initiate the device.



Image: A detailed view of the Tamagotchi device itself, highlighting its small LCD screen displaying a character, and the three circular control buttons below it.

OPERATING YOUR TAMAGOTCHI

The Tamagotchi device has three primary buttons: A, B, and C. These buttons are used to navigate menus and interact with your pet.

- **Button A:** Selects options and confirms actions.
- **Button B:** Cancels actions or returns to the previous screen.
- **Button C:** Cycles through menu icons.

Basic Care Functions

Your Tamagotchi requires daily attention to grow and thrive. Monitor its needs by checking the status screen.

- **Feed:** Select the fork and knife icon to feed your Tamagotchi. Choose between a meal (fills hunger) or a snack (fills happiness).
- **Play:** Select the game icon to play a game with your Tamagotchi. Playing games increases its happiness.
- **Clean:** Select the toilet icon when your Tamagotchi makes a mess. Prompt cleaning prevents it from getting sick.
- **Medicine:** Select the syringe icon if your Tamagotchi becomes sick. Administer medicine promptly.
- **Lights:** Select the light bulb icon to turn the lights off when your Tamagotchi goes to sleep, and on when it

wakes up.

- **Discipline:** Select the angry face icon to discipline your Tamagotchi if it misbehaves (e.g., refuses to eat or play).
- **Status:** Select the heart icon to check your Tamagotchi's age, weight, hunger, and happiness levels.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the device clean. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use for extended periods, remove the batteries to prevent leakage. Store the device in a cool, dry place away from direct sunlight.
- **Avoid Impact:** Protect the device from drops and strong impacts, which can damage the internal components or screen.
- **Water Resistance:** This device is not water-resistant. Keep it away from water and high humidity.

TROUBLESHOOTING

Problem	Solution
Screen is blank or unresponsive.	Check battery installation. Replace batteries if necessary. Press the reset button.
Tamagotchi is not growing or responding.	Ensure you are providing consistent care (feeding, playing, cleaning). The Tamagotchi's growth depends on its care.
Buttons are not working.	Ensure no debris is lodged around the buttons. Try pressing the reset button.
Tamagotchi is constantly sick.	Ensure you are cleaning up messes promptly and administering medicine when needed. Overfeeding snacks can also lead to sickness.

SPECIFICATIONS

Feature	Detail
Model	JAL Limited Model (ASIN: B0755V2PYR)
Brand	Tamagotchi
Power Source	2 x LR44 Alkaline Button Batteries (included)
Dimensions	Approximately 24 x 10.2 x 0.2 cm (packaging); Device dimensions are smaller.

Feature	Detail
Weight	50 g (packaging weight)
Target Age	Adult (as per Amazon specifications, though typically for children)
First Available Date	August 26, 2017

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided on the product packaging or the official Tamagotchi website. Keep your proof of purchase for any warranty claims.

This product is designed for entertainment purposes. Any issues not covered in this manual may require direct assistance from the manufacturer.