

PLUS TX-700NW

PLUS TX-700NW Non-Maintenance LCD Display Delivery Locker Instruction Manual

Model: TX-700NW | Brand: PLUS

INTRODUCTION

This instruction manual provides essential information for the safe and efficient use of your PLUS TX-700NW Non-Maintenance LCD Display Delivery Locker. Please read this manual thoroughly before installation and operation, and retain it for future reference.

SAFETY INFORMATION

Important Safety Notice: This delivery locker can be secured to a wall to prevent tipping. While it can be used without wall fixation, there is a risk of tipping if children or pets open the doors, or if heavy items are placed inside. If connecting multiple delivery lockers horizontally, ensure proper connection methods are followed. Incorrect connection may cause the locker to tilt or items to fall.

PRODUCT OVERVIEW

The PLUS TX-700NW is a delivery locker designed for apartment buildings, offering a convenient and secure solution for parcel reception. Key features include:

- **Auto Standby Function:** Automatically switches from power-saving mode to active use mode with a single button press.
- **Tamper Prevention:** If an incorrect password is entered 4 consecutive times, an alarm sounds, and the system locks for approximately 1 minute.
- **Battery Operated:** Uses 2 AA batteries per door. Includes a low battery notification function and emergency unlock keys.
- **Clear LCD Display:** Easy to confirm and input 4-digit passwords, minimizing input errors. Each door includes 2 emergency unlock keys.
- **Acrylic Window:** Allows visual confirmation of stored items.



Image: PLUS TX-700NW Delivery Locker installed in an apartment entrance, showing its sleek design and multiple compartments.

SETUP

1. Placement and Stability

Place the delivery locker on a flat, stable surface. For enhanced stability and safety, especially in areas with children or pets, wall-mounting is recommended. Ensure the chosen location does not obstruct pathways or emergency exits.



Image: A PLUS TX-700NW delivery locker positioned in an apartment hallway, demonstrating a typical installation environment.

2. Battery Installation

Each door requires 2 AA batteries. Open the battery compartment, insert the batteries according to the polarity markings, and close the compartment securely. The LCD display will activate upon successful battery installation.

3. Initial Code Setting

Refer to the quick guide sticker on the locker door for initial code setting instructions. It typically involves pressing the 'C' button, entering a 4-digit code (not 0000), pressing the lock button, and turning the lever to the left to secure.



コスパよく基本機能もこれで充分！

★★★★★ 5.00

2024/10/2

mak*****さん

総戸数16戸の分譲マンションに設置しました。同個数の高機能製品（本体66万+年間管理費5万）と比較検討しましたが、そこまでの機能の必要性が無く、年間維持費など考えた結果、こちらの廉価な宅配ボックスを置いてみることにしました。高機能製品の1年分のリース代で購入できるメリットは大きいです。見た目は画像通りで、使い方も単純なところが良いです。購入先のムラカミビジネスさんの独自のシールは助かりました。領収書の発行についても親切丁寧に対応して頂きました。

いいね1



Image: Close-up view of the LCD display and keypad, illustrating the interface for setting and entering codes.

OPERATING INSTRUCTIONS

1. Receiving a Parcel

1. The delivery person selects an available compartment.
2. They place the parcel inside and close the door.
3. They enter a unique 4-digit password (not 0000) on the keypad, press the lock button, and turn the lever to the left to secure the door.
4. The delivery person leaves a notification with the password for the recipient.



Image: A visual guide demonstrating the process of a delivery person placing a parcel into the locker and securing it with a code.

2. Retrieving a Parcel

1. Locate the compartment containing your parcel.
2. Enter the 4-digit password provided by the delivery person on the keypad.
3. Press the unlock button and turn the lever to the right to open the door.
4. Retrieve your parcel and close the door securely.



Image: A diagram illustrating the simple steps for locking and unlocking the delivery locker using the keypad and lever.

3. Using the Acrylic Window

Each compartment features a small acrylic window. This allows users to visually confirm if a parcel is inside before attempting to open the door, enhancing convenience.

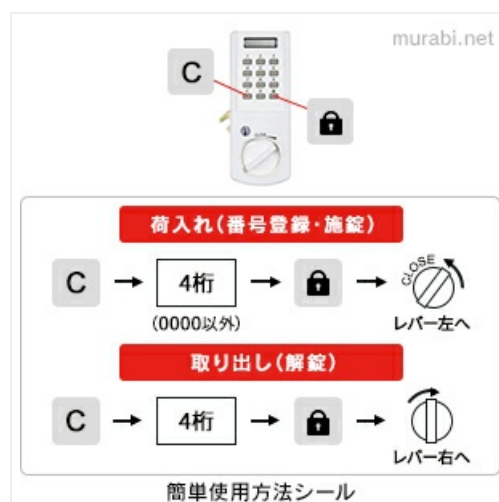 


Image: A close-up of the acrylic window on a locker door, designed for visual confirmation of parcel presence.

MAINTENANCE

1. Cleaning

Wipe the exterior surfaces with a soft, damp cloth. Avoid using abrasive cleaners or solvents, as these may damage the finish. For the LCD display, use a soft, dry cloth.

2. Battery Replacement

When the low battery indicator appears on the LCD display, replace the batteries promptly. Use 2 new AA batteries per door. Ensure correct polarity during installation.

3. Emergency Key Usage

In case of battery failure or forgotten password, use the provided emergency unlock keys. Each door has its own set of keys. Keep these keys in a safe and accessible location, separate from the locker.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Door does not open with correct code.	Low battery; incorrect lever turn.	Replace batteries. Ensure the lever is turned fully to the unlock position.
Alarm sounds after multiple attempts.	Incorrect password entered 4 times.	Wait approximately 1 minute for the system to reset, then re-enter the correct password. Use emergency key if password is forgotten.
LCD display is blank.	No batteries or dead batteries.	Install new AA batteries.
Locker feels unstable.	Not properly secured or placed on uneven surface.	Ensure the locker is on a flat surface. Consider wall-mounting for added stability.

SPECIFICATIONS

Feature	Detail
Model	TX-700NW
Brand	PLUS
Color	White
Material	Steel
Finish	Painted (Water-repellent processing)
Assembly Required	No (Pre-assembled)
Product Dimensions	51.5 cm (Depth) x 90 cm (Width) x 180 cm (Height)
Battery Use	Yes (AA x 2 per door)
Batteries Included	Yes
Recommended Use	Delivery Box

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or contact

PLUS customer service directly. Keep your purchase receipt for warranty claims.

Contact Information: Please visit the official PLUS website or refer to the contact details provided in your product packaging for support.

ADDITIONAL RESOURCES

Official Product Videos


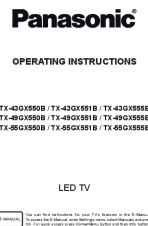 

Your browser does not support the video tag.

 


Video: "OITOKO Usage Method" - This video demonstrates the setup and usage of a related delivery bag, which can be used in conjunction with the delivery locker for smaller items or alternative delivery methods. It shows how to secure the bag to a door handle and how to fold it for storage.



© 2023 PLUS. All rights reserved.

Related Documents - TX-700NW

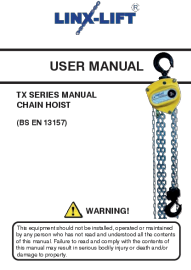	<p>Panasonic LED TV Operating Instructions & Model Guide</p> <p>Comprehensive operating instructions and user manual for Panasonic LED TV models TX-40JX850B, TX-50JX850B, TX-58JX850B, TX-65JX850B series. Covers setup, safety, connections, features, and specifications.</p>
	<p>Panasonic LED TV Operating Instructions TX-43GX550B Series</p> <p>Comprehensive operating instructions for Panasonic LED TV models TX-43GX550B, TX-43GX551B, TX-43GX555B, TX-49GX550B, TX-49GX551B, TX-49GX555B, TX-55GX550B, TX-55GX551B, and TX-55GX555B. Covers setup, features, maintenance, troubleshooting, and connectivity.</p>
	<p>ANEP BOX-SC Under-Cabin Intercom System - Installation and Safety Guide</p> <p>Comprehensive guide for the ANEP BOX-SC under-cabin intercom system, covering safety instructions, dimensions, installation procedures, and warranty information for elevator communication systems.</p>

 <p>The cover of the LINX-LIFT TX Series Manual Chain Hoist User Manual. It features the LINX-LIFT logo at the top, followed by 'USER MANUAL' and 'TX SERIES MANUAL CHAIN HOIST (BS EN 13157)'. A photograph of the chain hoist is on the right. A 'WARNING!' section at the bottom left states: 'The equipment should not be installed, operated or maintained by any person who has not read and understood all the contents of the manual. Failure to read and comply with the contents of the manual may result in serious bodily injury or death and/or damage to property.'</p>	<p>LINX-LIFT TX Series Manual Chain Hoist User Manual</p> <p>User manual for the LINX-LIFT TX Series manual chain hoist, detailing safety, operation, inspection, maintenance, troubleshooting, and spare parts for models TX-0.5T through TX-30T.</p>
 <p>The cover of the Panasonic VIERA LCD Television Operating Instructions. It shows a Panasonic VIERA LCD TV and lists models: TX-L32GW10, TX-L32GW10W, TX-L37GW10, and TX-L37GW10W. It also lists features like VIERA, DTS, and HDMI.</p>	<p>Panasonic VIERA LCD Television Operating Instructions - TX-L32GW10/TX-L37GW10 Series</p> <p>Comprehensive operating instructions and user manual for Panasonic VIERA LCD Television models TX-L32GW10, TX-L32GW10W, TX-L37GW10, and TX-L37GW10W. Covers setup, features, safety, and troubleshooting.</p>
 <p>The cover of the Panasonic LED TV Operating Instructions. It shows a Panasonic LED TV and lists models: TX-40JX800B, TX-40JX800BZ, TX-50JX800B, TX-50JX800BZ, TX-58JX800B, TX-58JX800BZ, TX-65JX800B, and TX-65JX800BZ. It also lists features like LED, DTS, and HDMI.</p>	<p>Panasonic LED TV Operating Instructions: TX-40/50/58/65JX800 Series</p> <p>Comprehensive operating instructions for Panasonic LED TV models TX-40JX800B, TX-40JX800BZ, TX-50JX800B, TX-50JX800BZ, TX-58JX800B, TX-58JX800BZ, TX-65JX800B, and TX-65JX800BZ. Covers setup, connections, features, safety, and maintenance.</p>