



Manuals.plus /

› Philips /

› Philips HTL1193B/94 Bluetooth Soundbar Speaker User Manual

Philips HTL1193B/94

Philips HTL1193B/94 Bluetooth Soundbar Speaker User Manual

Model: HTL1193B/94

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Philips HTL1193B/94 Bluetooth Soundbar Speaker. Please read these instructions carefully before using the product and retain them for future reference.

2. IMPORTANT SAFETY INFORMATION

Observe all warnings and instructions marked on the product or described in this manual. Failure to do so may result in injury or damage to the product.

- **Power Source:** Connect the product only to the type of power source indicated on the marking label.
- **Ventilation:** Ensure adequate ventilation. Do not block any ventilation openings.
- **Water and Moisture:** Do not expose the product to dripping or splashing. Do not place objects filled with liquids, such as vases, on the product.
- **Heat:** Do not place the product near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Cleaning:** Unplug the product from the wall outlet before cleaning. Use a dry cloth for cleaning.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

3. WHAT'S IN THE BOX

Verify that all components are present upon unpacking:

- Philips HTL1193B/94 Soundbar Speaker
- Wired Subwoofer
- Remote Control (requires 1 AAA battery, not included)
- Power Adapter/Cable
- User Manual (this document)

- FM Antenna Wire



Figure 3.1: Philips HTL1193B/94 Soundbar and Subwoofer. This image displays the main soundbar unit and the accompanying wired subwoofer.

4. PRODUCT OVERVIEW

4.1 Soundbar Front Panel



Figure 4.1: Front view of the Philips HTL1193B/94 Soundbar. The display shows "RADIO" indicating current mode.

The front panel features the main display and touch controls.

4.2 Soundbar Rear Panel (Connections)

Philips HTL1193B

Powerful sound for any TV
with multiple connectivities



Figure 4.2: Connectivity options for Philips HTL1193B/94. Shows ports for Coaxial, Optical, USB, and Audio In.

- **Digital Coaxial In:** For connecting to devices with a coaxial digital audio output.
- **Digital Optical In:** For connecting to devices with an optical digital audio output.
- **AUX In (RCA type AUDIO-IN):** For connecting analog audio sources.
- **USB Port:** For playing MP3/WMA music from portable USB devices.
- **FM Antenna:** Connection for the included FM antenna.
- **Subwoofer Out:** Proprietary connector for the wired subwoofer.
- **AC Power In:** For connecting the power adapter.

4.3 Remote Control

The remote control provides full functionality for operating the soundbar. It requires one AAA battery (not supplied).

5. SETUP

5.1 Placement

Place the soundbar on a stable, flat surface directly in front of your television. Ensure there are no obstructions blocking the soundbar's speakers.

The subwoofer can be placed on the floor, ideally in a corner for optimal bass response. Ensure the rear port of the subwoofer is approximately 30cm away from any wall and free from obstructions.



Figure 5.1: Example placement of the Philips HTL1193B/94 Soundbar and Subwoofer in a living room environment.

5.2 Connecting to Your Television or Audio Source

Choose one of the following connection methods based on your TV's available outputs:

- **Optical Connection (Recommended):** Connect an optical cable (not supplied) from your TV's optical digital output to the soundbar's "Digital Optical In" port. This provides high-quality digital audio.
- **Coaxial Connection:** Connect a coaxial cable (not supplied) from your TV's coaxial digital output to the soundbar's "Digital Coaxial In" port.
- **AUX Connection:** Connect an RCA audio cable (not supplied) from your TV's analog audio output (usually red and white RCA jacks) to the soundbar's "AUX In" ports.

Note: Only one audio connection is needed. If multiple connections are made, select the desired input source on the soundbar.

5.3 Connecting the Subwoofer

Connect the proprietary cable from the wired subwoofer to the "Subwoofer Out" port on the soundbar. Ensure the connection is secure.

5.4 Power Connection

1. Connect the AC power adapter to the "AC Power In" port on the soundbar.
2. Plug the other end of the power adapter into a wall outlet.

6. OPERATING INSTRUCTIONS

6.1 Basic Operation

- **Power On/Off:** Press the **Power** button on the remote control or the soundbar.
- **Volume Control:** Use the **Volume +/-** buttons on the remote or soundbar to adjust the volume.
- **Mute:** Press the **Mute** button on the remote to temporarily silence the audio. Press again to unmute.
- **Source Selection:** Press the **Source** button on the remote or soundbar to cycle through available inputs (Optical, Coaxial, AUX, Bluetooth, USB, FM).

6.2 Bluetooth Pairing

To stream audio wirelessly from a Bluetooth-enabled device:

1. Press the **Source** button until "Bluetooth" is selected. The soundbar will enter pairing mode, indicated by a flashing Bluetooth icon or message on the display.
2. On your mobile device, enable Bluetooth and search for available devices.
3. Select "Philips HTL1193B/94" from the list. Once paired, the soundbar will indicate a successful connection.
4. You can now play audio from your device through the soundbar.

6.3 USB Playback

Insert a USB storage device containing MP3/WMA audio files into the USB port on the soundbar. The soundbar will automatically switch to USB mode and begin playback. Use the remote control for playback functions (play, pause, skip tracks).

6.4 FM Radio

To listen to FM radio:

1. Ensure the FM antenna is properly connected.
2. Press the **Source** button until "FM" is selected.
3. Use the tuning buttons on the remote to scan for stations.

6.5 Sound Modes and Settings

- **Virtual Surround Sound:** Activate this feature for an enhanced, immersive audio experience. Refer to the remote control for the specific button (e.g., "Surround").
- **Night Mode:** Reduces dynamic range to prevent sudden loud sounds, ideal for late-night listening. Refer to the remote control for the specific button (e.g., "Night Mode").
- **Audio Delay (Lip-Sync):** If audio and video are out of sync, use the "AUDIO DELAY +/-" function on the remote to adjust.
- **Bass/Treble Control:** Adjust bass and treble levels using the remote control for personalized sound.

7. MAINTENANCE

7.1 Cleaning

Unplug the soundbar and subwoofer from the power outlet before cleaning. Use a soft, dry, lint-free cloth to wipe the

surfaces. Do not use liquid cleaners, abrasive cleaners, or spray cleaners, as these may damage the finish or internal components.

7.2 Storage

If storing the unit for an extended period, unplug it from the power source and store it in a cool, dry place, away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

If you encounter issues with your soundbar, consult the following table before seeking professional service.

Problem	Possible Cause	Solution
No power	Power cable not connected securely.	Ensure the power cable is firmly plugged into the soundbar and a working wall outlet.
No sound	Incorrect input source selected. Volume too low or muted. Audio cables not connected properly.	Select the correct input source. Increase volume and check mute status. Verify all audio cables are securely connected.
Bluetooth pairing fails	Soundbar not in pairing mode. Device too far. Interference.	Ensure soundbar is in Bluetooth pairing mode. Move device closer. Turn off other Bluetooth devices.
Poor FM reception	Antenna not properly positioned or connected.	Adjust the position of the FM antenna. Ensure it is fully extended and connected.
Distorted sound	Volume too high. Poor audio source quality.	Reduce volume. Try a different audio source or improve source quality.

9. SPECIFICATIONS

- **Model:** HTL1193B/94
- **Speaker Type:** Soundbar with Wired Subwoofer
- **Audio Output:** 2.1 Channel
- **Total Power Output:** 80 Watts
- **Connectivity:** Bluetooth, Digital Coaxial In, Digital Optical In, AUX In, USB
- **Wireless Communication:** Bluetooth
- **Sound Enhancement:** Treble and Bass Control, Virtual Surround Sound, Night Mode
- **Control Method:** Remote, Touch
- **Soundbar Dimensions (W x H x D):** 865 x 67.8 x 85.5 mm (approx.)
- **Soundbar Weight:** 1.8 KG (approx.)
- **Subwoofer Dimensions (W x H x D):** 160 x 228 x 295 mm (approx.)
- **Subwoofer Weight:** 2.5 KG (approx.)
- **Power Source:** AC
- **Compatible Devices:** Mobiles, Tablets, Laptops, Computers, TV

10. WARRANTY AND SUPPORT

This Philips product is covered by a 1-year warranty from the date of purchase. For detailed warranty terms and conditions, please refer to the warranty card included with your product or visit the official Philips support website. For technical support, product registration, or to find service centers, please visit the Philips support website or contact your local Philips customer service.

Online Support: www.philips.com/support