

Energizer E300697700

Energizer Recharge Express Charger E300697700 Instruction Manual

Model: E300697700

INTRODUCTION

Thank you for choosing the Energizer Recharge Express Charger. This manual provides essential information for the safe and efficient use of your charger. Please read it thoroughly before operation and retain it for future reference.

This charger is designed to quickly and efficiently charge 1 to 4 NiMH AA or AAA rechargeable batteries. It features advanced safety mechanisms to protect both the batteries and the charger.

SAFETY INFORMATION

- Use only with NiMH (Nickel-Metal Hydride) AA and AAA rechargeable batteries. Do not attempt to charge alkaline, carbon-zinc, or any other battery types, as this may cause leakage, rupture, or explosion.
- Do not disassemble, modify, or short-circuit the charger or batteries.
- Avoid exposing the charger to rain, moisture, or extreme temperatures.
- Keep out of reach of children.
- Unplug the charger from the power outlet when not in use or before cleaning.
- If a battery becomes excessively hot during charging, discontinue use immediately.
- Do not use the charger if it is damaged.

PACKAGE CONTENTS

- 1 x Energizer Recharge Express Charger
- 4 x Energizer Recharge Universal AA NiMH 2300 mAh Batteries

PRODUCT FEATURES

- Charges 1 to 4 NiMH AA or AAA rechargeable batteries simultaneously.
- Ultra-fast charging: Delivers a full charge in one hour or less (actual time may vary based on NiMH battery type).
- Individual charging channels for maximum flexibility.
- Intuitive LED charge level indicator.
- Advanced safety features:
 - Delta V charge cut-off: Automatically stops charging when batteries are full to prevent overcharging.
 - Temperature control: Prevents damage from overheating.
 - Defective battery detection: Identifies and prevents charging of faulty batteries.
 - Non-rechargeable battery detection: Prevents charging of inappropriate battery types.
 - Short-circuit and reverse polarity protection.



Image: The charger is capable of charging two or four AA or AAA batteries simultaneously.

1. **Unpack the Charger:** Remove the charger and included batteries from the packaging.
2. **Connect to Power:** Plug the charger's power cord into a standard wall outlet. The LED indicator may briefly illuminate.
3. **Insert Batteries:** Insert 1 to 4 NiMH AA or AAA rechargeable batteries into the charging slots. Ensure correct polarity (+ and - ends) as indicated on the charger.



Image: The Energizer Recharge Express Charger with four AA batteries correctly inserted, displaying the blue charge indicator lights.

OPERATING INSTRUCTIONS

Charging Process

1. Once batteries are correctly inserted and the charger is plugged in, the charging process begins automatically.
2. The LED indicator will show the charging status.
3. When charging is complete, the charger will automatically stop.

LED Indicator Guide

- **Flashing Blue:** Charging in progress.
- **Solid Blue:** Charging complete.
- **Flashing Red:** Error detected (e.g., defective battery, non-rechargeable battery, incorrect polarity). Remove the battery and inspect it.

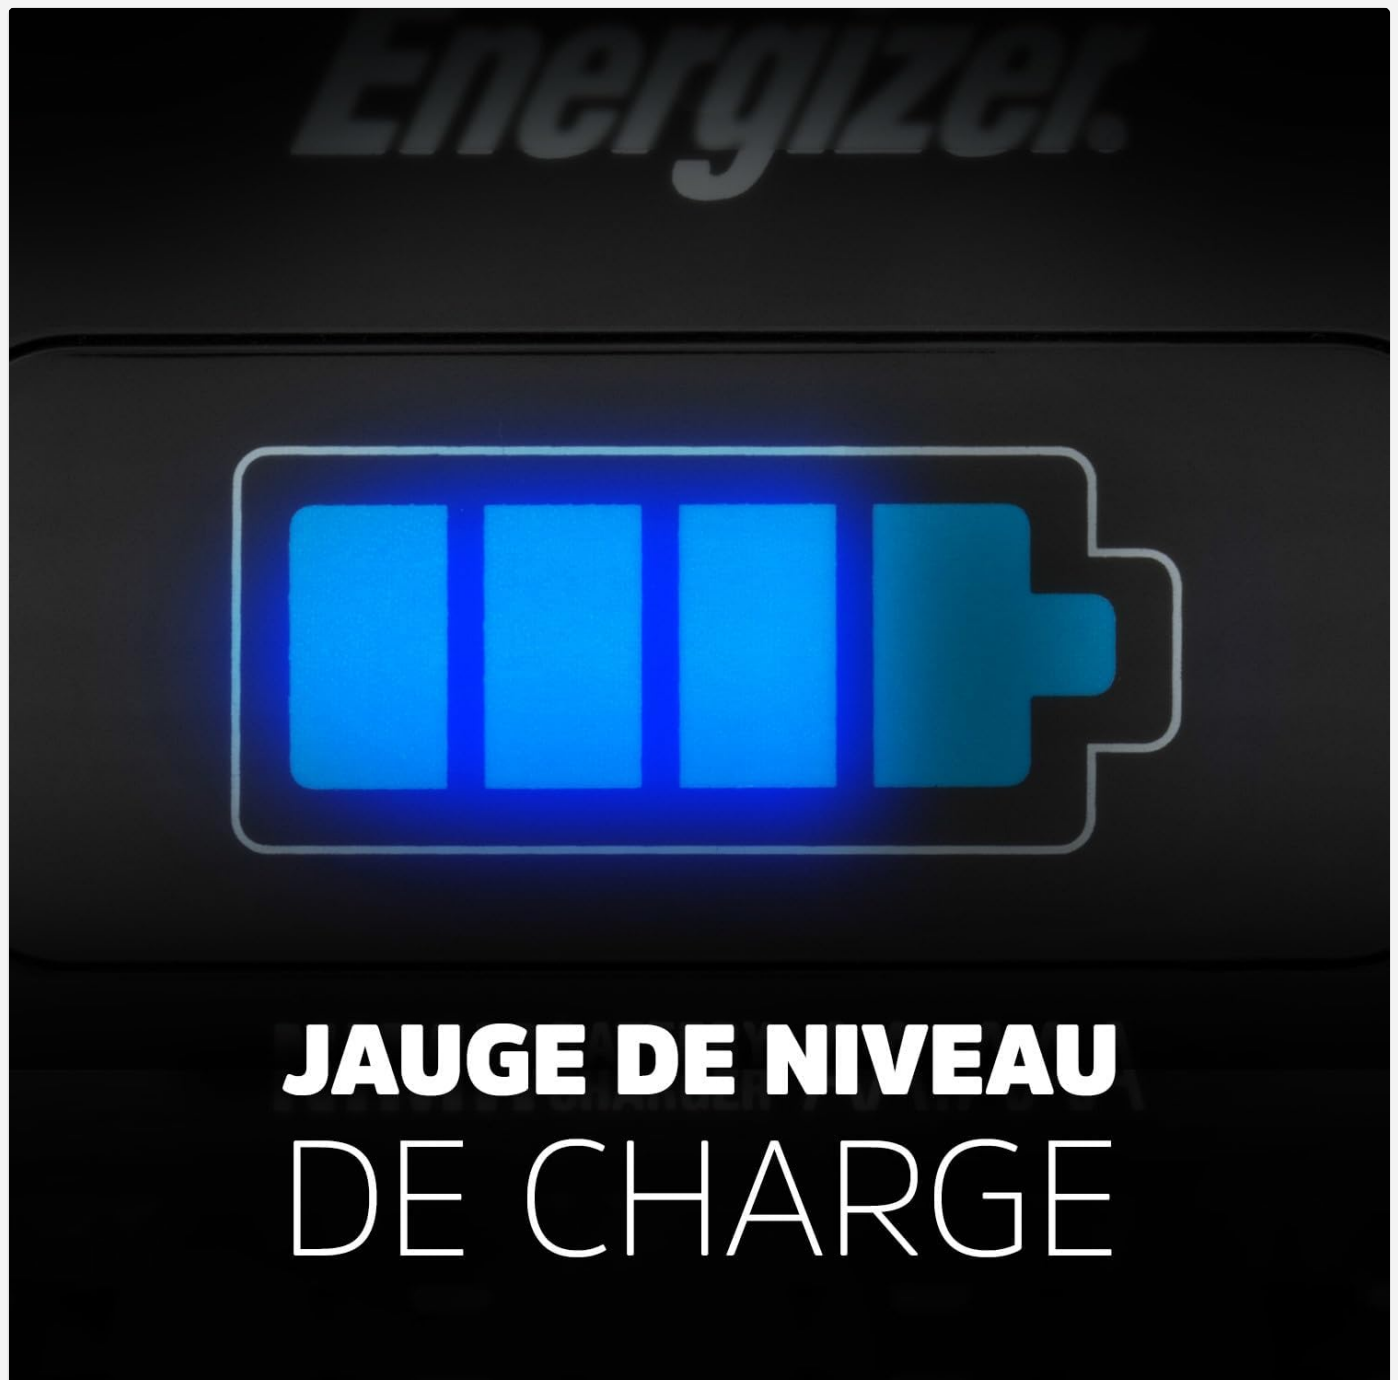


Image: The charger's LED display indicating the charge level with blue bars.



S'ARRÊTE
AUTOMATIQUEMENT
À LA FIN DE LA CHARGE



Image: The charger automatically stops charging when batteries are full, indicated by a power symbol and text.

MAINTENANCE

- **Cleaning:** Disconnect the charger from the power outlet before cleaning. Use a dry, soft cloth to wipe the exterior. Do not use liquid cleaners or solvents.
- **Storage:** Store the charger and batteries in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** For optimal performance and longevity, fully discharge and recharge NiMH batteries periodically.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Charger LED is flashing red.	Defective battery, non-rechargeable battery, or incorrect polarity.	Remove the battery. Check if it's a NiMH rechargeable battery and ensure correct polarity. If the issue persists with a known good battery, the charger may be faulty.
Batteries are not charging or charging slowly.	Batteries are old/worn out, charger not properly plugged in, or environmental temperature is too high/low.	Ensure the charger is securely plugged in. Try charging fewer batteries at a time. If batteries are very old, they may need replacement. Ensure the charger is in a room temperature environment.
Batteries get hot during charging.	Normal during fast charging, but excessive heat indicates a problem.	If batteries become excessively hot to touch, remove them immediately. This could indicate a defective battery. Ensure proper ventilation around the charger.
Batteries do not reach full charge when charging multiple simultaneously.	Variations in battery condition or charge level, or a specific charger characteristic.	If you suspect batteries are not fully charged, try charging them individually after the initial multi-battery charge cycle. This can ensure each battery reaches its maximum capacity.

Energizer®



NiMH BATTERY
CHARGER AA.AAA

DÉTECTE

LES PILES DÉFECTUEUSES

Image: The charger's detection system identifies and signals a defective battery.



PROTECTION CONTRE LA SURCHARGE ET LA SURCHAUFFE

Image: The charger provides protection against overcharge and overheating, ensuring battery safety.

SPECIFICATIONS

- **Model Number:** E300697700
- **Compatible Battery Types:** NiMH AA, NiMH AAA
- **Input Voltage:** (Not explicitly stated, but typically 100-240V AC)
- **Output Voltage:** 2 Volts (for each battery slot)
- **Charging Time:** Approximately 1 hour (for 2300 mAh AA batteries, may vary)
- **Dimensions (L x W x H):** 8.9 x 11 x 20.8 cm (3.5 x 4.3 x 8.2 inches)
- **Weight (Batteries):** 28 Grams (per AA battery)
- **Manufacturer:** Energizer
- **Country of Origin:** China

WARRANTY AND SUPPORT

Warranty: The product comes with a warranty. Please refer to the packaging or Energizer's official website for specific warranty terms and conditions. The availability of spare parts is indicated for 1 year.

Support: For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Energizer customer support through their official website or the contact information provided on the product packaging.

You can visit the official Energizer store for more information: [Energizer Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question