

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Kenwood](#) /

› [Kenwood kMix Freestanding Drip Coffee Maker, COX750BK, 6 cups, Caraffe 750 mL, Removable Coffee Filter, 1000 W, Black Black Single](#)

Kenwood COX750BK

Instruction Manual

KENWOOD kMix FREESTANDING DRIP COFFEE MAKER

Model: COX750BK

PRODUCT OVERVIEW

The Kenwood kMix Freestanding Drip Coffee Maker, model COX750BK, is designed to provide a personalized coffee experience. This appliance combines stylish design with practical functionality, making it an ideal addition to any kitchen. It features a 750 mL carafe, suitable for brewing up to six cups of coffee, and includes a removable coffee filter for ease of use and cleaning. The integrated heat plate ensures your coffee remains hot and flavorful after brewing.



Image: Front view of the Kenwood kMix Drip Coffee Maker (Model COX750BK). The coffee maker features a black top section with the "KENWOOD kMix" logo and control buttons (power, aroma control). The lower section is silver, housing a clear glass carafe with a black handle. The overall design is compact and modern.

SETUP AND FIRST USE

Unpacking

Carefully remove all packaging materials from the coffee maker. Ensure all components, including the main unit, glass carafe, and removable filter basket, are present and undamaged. Retain packaging for future storage or transport if needed.

Initial Cleaning

Before first use, clean all removable parts. Wash the glass carafe and the removable filter basket in warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the coffee maker with a damp cloth. Do not immerse the main unit in water.

Placement

Place the coffee maker on a stable, flat, heat-resistant surface, away from the edge of the countertop. Ensure there is adequate ventilation around the unit. Do not place it on or near a hot gas or electric burner, or in a heated oven.

First Brew Cycle (Cleaning Cycle)

1. Fill the water reservoir with fresh, cold water up to the 6-cup mark (750 mL).
2. Place the empty removable filter basket into its holder. Do not add coffee grounds for this cycle.
3. Ensure the glass carafe is correctly positioned on the heating plate.
4. Press the power button () to start a brewing cycle. Allow the full cycle to complete.
5. Discard the water from the carafe. Your coffee maker is now ready for use.

OPERATING INSTRUCTIONS

Brewing Coffee

1. Open the lid of the water reservoir and fill with fresh, cold water to your desired level, up to the 750 mL (6-cup) maximum.
2. Remove the filter basket and add your preferred amount of ground coffee. For best results, use medium-ground coffee. The removable filter eliminates the need for paper filters.
3. Place the filter basket back into its holder securely.
4. Ensure the glass carafe is placed correctly on the heating plate.
5. Press the power button () to begin the brewing process. The indicator light will illuminate.
6. Once brewing is complete, the coffee maker will automatically switch to the "keep warm" function. The heating plate will keep the coffee hot for a period of time.
7. To turn off the coffee maker, press the power button again.

Aroma Control Function

The Kenwood kMix coffee maker features an aroma control function, indicated by the button with "00" on the control panel. This function allows you to adjust the brewing process to achieve a stronger or milder coffee flavor according to your preference. Consult the specific instructions in your full manual for detailed usage of this feature, as it typically involves a slower brewing process to extract more flavor.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your coffee maker.

Daily Cleaning

- Always unplug the coffee maker and allow it to cool completely before cleaning.
- Remove the glass carafe and the removable filter basket. Wash them in warm, soapy water or place them in the top rack of a dishwasher if they are dishwasher-safe (refer to full product manual for confirmation).
- Wipe the exterior of the coffee maker, including the heating plate, with a soft, damp cloth. Do not use abrasive cleaners

or scouring pads.

- Dry all parts thoroughly before reassembling or storing.

Descaling

Mineral deposits from water can build up in your coffee maker over time, affecting performance and coffee taste.

Descaling should be performed regularly, depending on water hardness and frequency of use (e.g., every 2-4 months).

1. Prepare a descaling solution according to the descaler product instructions, or use a mixture of white vinegar and water (e.g., 1 part vinegar to 2 parts water).
2. Pour the solution into the water reservoir.
3. Place the empty carafe on the heating plate.
4. Run a brewing cycle. If using vinegar, stop the cycle halfway through and let it soak for 15-30 minutes before resuming.
5. After the cycle, discard the solution.
6. Run 2-3 cycles with fresh, clean water to rinse out any remaining descaling solution.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee does not brew.	No water in reservoir; unit not plugged in; power button not pressed.	Fill water reservoir; ensure unit is plugged into a working outlet; press the power button.
Coffee is too weak.	Not enough coffee grounds; coffee too coarsely ground; descaling needed.	Add more coffee grounds; use finer ground coffee; perform descaling procedure.
Coffee overflows from filter basket.	Too many coffee grounds; carafe not positioned correctly; filter clogged.	Reduce coffee grounds; ensure carafe is centered; clean filter basket and descaling if necessary.
Coffee tastes bad.	Unit needs cleaning/descaling; stale coffee; incorrect water temperature.	Clean and descale the unit; use fresh coffee beans; ensure proper water temperature (automatic).

SPECIFICATIONS

Brand	Kenwood
Model Name	COX750BK
Color	Black
Product Dimensions	10.24"D x 7.48"W x 12.6"H
Coffee Maker Type	Drip Coffee Machine
Filter Type	Reusable
Capacity	750 mL (6 cups)
Voltage	230 Volts
Item Weight	5.7 pounds

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Kenwood website. Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance or technical inquiries, please contact Kenwood customer service. Contact details can typically be found on the manufacturer's website or in the product packaging.

© 2024 Kenwood. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.