

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [KITCHEN MOVE](#) /
- › [KITCHEN MOVE LARGO 42L Automatic Kitchen Bin User Manual](#)

## KITCHEN MOVE BAT-42LS02A

# KITCHEN MOVE LARGO 42L Automatic Kitchen Bin

Model: BAT-42LS02A

## INTRODUCTION

---

Thank you for choosing the KITCHEN MOVE LARGO 42L Automatic Kitchen Bin. This manual provides essential information for the safe and efficient use of your new automatic bin. Please read these instructions carefully before use and retain them for future reference.

This automatic bin features a touchless infrared sensor for hygienic operation, a durable stainless steel body, and a matte grey finish designed to resist fingerprints. Its rectangular shape and 42-liter capacity make it suitable for various spaces, including kitchens and bathrooms.

## PRODUCT OVERVIEW

---

The KITCHEN MOVE LARGO automatic bin is designed for convenience and hygiene. Key components include:

- **Sensor Lid:** Automatic opening and closing via infrared sensor.
- **Stainless Steel Body:** Durable and anti-fingerprint matte grey finish.
- **Bag Retaining Ring:** Secures the trash bag in place.
- **Non-slip Base:** Provides stability and protects flooring.
- **Control Buttons:** For manual open/close and power.



Image: The KITCHEN MOVE LARGO 42L Automatic Kitchen Bin in matte grey stainless steel, positioned in a contemporary kitchen.



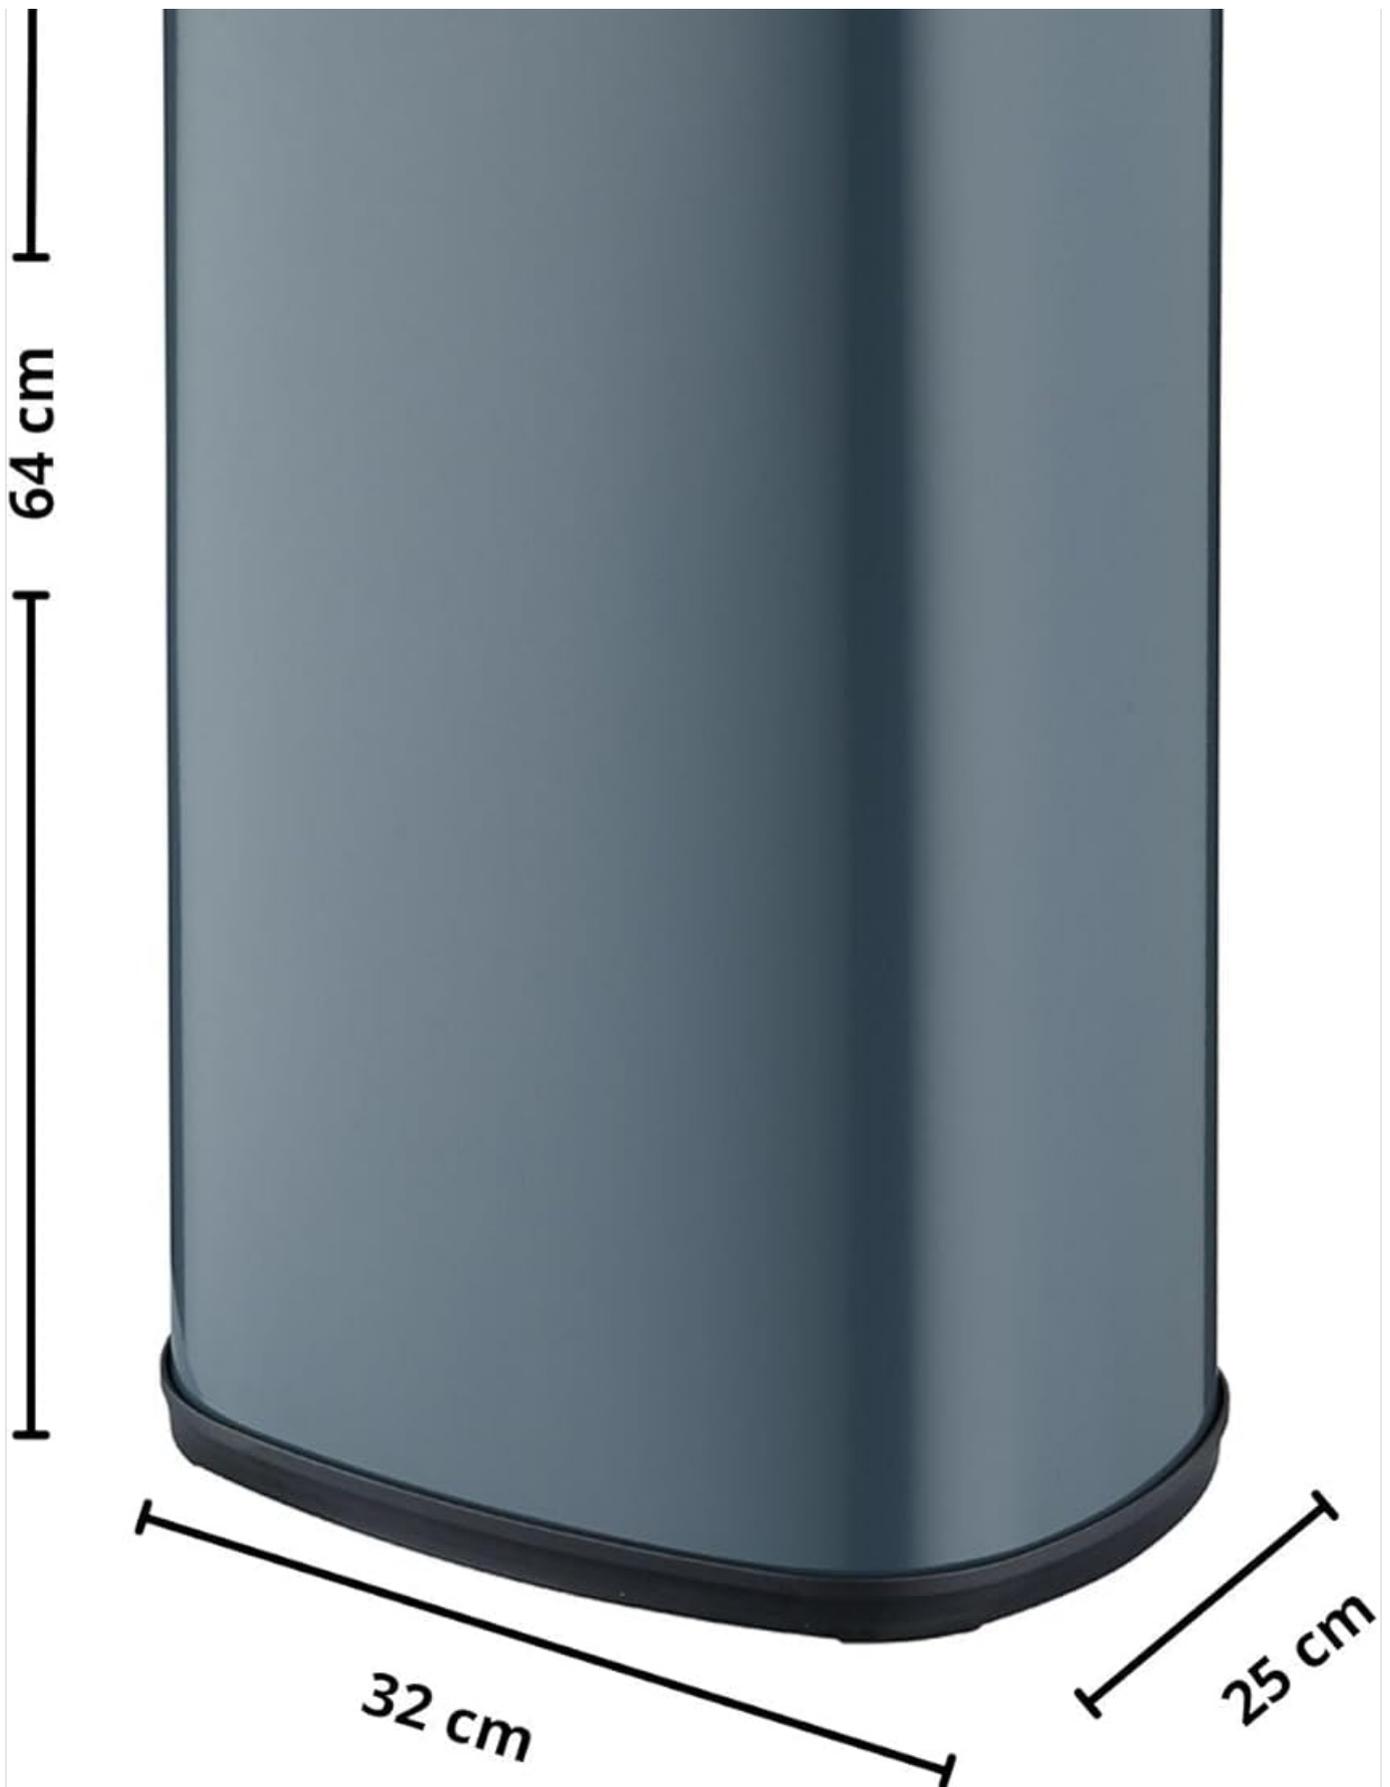


Image: Detailed dimensions of the KITCHEN MOVE LARGO 42L Automatic Kitchen Bin, showing a height of 64 cm, width of 32 cm, and depth of 25 cm.

## SETUP

1. **Unpack the Bin:** Carefully remove all packaging materials. Ensure all components are present: bin body, sensor lid, and

bag retaining ring.

2. **Install Batteries:** The sensor lid requires 4 x LR06 (AA) batteries (not supplied). Locate the battery compartment on the underside of the lid. Insert the batteries, ensuring correct polarity (+/-). Close the battery compartment securely.
3. **Attach Bag Retaining Ring:** Place a trash bag inside the bin. Secure the top edge of the trash bag by fitting the plastic retaining ring over it, ensuring the bag is held firmly in place and does not slip.
4. **Place the Lid:** Carefully place the sensor lid onto the bin body, ensuring it sits flush and is properly aligned.
5. **Position the Bin:** Place the bin on a flat, stable surface. The non-slip base will help protect your flooring. Ensure there is enough clearance above the sensor for proper operation (approximately 15 cm).

## OPERATING INSTRUCTIONS

---

### Automatic Sensor Operation

The bin features an infrared sensor for hands-free operation, promoting hygiene and convenience.

- **To Open:** Wave your hand or an object approximately 15 cm above the sensor located on the lid. The lid will open automatically.
- **To Close:** The lid will automatically close after a few seconds of inactivity.

### Manual Operation

For extended opening or specific tasks, you can use the manual control buttons.

- **OPEN Button:** Press the "OPEN" button on the lid to keep the lid open indefinitely.
- **CLOSE Button:** Press the "CLOSE" button to close the lid when it is in the manually opened position.

The lid features a silent closing mechanism and an anti-odor seal to minimize unpleasant smells.

## MAINTENANCE

---

Regular cleaning and proper care will ensure the longevity and optimal performance of your KITCHEN MOVE LARGO bin.

- **Cleaning the Body:** Wipe the stainless steel body with a soft, damp cloth and a mild detergent. Avoid abrasive cleaners or scouring pads, as these can damage the matte finish. The anti-fingerprint coating helps reduce visible smudges.
- **Cleaning the Lid:** The ABS lid can be cleaned with a soft, damp cloth. Do not immerse the lid in water, as this can damage the electronic components.
- **Battery Replacement:** When the sensor operation becomes slow or inconsistent, replace all 4 AA batteries with new ones. Ensure correct polarity.
- **Sensor Care:** Keep the infrared sensor clean and free from obstructions. Gently wipe it with a dry, soft cloth if dust accumulates.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Lid does not open automatically.	Batteries are dead or incorrectly installed. Sensor is dirty or obstructed. Power switch is OFF.	Replace batteries, ensuring correct polarity. Clean the sensor with a soft, dry cloth. Ensure the power switch on the lid is in the ON position.

Problem	Possible Cause	Solution
Lid opens or closes slowly.	Low battery power.	Replace batteries.
Lid does not close completely.	Obstruction preventing closure. Bag retaining ring or trash bag is misaligned.	Check for any objects blocking the lid's path. Adjust the trash bag and retaining ring to ensure they do not interfere with the lid mechanism.
Unpleasant odors persist.	Bin or lid requires cleaning. Trash bag is not properly sealed by the retaining ring.	Clean the bin and lid thoroughly as per maintenance instructions. Ensure the trash bag is correctly fitted and secured by the retaining ring to create an effective seal.

## SPECIFICATIONS

Brand	KITCHEN MOVE
Model Number	BAT-42LS02A
Color	Matte Grey
Capacity	42 Liters
Material	Stainless Steel (Body), ABS (Lid)
Dimensions (L x W x H)	32 x 25 x 64 cm
Item Weight	2.5 Kilograms
Opening Mechanism	Motion Sensor
Power Source	4 x LR06 (AA) Batteries (not included)
Recommended Use	Kitchen, Bathroom
Special Feature	Lid, Anti-fingerprint, Silent Close, Odor Seal

## WARRANTY AND SUPPORT

Specific warranty information for the KITCHEN MOVE LARGO 42L Automatic Kitchen Bin is not available in the provided product details. For warranty claims or technical support, please contact KITCHEN MOVE customer service directly or refer to your purchase documentation.

Information regarding the availability of spare parts is currently unavailable.