

[Manuals.plus](#) /

> [BOMAZ](#) /

> BOMAZ Replacement Remote Control Instruction Manual for Panasonic Blu-Ray Disc Players DMP-BD70V, DMP-BD70, DMP-BD605K, DMP-BD601K

BOMAZ DMP-BD70V, DMP-BD70, DMP-BD605K, DMP-BD601K

BOMAZ Replacement Remote Control Instruction Manual

For Panasonic Blu-Ray Disc Players: DMP-BD70V, DMP-BD70, DMP-BD605K, DMP-BD601K

1. INTRODUCTION

This manual provides instructions for the BOMAZ replacement remote control, designed for use with various Panasonic Blu-Ray Disc Player models. This remote offers a convenient and functional alternative to your original remote control. No programming is required; simply insert batteries and begin use.

2. PRODUCT OVERVIEW

The BOMAZ replacement remote control is a direct functional substitute for the original remote controls of compatible Panasonic Blu-Ray Disc Players. It features a standard layout for easy navigation and control of your device.





Image 1: Front view of the BOMAZ Replacement Remote Control. The remote is black with clearly labeled buttons for power, input selection, volume, channel, numeric keypad, playback controls (stop, pause, play, skip), menu navigation, and various function buttons specific to Blu-Ray player operation.

Button Functions:

- **POWER (Red Button):** Turns the Blu-Ray Disc Player on or off.
- **TV POWER (Top Right):** Controls the power of a connected television.
- **INPUT:** Selects the input source on the television.
- **VOL +/- (TV/RECEIVER):** Adjusts the volume for the TV or connected receiver.

- **CH +/- (TV):** Changes channels on the television.
- **Numeric Keypad (0-9):** Used for direct track selection or inputting numbers.
- **CANCEL (*):** Cancels current operation or input.
- **0-, (#):** Additional numeric input or special functions.
- **VIERA CAST:** Accesses Panasonic's smart TV platform (if supported by the player).
- **AUDIO:** Selects audio tracks or modes.
- **SKIP (<< / >>):** Skips backward or forward through tracks/chapters.
- **SLOW/SEARCH (<< / >>):** Controls slow motion playback or search functions.
- **STOP (■), PAUSE (II), PLAY (▶):** Standard media playback controls.
- **STATUS:** Displays current status information.
- **EXIT:** Exits current menu or screen.
- **POP-UP MENU:** Accesses the disc's pop-up menu.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates through menus and confirms selections.
- **DIRECT NAVIGATOR / TOP MENU:** Accesses the main menu of the disc or player.
- **FUNCTION MENU:** Accesses additional player functions.
- **SUB MENU:** Accesses sub-menus.
- **RETURN (↵):** Returns to the previous screen or menu.
- **Color Buttons (S, R, G, B, Y):** Red, Green, Blue, Yellow buttons for specific functions as indicated on screen or by the player.
- **SETUP:** Accesses the player's setup menu.
- **PIP:** Picture-in-Picture function (if supported).
- **DISPLAY:** Toggles on-screen display information.
- **DRIVE SELECT:** Selects the drive (if multiple are present).

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open.
3. Insert two (2) AA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.

Note: This remote control does not require any programming. It is ready for use immediately after battery installation.

4. BASIC OPERATION

Point the remote control directly at the Panasonic Blu-Ray Disc Player. Ensure there are no obstructions between the remote and the player.

- **Power On/Off:** Press the red **POWER** button to turn the Blu-Ray Disc Player on or off.
- **Disc Playback:** Insert a disc into the player. Use the **PLAY (▶)** button to start playback.
- **Pausing/Stopping:** Press **PAUSE (II)** to temporarily stop playback, and **STOP (■)** to end playback.
- **Navigation:** Use the **Up, Down, Left, Right** arrows on the navigation pad to move through menus and selections. Press **OK** to confirm.

- **Menu Access:** Use **POP-UP MENU** or **TOP MENU** to access disc or player menus.
- **Volume Control:** Use the **VOL +/-** buttons to adjust the volume of your connected TV or receiver.

5. TROUBLESHOOTING

Remote Control Not Responding:

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace old or depleted batteries with new AA batteries.
- **Line of Sight:** Verify that there is a clear path between the remote control and the Blu-Ray Disc Player's infrared sensor. Remove any obstructions.
- **Operating Distance:** The remote has an operable distance of more than 8 meters. Ensure you are within this range.
- **Player Power:** Confirm that the Blu-Ray Disc Player is powered on and functioning correctly.

Specific Functions Not Working:

- Some advanced functions (e.g., VIERA CAST, PIP) depend on the specific features of your Panasonic Blu-Ray Disc Player model. Refer to your player's original manual for compatibility.

6. SPECIFICATIONS

- **Brand:** BOMAZ
- **Compatible Models:** Panasonic DMP-BD70V, DMP-BD70, DMP-BD605K, DMP-BD601K Blu-Ray Disc Players
- **Material:** ABS Material
- **Battery Type:** 2 x AA Batteries (not included)
- **Operable Distance:** More than 8 meters
- **Connectivity Technology:** Infrared
- **Dimensions:** Approximately 9.57 x 4.92 x 1.38 inches (Package Dimensions)
- **Item Weight:** Approximately 3.87 ounces

7. WARRANTY AND SUPPORT

7.1 Warranty Information

This BOMAZ replacement remote control comes with a **90-day warranty** from the date of purchase. This warranty covers manufacturing defects and ensures the remote functions as described.

7.2 Customer Support

If you encounter any issues with your remote control or have questions not covered in this manual, please contact the seller directly through your purchase platform. Provide your order details for prompt assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0757JDLY4>

More documents and user manuals: <https://manuals.plus/>