

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [BALMUDA](#) /

> [BALMUDA The Range K04A-WH White Oven Microwave Instruction Manual](#)

BALMUDA K04A-WH

BALMUDA The Range K04A-WH White Oven Microwave Instruction Manual

Model: K04A-WH

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your BALMUDA The Range K04A-WH oven microwave. Please read it thoroughly before using the appliance and keep it for future reference.

2. SAFETY INSTRUCTIONS

To ensure safe operation and prevent damage, observe the following precautions:

- Always connect the appliance to a grounded outlet.
- Do not operate the oven if the door seal is damaged or if the door does not close properly.
- Do not heat sealed containers, as they may explode.
- Use only microwave-safe cookware for microwave functions.
- Ensure adequate ventilation around the appliance.
- Products sold by "BALMUDA Inc." are genuine. Genuine support may not be available for non-genuine products. Please be aware.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your BALMUDA The Range K04A-WH.



Figure 3.1: Front View. This image displays the front of the BALMUDA The Range K04A-WH in white, featuring the control panel, display, and door handle.



Figure 3.2: Appliance in Use. The oven microwave is shown on a kitchen counter, with its display illuminated and controls visible.



Figure 3.3: Interior Capacity. An internal view of the oven cavity, illustrating its capacity of 18 liters and approximate dimensions (Width 450mm, Height 330mm).



Figure 3.4: Mode Dial. A close-up of the control dial used to select between automatic, microwave, and oven functions.



Figure 3.5: **Start/OK Dial.** A detailed view of the Start/OK dial, which is used to confirm selections and begin cooking.

4. SETUP

4.1 Unpacking

- Carefully remove the appliance from its packaging.
- Check for any damage during transit. Do not use if damaged.
- Remove all packing materials, including any protective films or tapes.

4.2 Placement

- Place the oven microwave on a stable, level surface capable of supporting its weight.
- Ensure sufficient clearance around the appliance for proper ventilation (minimum 10 cm on sides and back, 30 cm above).
- Do not place near heat sources or in direct sunlight.

4.3 Power Connection

- Plug the power cord into a dedicated 100V, 50/60Hz grounded electrical outlet.
- Do not use extension cords or adapters.

5. OPERATING INSTRUCTIONS

5.1 Control Panel Overview

The control panel consists of a mode dial, a display, and a Start/OK dial with a Cancel/Setting button.

5.2 Microwave Functions

Use the mode dial to select a microwave function. The display will show available options.

- **Automatic Reheat:** For general reheating of food. The oven detects the food's temperature and adjusts heating time.
- **Manual Reheat:** Allows you to set the heating time and power level manually.
- **Beverages:** Optimized for heating drinks.
- **Frozen Rice:** Specific setting for reheating frozen rice.
- **Defrost:** For thawing frozen food.

5.3 Oven Functions

Use the mode dial to select the oven function. The display will show temperature and time settings.

- **Temperature Control:** Set temperatures from 100°C to 250°C in 10°C increments. For temperatures between 210°C and 250°C, the oven operates for approximately 3 minutes before automatically switching to 200°C.
- **Preheat:** Heats the oven to the desired temperature before cooking.
- **No Preheat:** Starts cooking immediately without preheating.
- **Fermentation:** Maintains a constant temperature of 40°C for dough proofing.



Figure 5.1: Oven Tray. This image shows the included black oven tray. Note the embossed text indicating it is not suitable for microwave use.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance ensure optimal performance and longevity of your appliance.

6.1 Exterior Cleaning

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners, solvents, or spray cleaners directly on the appliance.

6.2 Interior Cleaning

- After each use, wipe the interior with a damp cloth to remove food splatters.
- For stubborn stains, use a mild detergent and warm water. Rinse thoroughly and dry.
- The oven tray can be washed with dish soap and water.

6.3 Care of Accessories

- Clean the oven tray and any other accessories after each use.
- Ensure all accessories are dry before placing them back into the oven.

7. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Appliance does not turn on	Power cord not properly plugged in; Power outage	Check power cord connection; Check household circuit breaker
Food not heating evenly	Incorrect power level or time setting; Food placed improperly	Adjust settings; Rearrange food for better heat distribution
Unusual noise during operation	Normal operation sound; Loose internal component	Some operational sounds are normal; If persistent or loud, contact customer support
Error code displayed (e.g., E04)	Internal malfunction	Unplug the unit for a few minutes, then plug back in. If the error persists, contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	BALMUDA
Model Number	K04A-WH
Color	White
Material	Stainless Steel
Product Dimensions (W x D x H)	45 cm x 41.2 cm x 33 cm
Internal Dimensions (W x D x H)	353 mm x 293 mm x 168 mm
Capacity	18 Liters
Voltage	100 V
Wattage	1270 W
Oven Temperature Control	40°C (Fermentation), 100-250°C (10°C increments)
Range Functions	Automatic Reheat, Manual Reheat, Beverages, Frozen Rice, Defrost
Oven Functions	Preheat, No Preheat, Fermentation
Product Weight	12 kg
First Available Date	2017/09/05

9. WARRANTY AND SUPPORT

Your BALMUDA The Range K04A-WH comes with a warranty. Please refer to the included warranty card for details regarding coverage and duration. Keep your proof of purchase for warranty claims.

Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty service, please contact BALMUDA customer support. Contact information can typically be found on the warranty card or the official BALMUDA website.

