

Cecotec Conga EcoExtreme 3000

Cecotec Conga EcoExtreme 3000 Bagless Vacuum Cleaner User Manual

Model: Conga EcoExtreme 3000 | Brand: Cecotec

1. INTRODUCTION

Thank you for choosing the Cecotec Conga EcoExtreme 3000 Bagless Vacuum Cleaner. This manual provides essential information for the safe and efficient use, maintenance, and troubleshooting of your appliance. Please read these instructions carefully before first use and keep them for future reference.

2. SAFETY INSTRUCTIONS

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Ensure the power supply voltage matches the rating label on the vacuum cleaner.
- Do not use the vacuum cleaner on wet surfaces or to pick up liquids.
- Do not pick up flammable or combustible materials, hot ashes, or sharp objects.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Unplug from the electrical outlet when not in use and before cleaning or servicing.
- Do not operate the vacuum cleaner with a damaged cord or plug.
- This appliance is for household use only.

3. PRODUCT COMPONENTS

Familiarize yourself with the main parts of your Cecotec Conga EcoExtreme 3000 vacuum cleaner and its accessories.



Image 3.1: The Cecotec Conga EcoExtreme 3000 vacuum cleaner shown with its main body, dust container, and included accessories: a crevice tool, a small brush, a multi-surface floor nozzle, and an AirBrush for pet hair.

- **Main Unit:** Contains the motor, dust container, and filters.
- **Flexible Hose:** Connects the main unit to the telescopic tube.
- **Telescopic Metallic Tube:** Adjustable length for comfortable cleaning.
- **Floor Nozzle:** For general floor cleaning (carpets and hard floors).
- **AirBrush:** High-speed rotating brush for deep cleaning carpets and removing pet hair.
- **Crevice Tool:** For narrow spaces and corners.
- **Upholstery Tool/Small Brush:** For furniture, curtains, and delicate surfaces.
- **Power Cord:** With automatic cable collector.

4. SETUP

Follow these steps to assemble your vacuum cleaner before first use.

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Attach Flexible Hose:** Insert the flexible hose into the suction inlet on the main unit until it clicks securely into place.

3. **Assemble Telescopic Tube:** Connect the telescopic metallic tube to the handle of the flexible hose. Adjust the length by pressing the release button and sliding the tube to your desired height.
4. **Attach Floor Nozzle:** Connect the desired floor nozzle (e.g., main floor nozzle or AirBrush) to the end of the telescopic tube. Ensure it is firmly attached.
5. **Power Connection:** Extend the power cord from the automatic cable collector and plug it into a suitable electrical outlet.



Image 4.1: The vacuum cleaner fully assembled with the flexible hose, telescopic tube, and floor nozzle attached, ready for use.

5. OPERATING INSTRUCTIONS

Learn how to effectively use your vacuum cleaner for various cleaning tasks.

5.1 Power On/Off and Suction Control

1. **Power On:** Press the power button located on the main unit to turn on the vacuum cleaner.
2. **Adjust Suction:** The vacuum features Smart Power Regulation with two modes:
ECO Mode:
For hard floors and energy saving.

TURBO Mode:

For carpets, rugs, and maximum suction power. Select the appropriate mode using the control buttons on the unit.

3. **Power Off:** Press the power button again to turn off the vacuum cleaner.



Image 5.1: A hand operating the power and mode selection buttons on the vacuum cleaner's main unit, indicating the ease of switching between ECO and TURBO modes.

5.2 Using Attachments

- **Floor Nozzle:** Ideal for daily cleaning of various floor types.
- **AirBrush:** Attach this rotating brush for effective removal of embedded dirt and pet hair from carpets and upholstery.
- **Crevice Tool:** Use for cleaning tight corners, edges, and narrow gaps.
- **Upholstery Tool:** Suitable for cleaning sofas, chairs, and other fabric surfaces.



Image 5.2: The vacuum cleaner in use, demonstrating the cleaning of a sofa with an upholstery tool, highlighting its suitability for homes with pets.



Image 5.3: The crevice tool being used to clean dust and debris from a narrow window sill, showcasing its utility for hard-to-reach areas.

5.3 Parking Position

The vacuum cleaner features a Parking Position, allowing you to vertically secure the metallic tube to the main unit for convenient storage or temporary breaks during cleaning.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

6.1 Emptying the Dustbin

The 3.5 L dust container should be emptied regularly, especially when the 'MAX' indicator is reached, to maintain suction power.

1. Ensure the vacuum cleaner is unplugged.
2. Press the dustbin release button and carefully remove the dust container from the main unit.
3. Position the dustbin over a waste bin. Open the bottom lid of the dustbin and shake out the contents.
4. Close the lid securely and reattach the dust container to the vacuum cleaner until it clicks into place.



Image 6.1: A person demonstrating the process of emptying the transparent dust container into a waste bin, highlighting the bagless design and easy disposal.

6.2 Cleaning Filters

The vacuum cleaner is equipped with a 5-phase professional air filter system, including a HEPA filter, which captures 99.98% of dirt. Regular cleaning of filters is crucial.

- **Pre-filters:** These can usually be rinsed with water. Ensure they are completely dry before reinserting.
- **HEPA Filter:** Tap gently to remove dust. Do not wash the HEPA filter unless specified in the product documentation. Replace the HEPA filter periodically as recommended (typically every 6-12 months depending on usage).

6.3 Cleaning Brushes and Attachments

Remove any tangled hair, threads, or debris from the floor nozzle and AirBrush. Wipe attachments with a damp cloth if necessary.

7. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
No power	Not plugged in; power outlet fault; damaged cord/plug.	Check plug connection; test outlet with another appliance; contact service if cord/plug is damaged.
Loss of suction	Full dustbin; clogged filters; blocked hose/attachments.	Empty dustbin; clean/replace filters; check hose and attachments for blockages.
Unusual noise	Blockage in brush roll or hose; foreign object in fan; motor issue.	Clear blockages; inspect for foreign objects; contact service if motor noise persists.
Brush roll not spinning	Tangled debris; belt broken (if applicable); brush roll motor issue.	Remove tangled debris; check for belt damage; contact service.

8. SPECIFICATIONS

Feature	Detail
Brand	Cecotec
Model Name	Conga EcoExtreme 3000
Model Number	14540887 / 05068
Color	Black
Product Dimensions (L x W x H)	28.5 x 32.5 x 45.7 cm
Weight	7.12 Kilograms
Dust Container Capacity	3.5 Liters
Power	700 Watts
Material	Plastic
Number of Speeds	2 (ECO, TURBO)
Energy Class	A+++
Noise Level	78 dB
Special Features	HEPA Filter, Lightweight, Bagless, Multi-cyclonic, Animal Care
Filter Type	Fabric (HEPA)
Power Source	Corded Electric
Cordless	No
Included Components	Vacuum cleaner, Brushes, Filter, User Manual
Spare Parts Availability	10 Years





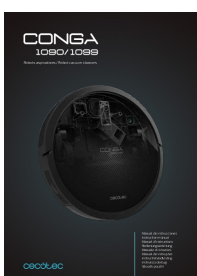
9. WARRANTY AND SUPPORT

Cecotec products are manufactured to high-quality standards. In the unlikely event of a defect arising from faulty materials or workmanship, your product is covered by a warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

For technical assistance, spare parts, or warranty claims, please contact Cecotec customer support through their official website or the contact information provided in your product packaging. When contacting support, please have your model name (Conga EcoExtreme 3000) and model number (14540887 or 05068) ready.

© 2023 Cecotec. All rights reserved.

Related Documents - Conga EcoExtreme 3000

	<p>Cecotec Conga Robot Vacuum Cleaners: Ultra-Powerful & Smart Cleaning Solutions</p> <p>Explore the advanced range of Cecotec Conga robot vacuum cleaners, featuring ultra-powerful suction, intelligent navigation, and versatile 4-in-1 cleaning capabilities for a spotless home.</p>
	<p>Cecotec Conga Rockstar 3000 Advance ErgoWet: Посібник користувача</p> <p>Повний посібник користувача для пилососа Cecotec Conga Rockstar 3000 Advance ErgoWet. Дізнайтеся про функції, експлуатацію, обслуговування та усунення несправностей.</p>
	<p>Cecotec Conga 3890 Ultra Robot Vacuum Manual</p> <p>Comprehensive user manual for the Cecotec Conga 3890 Ultra robot vacuum, covering safety instructions, installation, operation, maintenance, and troubleshooting.</p>
	<p>Cecotec Conga 1090/1099 Robotstøvsuger Brugermanual</p> <p>Denne brugermanual giver detaljeret vejledning til opsætning, betjening, vedligeholdelse og fejlfinding af Cecotec Conga 1090 og 1099 robotstøvsugere, og sikrer optimal ydeevne og levetid for produktet.</p>
	<p>Cecotec Conga 1090/1099 Robot Vacuum Cleaner Manual</p> <p>Comprehensive user manual for the Cecotec Conga 1090 and 1099 series robot vacuum cleaners, covering safety instructions, components, operation, maintenance, and troubleshooting.</p>



Manual de Instrucciones Cecotec Conga Gyro Home Robot Aspirador

Lea las instrucciones de seguridad y funcionamiento del robot aspirador Cecotec Conga Gyro Home. Incluye guía de instalación, mantenimiento y solución de problemas.