

BALMUDA K04A-SU

BALMUDA The Range Oven Range Instruction Manual

Model: K04A-SU

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation of your BALMUDA The Range Oven Range. Please read this manual thoroughly before first use and keep it for future reference. This appliance is designed to simplify your cooking experience with its intuitive controls and versatile functions, including microwave heating and conventional oven cooking.

SAFETY INFORMATION

Important Safeguards

- Always place the appliance on a stable, level, heat-resistant surface.
- Ensure adequate ventilation around the appliance. Do not block any ventilation openings.
- Do not operate the appliance with an empty oven cavity.
- Do not use metal containers or foil in microwave mode, as this can cause arcing.
- Always use oven mitts when handling hot dishes or trays from the oven.
- Keep children away from the appliance during operation and cooling.
- Do not attempt to repair or modify the appliance yourself. Contact qualified service personnel for any repairs.
- Unplug the appliance from the power outlet when not in use or before cleaning.

PARTS AND COMPONENTS

Front View



Front view of the BALMUDA The Range oven.

The front of the BALMUDA The Range features a sleek design with a large viewing window, a control dial for selecting modes, a display panel, and a start/cancel button. The integrated handle provides easy access to the oven cavity.

Rear View



Side view of the BALMUDA The Range oven, showing the rear label with specifications.

The rear of the appliance includes ventilation grilles and the power cord connection. Ensure these areas are not obstructed to allow for proper airflow.

Interior and Accessories



The black oven tray accessory for the BALMUDA The Range.

The interior cavity is designed for optimal cooking performance. The appliance comes with a flat oven tray, suitable for oven cooking. Note that this tray is not for microwave use.

SETUP

Unpacking

Carefully remove the appliance and all packaging materials from the box. Retain packaging for future transport or storage if needed.

Placement



Diagram illustrating the dimensions and capacity of the BALMUDA The Range.

Place the oven range on a flat, stable, and heat-resistant surface. Ensure there is at least 10 cm (4 inches) of clearance on the sides and back, and 30 cm (12 inches) above the appliance for proper ventilation. Avoid placing it near heat sources or in direct sunlight.

OPERATING INSTRUCTIONS

Control Panel Overview



Close-up of the control dial and display panel of the BALMUDA The Range.

The BALMUDA The Range features an intuitive control dial and two buttons: 'Cancel' and 'Start/OK'. The dial allows you to select between microwave modes (Auto, Manual, Beverages, Frozen Rice, Defrost) and oven modes (Preheat, No Preheat, Fermentation). The display shows selected mode, temperature, and time.

Microwave Functions

- **Automatic Heating:** Place food in a microwave-safe container. Turn the dial to 'Auto'. The appliance will detect the food's weight and automatically determine the optimal heating time. Press 'Start/OK'.
- **Manual Heating:** Turn the dial to 'M' (Manual). Select the desired power level (e.g., 600W, 500W) and heating time using the dial. Press 'Start/OK'.
- **Beverages:** Select 'Beverages' mode. The appliance will heat drinks to an appropriate temperature. Press 'Start/OK'.
- **Frozen Rice:** Select 'Frozen Rice' mode. This mode is optimized for reheating frozen rice. Press 'Start/OK'.
- **Defrost:** Select 'Defrost' mode. Enter the weight of the food to be defrosted. The appliance will calculate the defrosting time. Press 'Start/OK'.

Oven Functions



The BALMUDA The Range in a kitchen setting, with the interior light on during operation.

- **Preheat:** Turn the dial to 'Oven'. Select the desired temperature (100°C to 250°C). Press 'Start/OK' to begin preheating. The appliance will chime when the target temperature is reached.
- **No Preheat:** For dishes that do not require preheating, select 'No Preheat' mode. Set the temperature and cooking time. Press 'Start/OK'.
- **Fermentation:** Select 'Fermentation' mode (40°C). This mode is ideal for dough proofing. Set the desired time. Press 'Start/OK'.

When using oven functions, ensure the oven tray is properly inserted.

MAINTENANCE AND CARE

Cleaning the Interior

After each use, wipe the interior with a damp cloth and mild detergent. For stubborn stains, use a non-abrasive cleaner. Do not use abrasive pads or harsh chemicals.

Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. Do not spray water directly onto the appliance.

Oven Tray

The oven tray can be washed with warm soapy water. Ensure it is completely dry before reinserting.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Appliance does not turn on	Power cord not securely plugged in; Circuit breaker tripped.	Check if the power cord is securely plugged into a working outlet. Ensure the circuit breaker has not tripped.
Food is not heated evenly in microwave mode	Food not placed centrally; Uneven food distribution.	Ensure food is placed centrally. Stir or rotate food halfway through cooking. Use microwave-safe dishes.
Oven not reaching desired temperature	Oven door not fully closed; Insufficient preheating time.	Ensure the oven door is fully closed. Allow sufficient preheating time. Do not open the door frequently during cooking.
Unusual noises during operation	Normal operational sounds; Internal component issue.	Some operational sounds are normal (e.g., fan, magnetron). If sounds are excessively loud or unusual, contact customer support.

SPECIFICATIONS

Feature	Detail
Manufacturer	BALMUDA
Model Number	K04A-SU
Package Dimensions	49.2 x 43.2 x 37.2 cm
Material	Stainless Steel
Color	stainless
Size	1 unit
Wattage	1270 W
Other Functions	Warranty, Defrost
Voltage	100 Volts
Package Weight	14.76 kg
Batteries Required	No
Batteries Included	No
Capacity	18 Liters
Item Weight	12 kg
ASIN	B075885F8Y
Average Customer Rating	4.1 out of 5 stars
Product Dimensions	41.2D x 45W x 33H cm

WARRANTY AND SUPPORT

Your BALMUDA The Range Oven Range is covered by a manufacturer's warranty. Please refer to the included warranty card for specific terms and conditions. For technical support, service, or inquiries, please visit the official BALMUDA website or contact their customer service.

© 2024 BALMUDA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question