

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Invicta](#) /

› [Invicta S1 Rally 25282 Chronograph Watch User Manual](#)

## Invicta 25282

# Invicta S1 Rally Model 25282 Chronograph Watch User Manual

Your guide to setup, operation, and maintenance.

## 1. INTRODUCTION

---

Congratulations on your purchase of the Invicta S1 Rally Model 25282 Chronograph Watch. This manual provides detailed instructions for the proper setup, operation, and maintenance of your timepiece. Please read this manual thoroughly to ensure optimal performance and longevity of your watch.

## 2. PRODUCT OVERVIEW

---

The Invicta S1 Rally Model 25282 is a men's chronograph watch featuring a black carbon fiber dial, yellow gold-tone stainless steel case, and a matching steel bracelet. It is powered by a precise quartz movement.



Figure 2.1: The Invicta S1 Rally Model 25282 watch displayed on a wrist, showcasing its gold-tone stainless steel bracelet and black dial.

### Key Components:

- **Case:** 51mm gold-tone stainless steel.
- **Dial:** Black carbon fiber with chronograph sub-dials.

- **Bezel:** Stationary stainless steel.
- **Crown:** Push crown for time and date adjustment.
- **Pushers:** For chronograph operation.
- **Crystal:** Flame Fusion dial window material.
- **Bracelet:** Gold-tone stainless steel, 185mm L x 30mm W.
- **Clasp:** Fold over safety clasp.



**Figure 2.2:** A detailed view of the Invicta S1 Rally 25282 watch face, highlighting the chronograph sub-dials, hands, and push crown.

## 3. SETUP

---

### 3.1 Setting the Time

1. Pull the crown out to position 2 (the outermost position).
2. Rotate the crown to move the hour and minute hands to the desired time. Ensure AM/PM is correctly set if your watch has a 24-hour indicator or date changes at midnight.
3. Push the crown back into position 0 (normal operating position).

### 3.2 Setting the Date

1. Pull the crown out to position 1 (the middle position).
2. Rotate the crown to adjust the date.
3. Once the correct date is displayed, push the crown back into position 0.
4. *Note: Avoid setting the date between 9 PM and 3 AM, as this can damage the movement. If you need to set the date during this period, first set the time outside this window, adjust the date, then reset the time.*

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Using the Chronograph Function

Your Invicta S1 Rally watch features a chronograph (stopwatch) function. The pushers on the side of the case control this feature.

- **Start/Stop:** Press the top pusher to start the chronograph. Press it again to stop.
- **Reset:** With the chronograph stopped, press the bottom pusher to reset all chronograph hands to their zero positions.

### 4.2 Water Resistance

This watch is water resistant to 100 meters (330 feet). This makes it suitable for swimming and snorkeling, but not for diving.

- Do not operate the crown or pushers while the watch is wet or submerged.
- Ensure the crown is fully pushed in before exposing the watch to water.
- After exposure to saltwater, rinse the watch with fresh water and dry it thoroughly.

## 5. MAINTENANCE

---

### 5.1 Cleaning Your Watch

To maintain the appearance of your watch, regularly wipe the case and bracelet with a soft, dry cloth. For more thorough cleaning, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals or abrasive materials.

### 5.2 Battery Replacement

Your quartz watch is powered by a lithium metal battery. When the battery runs low, the watch may stop or the second hand may jump in irregular intervals. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance.

### 5.3 Storage

When not wearing your watch, store it in a cool, dry place away from direct sunlight and extreme temperatures. The original Invicta box (Figure 5.1) provides excellent protection.



Figure 5.1: The Invicta watch box, ideal for safe storage of your timepiece.

## 6. TROUBLESHOOTING

---

- **Watch not running:**
  - Check if the crown is fully pushed in.
  - The battery may need replacement. Consult a professional watch technician.
- **Date not changing correctly:**
  - Ensure the time is set correctly, especially AM/PM.
  - Avoid setting the date between 9 PM and 3 AM.
- **Chronograph hands not resetting to zero:**
  - This may indicate a need for calibration or service. Consult a professional watch technician.

## 7. SPECIFICATIONS

---

Feature	Detail
Model Number	25282
Movement	Quartz
Case Material	Stainless Steel
Case Diameter	5.1 cm (51mm)
Case Thickness	15.5 mm
Band Material	Stainless Steel
Band Width	30 mm
Band Color	Gold
Dial Color	Black
Dial Window Material Type	Flame Fusion
Display Type	Analog
Clasp Type	Fold over safety
Water Resistance Depth	100 meters (330 feet)
Special Features	Chronograph, Date, Second Hand
Item Weight	499 g
Batteries	1 Lithium Metal battery (included)

## 8. WARRANTY AND SUPPORT

---

For warranty information, please refer to the manufacturer's website. If this product was sold by Amazon, warranty details may be available on their site. If purchased from another seller, please contact that seller directly for

warranty information.

For further assistance or technical support, please contact Invicta customer service through their official channels.