

## Gimebox H96 Max

# Gimebox H96 Max Android 13.0 TV Box User Manual

Model: H96 Max

## 1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Gimebox H96 Max Android 13.0 TV Box. Please read this manual thoroughly before using the device to ensure proper functionality and to prevent damage.



*The Gimebox H96 Max Android TV Box, shown alongside its dedicated remote control, ready for setup.*

## 2. PACKAGE CONTENTS

Verify that all items are present in the package:

- Gimebox H96 Max Android TV Box
- Remote Control
- Power Adapter
- HDMI Cable
- User Manual (this document)

### 3. PRODUCT OVERVIEW

Familiarize yourself with the ports and indicators on your H96 Max TV Box.



*A view of the Gimebox H96 Max TV Box, highlighting its various connectivity ports including HDMI, USB, Ethernet, and power input.*

#### Front Panel

- **LED Display:** Shows time and connection status (Wi-Fi, USB).

## Rear Panel

- **DC 5V Port:** Connect the power adapter.
- **HDMI Port:** Connect to your TV or display.
- **Ethernet (LAN) Port:** For wired network connection.
- **AV Port:** For older TVs (composite video and stereo audio).
- **Optical Audio Port:** For digital audio output.

## Side Panels

- **USB 3.0 Port:** For high-speed data transfer (e.g., external hard drives).
- **USB 2.0 Port:** For connecting peripherals (e.g., USB flash drives, keyboards, mice).
- **TF Card Slot:** For expanding storage with a MicroSD card.

## 4. SETUP

---

Follow these steps to set up your Gimebox H96 Max TV Box:

1. **Connect to TV:** Connect one end of the HDMI cable to the HDMI port on the TV Box and the other end to an HDMI input on your television. Note the HDMI input number (e.g., HDMI 1, HDMI 2).
2. **Connect to Power:** Plug the power adapter into the DC 5V port on the TV Box, then plug the adapter into a wall outlet. The LED display on the front of the box should light up.
3. **Select TV Input:** Turn on your TV and use its remote control to select the corresponding HDMI input you connected the TV Box to.
4. **Initial Boot:** The TV Box will automatically power on and display the Gimebox logo, followed by the Android 13.0 home screen. This may take a few moments.
5. **Connect to Network (Optional):**
  - **Wi-Fi:** Go to **Settings > Network & Internet > Wi-Fi**, select your network, and enter the password.
  - **Ethernet:** Connect an Ethernet cable from your router to the LAN port on the TV Box. The connection will be established automatically.



# Android 13.0

## 8K

### SUPPORT



### WiFi-6



### SCREEN CAST

## Rockchip

## RK3528



*The Gimebox H96 Max Android TV Box and its accompanying remote control, illustrating the primary input device for navigation.*

## 5. OPERATING INSTRUCTIONS

### 5.1 Remote Control Usage

The included remote control is your primary interface for navigating the TV Box. Point the remote directly at the front of the TV Box for optimal response.

- **Power Button:** Turns the device on or off (standby mode).
- **Directional Pad (D-Pad):** Navigate through menus and select items.
- **OK Button:** Confirms selections.
- **Back Button:** Returns to the previous screen.
- **Home Button:** Returns to the main home screen.
- **Menu Button:** Accesses context-sensitive options.

- **Volume Buttons:** Adjusts audio volume.

## 5.2 Navigating the Android 13.0 Interface

The H96 Max runs on Android 13.0, offering a user-friendly interface.



*A visual representation of the Android 13.0 operating system, emphasizing its modern interface and privacy features.*

- **Home Screen:** Displays frequently used apps, shortcuts, and system information.
- **App Drawer:** Access all installed applications.
- **Settings:** Configure network, display, sound, storage, and other system options.

## 5.3 Installing and Uninstalling Applications

- **Install:** Use the pre-installed app store or download APK files from trusted sources.
- **Uninstall:** Go to **Settings > Apps > See all apps**, select the desired app, and choose 'Uninstall'.

## 6. CONNECTIVITY

---

### 6.1 Wi-Fi Connection

The H96 Max supports dual-band Wi-Fi (2.4G and 5G) for flexible network access.

1. Navigate to **Settings > Network & Internet > Wi-Fi**
2. Ensure Wi-Fi is turned **On**.
3. Select your desired Wi-Fi network from the list.
4. Enter the network password if prompted and select **Connect**.

### 6.2 Bluetooth Pairing

Connect Bluetooth devices such as keyboards, mice, or game controllers.

1. Go to **Settings > Connected devices > Pair new device**
2. Put your Bluetooth device into pairing mode.
3. Select your device from the list and follow any on-screen prompts to complete pairing.

### 6.3 Ethernet Connection

For a stable and high-speed internet connection, use the Ethernet port.

1. Connect an Ethernet cable from your router or modem to the LAN port on the TV Box.
2. The device will automatically detect and connect to the wired network.

## 7. MEDIA PLAYBACK

---

The Gimebox H96 Max supports high-resolution media playback.



*An image demonstrating the Gimebox H96 Max's capability to support 8K video decoding, displayed on a large screen television.*

- **4K and 8K Video Decoding:** Enjoy ultra-high-definition content. Ensure your TV supports 4K/8K resolution and you are using a high-speed HDMI cable.
- **3D Video Support:** Compatible with various 3D video formats.
- **Multi-screen Interaction:** Supports Airplay, DLNA, and Miracast for casting content from compatible devices to your TV.



*An illustration of the multi-screen interaction capabilities of the device, including Airplay, DLNA, and Miracast for content sharing.*

## 8. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use liquid cleaners or aerosols.
- **Software Updates:** Periodically check for system updates in **Settings > About device > System update** to ensure optimal performance and security.
- **Ventilation:** Ensure the device is placed in a well-ventilated area to prevent overheating. Do not block ventilation openings.
- **Storage:** When not in use for extended periods, store the device in a cool, dry place.

## 9. TROUBLESHOOTING

If you encounter issues with your Gimebox H96 Max, refer to the following common problems and solutions:

| Problem                               | Solution                                                                                                                                                                                                     |
|---------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No power /<br>Device does not turn on | Check if the power adapter is securely connected to the device and the wall outlet. Try a different power outlet.                                                                                            |
| No signal on TV screen                | Ensure the HDMI cable is securely connected to both the TV Box and the TV. Verify that your TV is set to the correct HDMI input source. Try a different HDMI cable or TV port.                               |
| Remote control not responding         | Check the batteries in the remote control and replace them if necessary. Ensure there are no obstructions between the remote and the TV Box.                                                                 |
| Wi-Fi connection issues               | Ensure your Wi-Fi router is on and working. Re-enter the Wi-Fi password in <b>Settings &gt; Network &amp; Internet &gt; Wi-Fi</b> . Move the TV Box closer to the router or try a wired Ethernet connection. |

| Problem                             | Solution                                                                                                                                                                       |
|-------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| System freezing or slow performance | Restart the device by unplugging and re-plugging the power adapter. Close unnecessary background applications. Clear cache for problematic apps in <b>Settings &gt; Apps</b> . |

## 10. SPECIFICATIONS

Detailed technical specifications for the Gimebox H96 Max Android 13.0 TV Box:



An illustrative diagram showcasing the internal Rockchip 3528 CPU, indicating its quad-core ARM Cortex A53 architecture and Mali-450 GPU.

- **Operating System:** Android 13.0
- **CPU:** RK3528 Quad Core ARM Cortex A53

- **GPU:** Penta-Core Mali-450 Up to 750Mhz+
- **RAM:** 4GB DDR3
- **Internal Storage:** 64GB EMMC Flash
- **Wireless Connectivity:** 802.11 b/g/n, Dual Wi-Fi 2.4G/5G
- **Bluetooth:** 5.0
- **Ethernet:** 10/100M, standard RJ-45
- **USB Ports:** 1x USB 3.0, 1x USB 2.0
- **Video Output:** HDMI (supports 4K, 8K decoding)
- **Special Features:** 4K/3D Video Support, Dual WiFi
- **Product Dimensions:** 13.78 x 7.09 x 1.18 inches (approx. 30"L x 18"W x 3"H as per some listings)
- **Item Weight:** 12.7 ounces

## 11. SAFETY INFORMATION

Please observe the following safety guidelines:

- Do not expose the device to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the device to severe impact.
- Use only the provided power adapter. Using unauthorized adapters may damage the device and void the warranty.
- Do not attempt to open or repair the device yourself. Refer all servicing to qualified personnel.
- Keep the device away from direct sunlight and heat sources.

© 2025 Gimebox. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**