

Homeleader K47-021

Homeleader K47-021 9-in-1 Multi-Use Programmable Electric Pressure Cooker

Instruction Manual

PRODUCT OVERVIEW

The Homeleader K47-021 is a versatile 9-in-1 electric pressure cooker designed to simplify various cooking tasks. It functions as a pressure cooker, slow cooker, rice cooker, soup maker, steamer, simmer, egg maker, cake maker, and food warmer. This appliance features 16 smart programs and a user-friendly control panel for efficient meal preparation.



Figure 1: Homeleader K47-021 Electric Pressure Cooker.

Key Features:

- **9-in-1 Functionality:** Combines Pressure Cooker, Slow Cooker, Rice Cooker, Soup Maker, Steamer, Simmer, Egg Maker, Cake Maker, and Warmer.
- **16 Smart Programs:** Pre-set programs for Fish, Soup, Multigrain, Beef/Lamb, Dessert, Cake, Porridge, DIY, Meat, Baby Food, Stew, Rice, Seafood, Sweet Potato, Egg.
- **ETL Approved:** All food-contact components are made from food-grade 304 stainless steel, including the lid and 3-ply bottom inner pot.
- **Safety Features:** Designed with safety mechanisms to prevent opening under pressure.
- **Convenient Functions:** Time pre-setting and time selection for delayed cooking.
- **Energy Efficient:** Cooks up to 70% faster than traditional methods, sealing in nutrients and vitamins.

SETUP

Unpacking and Initial Inspection:

1. Carefully remove all components from the packaging.
2. Verify that all listed accessories are present: pressure cooker unit, inner pot, power cord, measuring cup, meal spoon, and user manual.
3. Inspect the unit for any signs of damage. Do not use if damaged.

Five Pressure Settings - 1 to 5

Delay Start - Delays start time up to 24 hours

Automatic Keep Warm - Keeps food warm until ready to serve

Adjustable Settings - Shorter, Normal, More - Achieves desired cooking

LED Panel



Figure 2: Main components of the Homeleader K47-021 Electric Pressure Cooker.


First Use and Assembly:

1. Before first use, wash the inner pot, lid, and sealing ring with warm, soapy water. Rinse thoroughly and dry completely.
2. Place the inner pot into the cooker base. Ensure it sits properly.
3. Align the lid with the cooker base. Turn the lid clockwise until it locks into place. The 'LOCK' indicator on the cooker

should align with the lid's lock position.

4. Ensure the steam release handle is in the 'Sealing' position for pressure cooking.
5. Connect the power cord to the cooker and then to a grounded electrical outlet.

Pure Quality. Pure Satisfaction.

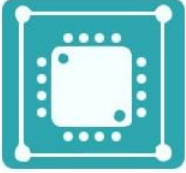

Smart Programs



Save Time



Easy Touch-Button
Settings



Save Energy



Safety Mechanisms &
Patented Technologies



Figure 3: Instructions for locking and unlocking the cooker lid.

OPERATING INSTRUCTIONS

Control Panel Overview:

The control panel features a digital display, pressure level indicators, and various function buttons for different cooking modes.



Figure 4: Detailed view of the control panel and its functions.

Selecting a Cooking Program:

1. Add ingredients and liquid to the inner pot according to your recipe. Do not exceed the MAX fill line.
2. Secure the lid and ensure the steam release handle is in the 'Sealing' position.
3. Press the desired function button (e.g., Rice, Soup, Meat). The default cooking time and pressure level for that program will display.
4. To adjust cooking time or pressure, use the 'Adjust' button and '+' / '-' buttons.
5. The cooker will automatically begin the pre-heating cycle, then start cooking.



Figure 5: Examples of dishes prepared using the multi-functional cooker.

Using Delay Start:

The 'Delay Time' function allows you to set a delayed start for your cooking program, up to 24 hours.

1. After selecting a cooking program and adjusting settings, press the 'Delay Time' button.
2. Use the '+' / '-' buttons to set the desired delay time.
3. The cooker will start cooking automatically after the set delay period.

Pressure Release:

Once cooking is complete, the cooker will automatically switch to 'Keep Warm' mode. To release pressure:

- **Natural Release:** Allow the pressure to release naturally. This is recommended for foamy foods or large cuts of meat. The float valve will drop on its own.
- **Quick Release:** Carefully turn the steam release handle to the 'Venting' position. *Caution: Steam will be released rapidly. Keep hands and face away from the steam vent.*

MAINTENANCE

Cleaning:

1. Always unplug the cooker and allow it to cool completely before cleaning.
2. **Inner Pot:** The inner pot is dishwasher safe. For hand washing, use warm, soapy water and a non-abrasive sponge.
3. **Lid:** Wash the lid with warm, soapy water. Remove the sealing ring and float valve for thorough cleaning. Ensure all parts are dry before reassembling.
4. **Exterior:** Wipe the exterior of the cooker base with a damp cloth. Never immerse the cooker base in water or other liquids.
5. **Condensation Collector:** Empty and clean the condensation collector after each use.



Kitchen Safe



Safe Lock Lid



Pressure Regulator



High Quality



Anti-clog Filter

Figure 6: Safety and quality features, important for proper maintenance.

TROUBLESHOOTING

If you encounter issues with your Homeleader K47-021 pressure cooker, refer to the following common problems and solutions:

- **Lid will not close/lock:** Ensure the sealing ring is properly installed and the inner pot is correctly seated. Check for any food debris obstructing the lid mechanism.
- **Steam leaking from lid:** Verify the sealing ring is clean, undamaged, and correctly positioned. Ensure the steam release handle is in the 'Sealing' position.
- **Food not cooking properly:** Check that the correct cooking program and time were selected. Ensure sufficient liquid was added according to the recipe.
- **Error Codes (e.g., E4):** If an error code appears on the display, unplug the unit, wait a few minutes, and plug it back in. If the error persists, consult the full user manual or contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	Homeleader
Model Number	K47-021
Capacity	6 Quarts (6L)
Power Settings	1000W
Material	Stainless Steel
Color	Black
Control Method	Touch / Push Button
Operation Mode	Automatic
Dishwasher Safe	Yes (Inner Pot)
Working Pressure	0-70kPa
Limit Pressure	90kPa
Warm Temperature	140-158°F
GTIN	712396023968

WARRANTY AND SUPPORT

Warranty Information:

The Homeleader K47-021 Electric Pressure Cooker comes with a **1-year warranty period** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal household use.

Customer Support:

For technical assistance, troubleshooting, or warranty inquiries, please contact Homeleader customer support. You can find more information and contact details by visiting the official Homeleader store:

Visit the Homeleader Store

IMPORTANT SAFETY INFORMATION

Always read and understand all safety warnings and instructions before operating this appliance. Failure to follow these instructions may result in property damage, personal injury, or death.

- Do not fill the inner pot above the MAX fill line.
- Ensure the lid is properly locked and sealed before operating.
- Do not touch hot surfaces. Use handles or knobs.
- Exercise extreme caution when releasing pressure.
- Keep out of reach of children.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question