

[Manuals.plus](#) /

› [YOOYIST](#) /

› YOOYIST 4-Channel Commercial Kitchen Timer Instruction Manual

YOOYIST JSQ04E

YOOYIST 4-Channel Commercial Kitchen Timer Instruction Manual

Model: JSQ04E

1. INTRODUCTION

The YOOYIST JSQ04E is a precision 4-channel commercial kitchen timer designed for professional culinary environments. It allows simultaneous tracking of up to four different cooking tasks, ensuring efficiency and accuracy in busy kitchens. Constructed from durable stainless steel, this timer is built to withstand the demands of commercial use, featuring an ultra-loud alarm and clear LED displays for optimal visibility.



Figure 1.1: Front view of the YOOYIST 4-Channel Commercial Kitchen Timer. This image shows the timer's blue faceplate, four distinct red LED digital displays for each channel, and control buttons at the bottom. The stainless steel casing is visible around the edges.

2. KEY FEATURES

- **4-Channel Capability:** Simultaneously manage up to four independent timing tasks, ideal for multi-dish preparation.

- **Loud Alarm:** Equipped with an ultra-loud alarm to ensure timers are heard even in noisy kitchen environments, preventing overcooked food and delays.
- **Durable Construction:** Made from heavy-duty stainless steel with an easy-to-clean finish, designed for longevity and resilience against heat, spills, and continuous use.
- **Clear LED Display:** Features oversized LED digits for excellent visibility from various angles, enhancing operational efficiency.
- **Memory Function:** Built-in memory recalls the last settings instantly, reducing setup time and minimizing errors.
- **Plug-In Power:** Operates on 110V or 220V AC power, eliminating the need for batteries and ensuring continuous operation.

3. SETUP

The YOOYIST commercial kitchen timer offers flexible installation options to suit your kitchen layout.

3.1 Unpacking and Inspection

Carefully remove the timer from its packaging. Inspect the unit for any signs of damage during transit. Ensure all components, including the power cord and mounting accessories (if applicable), are present.

3.2 Power Connection

Connect the timer's power cord to a standard 110V or 220V AC power outlet. The unit will power on automatically.

3.3 Mounting Options

The timer can be used as a tabletop unit or mounted to a wall for optimal visibility and space-saving.

- **Tabletop Stand:** Utilize the integrated stand at the back of the unit to position it upright on a flat surface.
- **Wall Mount:** The timer is wall-mount-ready. Use appropriate screws and anchors (not included) to secure the unit to a wall. Ensure the mounting surface is sturdy enough to support the timer's weight.

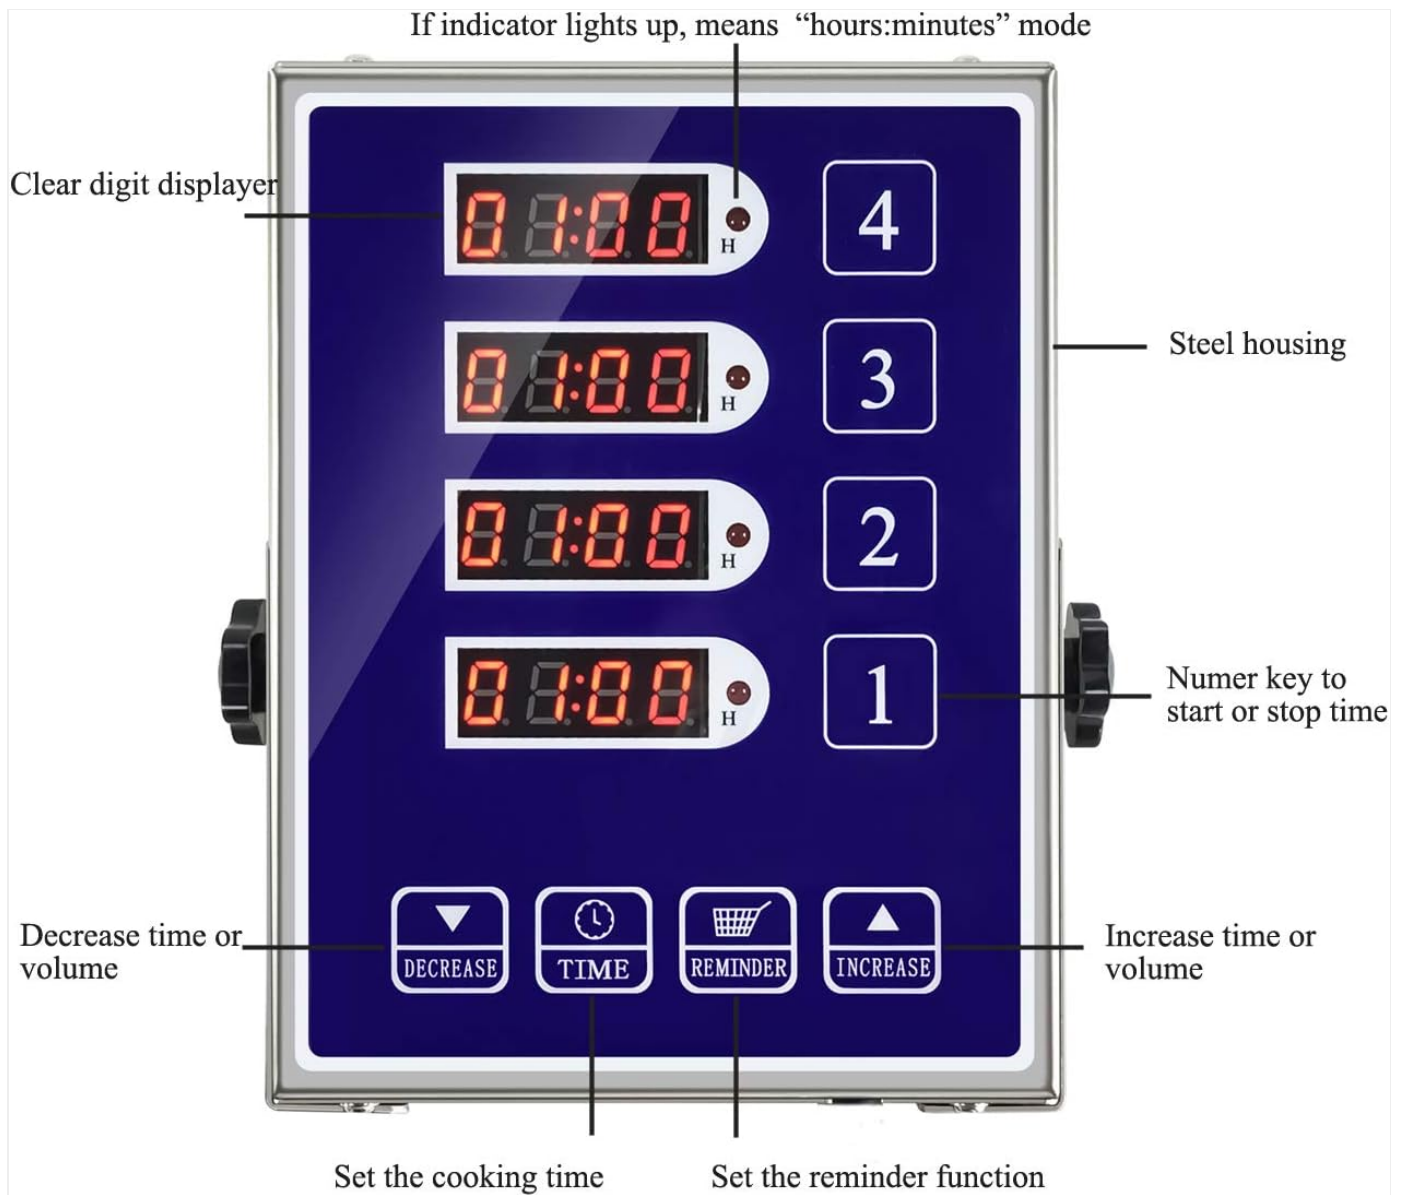


Figure 3.1: Rear view of the timer, illustrating the mounting points and the power cord connection. This image shows the brushed stainless steel back panel with screw holes for wall mounting and the central knob for adjusting the tabletop stand.

4. OPERATING INSTRUCTIONS

This section details the functions of the timer's controls and how to operate each channel.

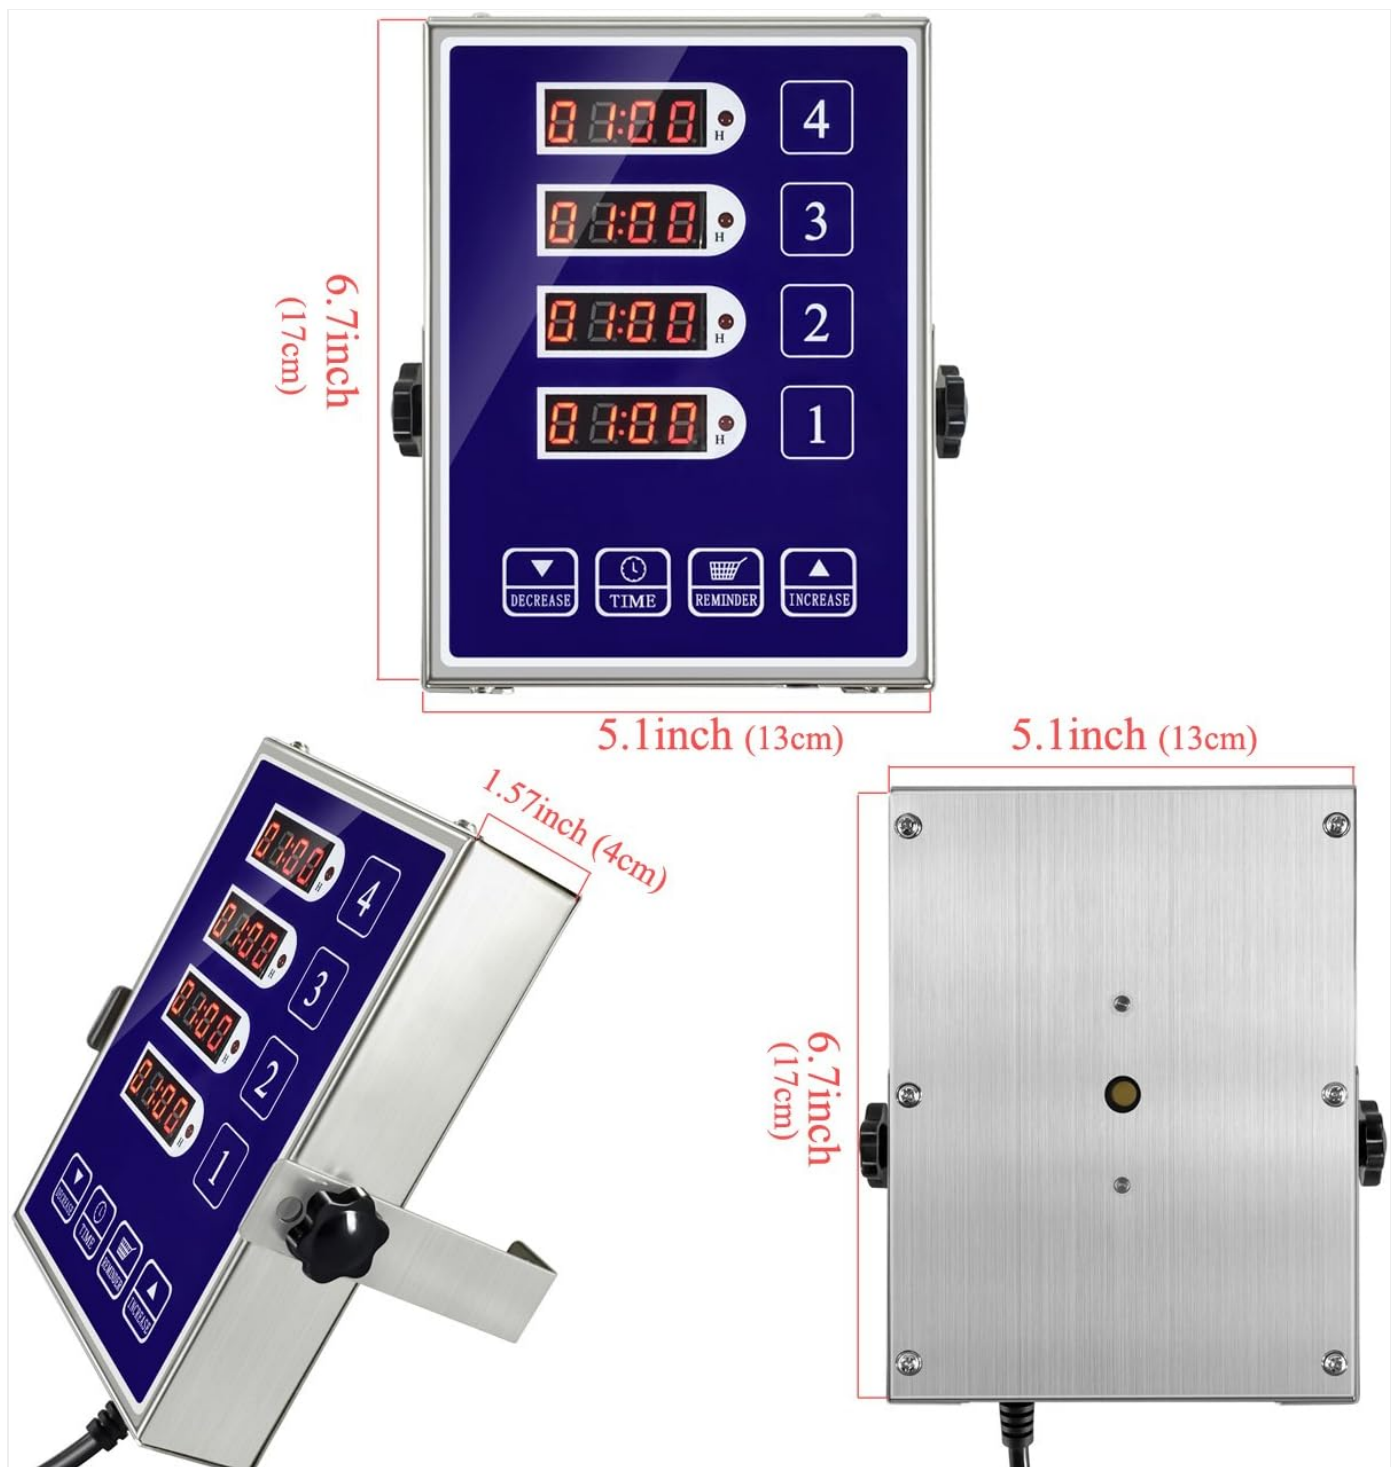


Figure 4.1: Control panel diagram with labeled buttons and displays. This image highlights the "Clear digit displayer" for each timer, the "Steel housing," "Numer key to start or stop time" (buttons 1-4), "Decrease time or volume," "Time" (set cooking time), "Reminder" (set reminder function), and "Increase time or volume" buttons.

4.1 Button Functions

- **Number Buttons (1, 2, 3, 4):** Select a specific timer channel. Pressing a number button when a timer is running will stop and reset it to its initial setting.
- **DECREASE Button:** Decreases the time value during setting or decreases the alarm volume when the timer is idle or alarming.
- **TIME Button:** Used to enter time setting mode for the selected channel.
- **REMINDER Button:** Used to set a reminder function for a specific timer channel.
- **INCREASE Button:** Increases the time value during setting or increases the alarm volume when the timer is idle or alarming.

4.2 Setting a Timer

1. Press the desired **Number Button (1-4)** to select the channel you wish to set.
2. Press the **TIME Button** to enter time setting mode. The display for the selected channel will flash.
3. Use the **INCREASE** and **DECREASE** buttons to adjust the hours, minutes, and seconds. The indicator light next to the display will show if it's in "hours:minutes" mode.
4. Once the desired time is set, press the corresponding **Number Button (1-4)** again to start the countdown.

4.3 Adjusting Alarm Volume

The alarm volume can be adjusted when the timer is idle or when an alarm is sounding.

- When the timer is idle (not counting down), press the **INCREASE** or **DECREASE** buttons to adjust the volume. Note that there may not be immediate audible feedback until an alarm sounds.
- When an alarm is actively sounding (display shows "END"), pressing the **INCREASE** or **DECREASE** buttons will provide immediate audible feedback of the volume level.

4.4 Reminder Function

The reminder function allows for an intermediate alert during a longer countdown. To set a reminder:

1. Select the desired timer channel using its **Number Button**.
2. Press the **REMINDER Button**.
3. Use the **INCREASE** and **DECREASE** buttons to set the reminder time.
4. The reminder alarm will sound at the set time, but the main timer will continue its countdown without pausing.

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your YOOYIST timer.

5.1 Cleaning

- Always unplug the timer from the power outlet before cleaning.
- Wipe the stainless steel surface and display with a soft, damp cloth.
- Avoid using abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish and electronic components.
- Ensure no liquid enters the timer's internal components.

5.2 Storage

When not in use for extended periods, it is recommended to unplug the timer and store it in a dry, cool place.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Timer does not power on.	No power supply; loose connection.	Ensure the power cord is securely plugged into a working electrical outlet. Check the circuit breaker.

Problem	Possible Cause	Solution
Alarm is too quiet or silent.	Volume set too low.	Adjust the alarm volume using the INCREASE button. Test the volume when an alarm is active for immediate feedback.
Timer resets unexpectedly.	Accidental button press; power interruption.	Avoid pressing the number buttons while a timer is running, as this will stop and reset it. The unit has memory for last settings after power failure.
Display is dim or flickering.	Power fluctuation; internal issue.	Try plugging into a different outlet. If the problem persists, contact customer support.

7. SPECIFICATIONS

Brand: YOOYIST
Model: JSQ04E
Color: Blue
Material: Stainless Steel
Product Dimensions: 1.38"D x 5.1"W x 6.7"H (3.5cm D x 13cm W x 17cm H)
Item Weight: 1.54 Pounds (0.7 kg)
Number of Channels: 4
Screen Size: 1.5 Inches (per display)
Power Input: 110V or 220V AC
UPC: 709311825431, 709311825455

8. WARRANTY AND SUPPORT

For product support, technical assistance, or warranty inquiries, please contact YOOYIST customer service. Refer to your purchase documentation for specific warranty terms and contact information.

Seller: YOOYIST

Protection Plans: Optional protection plans are available for purchase, including 3-Year and 4-Year options, and a Complete Protect monthly plan. These plans offer extended coverage beyond the standard manufacturer's warranty.

Return Policy: This product is eligible for a 30-day refund/replacement return policy from the date of purchase.

9. ADDITIONAL INFORMATION

9.1 Product in Use



Figure 9.1: The YOOYIST timer in a commercial kitchen setting, demonstrating its visibility and utility when mounted on a wall above a workstation.



Figure 9.2: The YOOYIST timer positioned on a countertop in a busy kitchen, showcasing its compact design and ease of access for multiple users.

9.2 Product Videos

Your browser does not support the video tag.

Video 9.1: An overview of the YOOYIST 4-Channel Commercial Kitchen Timer, demonstrating its features and ease of use in a kitchen environment. This video highlights the clear LED display and the loud alarm function.

Your browser does not support the video tag.

Video 9.2: A short preview video showcasing the YOOYIST timer's quick setup and operation. This clip emphasizes the immediate responsiveness of the controls.

© 2024 YOOYIST. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do you turn off the reminder ringer on the YOOYIST JSQ04E 4-Channel Commercial Kitchen Timer that sounds several minutes before the timer counts down to zero?

The ringer you are hearing before the main countdown ends is the Reminder Function. This is designed to provide an intermediate alert during a longer countdown. To disable or change this for a specific...

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B0759HJGNG>

More documents and user manuals: <https://manuals.plus/>