

WindowFX 28002_MP12

WindowFX Plus Holiday Projector User Manual

Brand: WindowFX | **Model:** 28002_MP12

1. INTRODUCTION

This manual provides instructions for the setup, operation, maintenance, and troubleshooting of your WindowFX Plus Holiday Projector (Model 28002_MP12). Please read this manual thoroughly before using the device to ensure proper function and safety.

The WindowFX Plus Holiday Projector is designed to display videos onto an included fabric screen for various seasonal themes. It supports preset videos and user-uploaded content via USB. Audio can be played through the onboard speaker or external Bluetooth/USB speakers.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- WindowFX Plus Holiday Projector
- Remote Control
- Adjustable Tripod
- White Projection Screen (4 ft x 3 ft)
- Power Adapter
- User Manual (this document)



Image 1: WindowFX Plus Holiday Projector and its retail packaging. The projector is black with a lens on the front and control buttons on top. The box shows examples of holiday projections.

3. SAFETY INFORMATION

- Do not expose the projector to rain or moisture.
- Do not block ventilation openings.
- Avoid direct eye exposure to the projector lens when the unit is operating.
- Use only the provided power adapter.
- Keep the device away from heat sources.
- Do not attempt to open or repair the device yourself. Refer all servicing to qualified personnel.

4. SETUP

4.1. Assembling the Tripod

1. Unfold the legs of the adjustable tripod.
2. Extend the tripod to the desired height.
3. Secure the projector onto the tripod mount.
4. Adjust the projector angle as needed for horizontal or vertical projection.

4.2. Setting up the Projection Screen

The included white projection screen (4 ft x 3 ft) can be hung in a window or other suitable location. Ensure the screen is taut and smooth for optimal image quality.

4.3. Power Connection

1. Connect the power adapter to the projector's power input port.
2. Plug the power adapter into a standard electrical outlet.

5. OPERATING INSTRUCTIONS

5.1. Powering On/Off

Press the **Power** button on the projector or remote control to turn the device on or off.

5.2. Selecting Content

The projector comes with 8 preset holiday and Halloween themed videos. You can also upload your own videos via the USB port.

- **Preset Videos:** Use the navigation buttons on the projector or remote to browse and select from the pre-installed videos.
- **USB Content:** Insert a USB drive containing your video files into the USB port. Navigate to the USB input source and select your desired video.

5.3. Adjusting Projection

- **Focus:** Rotate the focus ring around the lens to achieve a clear image.
- **Keystone Correction:** If the image appears trapezoidal, use the keystone correction feature (if available, check remote/menu) to square the image.
- **Size:** Adjust the distance of the projector from the screen to change the image size.

5.4. Audio Output

The projector features an integrated speaker. For enhanced audio, you can connect external speakers:

- **Bluetooth:** Enable Bluetooth on your external speaker and pair it with the projector via the projector's audio settings menu.
- **USB Speakers:** Connect compatible USB speakers to the projector's USB port.
- **HDMI Audio:** If connecting via HDMI, audio will be transmitted through the HDMI cable to the connected device.

6. MAINTENANCE

- **Cleaning the Lens:** Use a soft, lint-free cloth specifically designed for optical lenses. Do not use abrasive cleaners.
- **Cleaning the Exterior:** Wipe the projector's exterior with a soft, dry cloth. Do not use liquid cleaners or solvents.
- **Storage:** When not in use, store the projector in a cool, dry place, away from direct sunlight and dust.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected; outlet not working.	Check power connections; try a different outlet.
No image	Lens cap on; incorrect input source; focus not adjusted.	Remove lens cap; select correct input; adjust focus.
Blurry image	Focus not adjusted; projector too far/close.	Adjust the focus ring; reposition the projector.
No sound	Volume too low; external speakers not connected/paired.	Increase volume; check Bluetooth pairing or USB connection.
Remote control not working	Batteries dead; obstruction between remote and projector.	Replace batteries; ensure clear line of sight.

8. SPECIFICATIONS

Brand	WindowFX
Model Number	28002_MP12
Color	Black
Material	Home Theater (as per product data, likely referring to application)
Wattage	15 watts
Connectivity Technology	Bluetooth, HDMI, USB, Wireless
Special Feature	Integrated Speaker
Form Factor	Portable
Dimensions (L x W x H)	9 inches x 3.5 inches x 6.5 inches (22.86 x 8.89 x 16.51 cm)
Weight	1.5 Pounds (680.39 g)

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact information provided with your purchase documentation or visit the official WindowFX website. Keep your proof of purchase for warranty claims.