

[Manuals.plus](#) /

› [Smartby](#) /

› Smartby HTR-D09B Remote Control User Manual for Haier TV Models

Smartby HTR-D09B

Smartby HTR-D09B Remote Control User Manual

For Haier TV Models

INTRODUCTION

This manual provides instructions for the Smartby HTR-D09B Remote Control. This remote is designed as a replacement or secondary control unit for various Haier TV models. It operates without the need for programming or pairing; simply insert batteries for immediate use.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards and remove it.
3. Insert two (2) 1.5V AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.

Note: Batteries are not included with the remote control.





Image: Rear view of the HTR-D09B remote control with the battery cover removed, illustrating the correct placement of two AAA batteries.

2. Initial Use

The HTR-D09B remote control is pre-programmed for compatible Haier TV models. No additional programming or pairing steps are required. Once batteries are installed, the remote is ready for immediate use.

OPERATING INSTRUCTIONS

The remote control features standard buttons for TV operation. Refer to the image below for button layout and general functions.



Image: Front view of the HTR-D09B remote control, displaying all functional buttons.

- **Power (Red Button):** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select channels.
- **Input:** Cycles through available input sources (HDMI, AV, etc.).
- **Menu:** Accesses the TV's main menu.
- **Mute:** Toggles audio mute on/off.
- **VOL+/-:** Adjusts the volume level.
- **CH+/-:** Changes the channel up or down.
- **Navigation Pad (Up/Down/Left/Right/ENTER):** Navigates through menus and confirms selections.
- **Exit:** Exits the current menu or on-screen display.
- **Recall:** Returns to the previously viewed channel.
- **Playback Controls (USB section):** Play/Pause, Stop, Repeat, Reverse, Fast Forward, Previous, Next for media playback (e.g., from USB).
- **Color Buttons (Red, Green, Yellow, Blue):** Functionality varies by TV model and context, often used for specific menu options or interactive features.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops functioning. Always replace both batteries simultaneously with new ones of the same type.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure there is a clear line of sight between the remote control and the TV's infrared sensor.
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace the batteries with new ones.
- **Specific buttons not working:**
 - This may indicate a faulty button or a specific TV model incompatibility for that function. Verify the button's function with your TV's original manual if available.
- **TV not listed as compatible:**
 - While this remote is designed for specific Haier models, some functions may work on other Haier TVs. Full functionality is not guaranteed for unlisted models.

SPECIFICATIONS

Model Number	HTR-D09B
Brand	Smartby
Connectivity Technology	Infrared
Power Supply	2 x 1.5V AAA Batteries (Not Included)
Compatible Devices	Television
Max Number of Supported Devices	1
Item Weight	2.78 ounces
Package Dimensions	6.77 x 2.28 x 1.1 inches

COMPATIBLE HAIER TV MODELS

This remote control is compatible with the following Haier TV models:

- LE22D3380, LE22D3380A
- LE24C3320A
- LE29F2320
- L32A2120, LE32D2320
- L39B2180C, L39B2180D, LE39D2380

- LE42D2380
- LE46A2280, LE46F2280, LE46A2280A, LE46F2280A, LE46D2380A, LE46F2280C
- L50B2180, L50B2180A, LE50F2280, LE50F2280A
- LE55B1381C

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the retailer. Specific warranty details are not provided in this manual.

© 2024 Smartby. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question