

MINNIE 76090-V1

MINNIE Mouse 10-inch Fly Wheels Ride-On Cruiser Instruction Manual

Model: 76090-V1

INTRODUCTION

This manual provides essential information for the safe assembly, operation, and maintenance of your MINNIE Mouse 10-inch Fly Wheels Ride-On Cruiser. Please read all instructions carefully before use and retain this manual for future reference.

SAFETY INFORMATION

WARNING: ADULT ASSEMBLY AND SUPERVISION REQUIRED.

CHOKING HAZARD: Unassembled product contains small parts and sharp edges/points. Keep out of reach of children under 3 years of age prior to assembly.

- Always ensure adult supervision during use.
- This ride-on is designed for toddlers ages 2-4.
- Ensure all parts are securely fastened before each use.
- Do not use near stairs, hills, roadways, or swimming pools.
- Always wear appropriate safety gear, such as a helmet.

WHAT'S IN THE BOX

The package for your Minnie Mouse Ride-On Cruiser includes the following components:

- Minnie Mouse Ride-On 10" Fly Wheels (main body, front wheel assembly, rear wheels, handlebars, pedals)
- Assembly tool (screwdriver)
- Sticker sheet for customization

ASSEMBLY INSTRUCTIONS

Adult assembly is required. Please follow these steps carefully. A screwdriver is included for assembly. Additional tools, such as a hammer, may be required for certain steps.

1. **Prepare Rear Wheels:** Insert the axle through the rear wheel assembly. Secure with washers and caps, gently tapping with a hammer if necessary to ensure a snug fit.
2. **Attach Pedals to Front Wheel:** Insert the pedal rods through the front wheel. Secure the pedals on each side, ensuring they are firmly attached.
3. **Install Front Wheel Assembly:** Insert the front wheel assembly into the main body of the ride-on. Ensure it aligns correctly.
4. **Attach Handlebars:** Place the handlebars onto the steering column. Secure them using the provided screw and screwdriver.
5. **Apply Stickers:** Customize your ride-on by applying the provided stickers to the designated areas, such as the front wheel and main body.
6. **Insert Batteries:** Locate the battery compartment (usually under the handlebars or seat). Insert the required batteries (not included) for sound features.

For a visual guide, please refer to the assembly video below:

Your browser does not support the video tag.

Video: 10 Inch Fly Wheel Ride-On Assembly Instructions. This video demonstrates the step-by-step assembly process for a similar Fly Wheel ride-on, including attaching wheels, pedals, and handlebars.



Image: Side view of the Minnie Mouse Ride-On Cruiser, showcasing the 10-inch front wheel and dual rear wheels.

OPERATING INSTRUCTIONS

The Minnie Mouse Ride-On Cruiser is designed for easy and safe operation by young children.

- **Riding:** Children can propel the ride-on by pedaling the front wheel. The low center of gravity and easy-grip handlebars provide stability and control.
- **Sound Features:** Press the push button located on the handlebars to activate various sounds and tunes. Ensure batteries are installed for this feature to function.
- **Indoor/Outdoor Use:** This ride-on is suitable for both indoor and outdoor use on flat, smooth surfaces. Avoid rough terrain or areas with obstacles.



Image: A young child wearing a helmet, happily riding the Minnie Mouse Ride-On Cruiser, demonstrating its use.

Your browser does not support the video tag.

Video: Minnie Mouse 10" Fly Wheels Junior Cruiser Ride-on. This short video provides an overview of the Minnie Mouse ride-on in action.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your ride-on.

- **Cleaning:** Wipe down the ride-on with a damp cloth and mild soap. Avoid harsh chemicals.
- **Storage:** Store the ride-on in a dry, cool place away from direct sunlight to prevent material degradation.
- **Inspection:** Periodically check all screws, nuts, and moving parts to ensure they are secure and in good working condition.

TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Difficulty with Assembly:** If you encounter issues during assembly, double-check the instruction manual and the assembly video. Ensure all parts are correctly oriented and fully engaged. Some parts may require firm pressure or gentle tapping with a hammer.
- **Wheels Detaching:** If wheels become loose or detach, re-examine the assembly of the axle and retaining caps. Ensure the caps are fully seated and secured.
- **Sound Feature Not Working:** Check the battery compartment. Ensure batteries are correctly inserted, are of the correct type, and are not depleted.

SPECIFICATIONS

Feature	Detail
Product Dimensions	23.7 x 14.92 x 14.8 inches
Item Weight	6.1 pounds
Model Number	76090-V1
Manufacturer Recommended Age	18 months - 3 years (Product title states 2-4 years, please refer to product packaging for definitive age range)
Manufacturer	Jakks Pacific Inc.
Front Wheel Size	10 inches

Child's Height	Wheel Size
33"- 35"	10"
41"- 44"	15"

Image: A size chart indicating recommended wheel sizes based on child's height. For heights 33"-35", a 10" wheel is recommended. For heights 41"-44", a 15" wheel is recommended.

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official MINNIE or Jakks Pacific Inc. website. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question