

## AOC LE24D1461

# AOC 24-inch Full HD LED TV (Model LE24D1461) User Manual

Model: LE24D1461

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before operating the television and retain them for future reference. Follow all warnings and instructions marked on the product.

- Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel.

## 2. PRODUCT OVERVIEW

The AOC LE24D1461 is a 24-inch Full HD LED television designed for high-definition viewing. It features multiple connectivity options including HDMI and USB, along with an integrated digital TV tuner (DTV).



Image: Front view of the AOC LE24D1461 television, showcasing its display with a dynamic image.

## Key Features:

- 24-inch Full HD (1920x1080) LED display.
- Integrated Digital TV (DTV) tuner.
- Multiple HDMI inputs for connecting external devices like Blu-ray players, game consoles, and set-top boxes.
- USB port for multimedia playback.
- Dynamic Contrast Ratio of 200,000:1.
- Parental Control functionality.

## 3. SETUP

### 3.1 Unpacking and Assembly

1. Carefully remove the TV from its packaging.
2. Place the TV face down on a soft, flat surface to prevent screen damage.
3. Attach the stand to the TV using the provided screws, ensuring it is securely fastened.
4. Place the TV on a stable, level surface, ensuring adequate ventilation around the unit.

### 3.2 Connecting Power

Connect the power cord to the TV's power input, then plug the other end into a standard AC power outlet.

### 3.3 Connecting External Devices

Your TV supports various external devices. Ensure the TV is turned off before making any connections.

- **HDMI Devices:** Connect Blu-ray players, game consoles, or cable/satellite boxes to the HDMI ports using an HDMI cable.
- **USB Devices:** Insert USB flash drives or external hard drives into the USB port for media playback.

- **Antenna/Cable:** Connect an antenna or cable TV signal to the DTV input for digital broadcast reception.

### 3.4 Initial Setup

Upon first power-on, the TV will guide you through the initial setup process:

1. **Language Selection:** Choose your preferred language.
2. **Country/Region:** Select your country or region.
3. **Channel Scan:** The TV will automatically scan for available digital channels. This process may take several minutes.
4. **Time Zone:** Set the correct time zone.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Basic Controls

- **Power:** Press the Power button on the remote control or TV to turn the unit on or off.
- **Volume:** Use the VOL +/- buttons to adjust the volume level.
- **Channel:** Use the CH +/- buttons to change channels.
- **Mute:** Press the Mute button to temporarily silence the audio.

### 4.2 Input Source Selection

To switch between connected devices (e.g., DTV, HDMI1, HDMI2, USB):

1. Press the **SOURCE** or **INPUT** button on your remote control.
2. Use the arrow buttons to navigate through the available input sources.
3. Press **OK** or **ENTER** to select the desired input.

### 4.3 Menu Navigation

Access and adjust TV settings:

1. Press the **MENU** button on the remote control.
2. Use the arrow buttons to navigate through menu options (Picture, Sound, Channel, Time, Setup, Lock).
3. Press **OK** or **ENTER** to select a sub-menu or adjust a setting.
4. Press **EXIT** or **MENU** again to close the menu.

### 4.4 USB Media Playback

To play media files from a USB device:

1. Insert a USB flash drive into the TV's USB port.
2. Select the USB input source using the **SOURCE** button.
3. Navigate through the folders and files using the arrow buttons.
4. Press **OK** or **ENTER** to play the selected media file.

## 5. MAINTENANCE

---

### 5.1 Cleaning the Screen

- Always unplug the TV before cleaning.
- Use a soft, lint-free cloth slightly dampened with water or a specialized screen cleaner.
- Do not spray cleaner directly onto the screen.
- Avoid using abrasive cleaners, waxes, or solvents.

## 5.2 General Care

- Keep the TV away from direct sunlight and heat sources.
- Ensure proper ventilation around the TV to prevent overheating.
- Do not place heavy objects on top of the TV.

## 6. TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common problems and solutions:

Problem	Possible Solution
No power	Check if the power cord is securely plugged into the TV and the wall outlet. Ensure the outlet is functional.
No picture, but sound is present	Verify the correct input source is selected. Check cable connections to external devices.
No sound, but picture is present	Check the volume level and ensure the TV is not muted. Verify audio cable connections for external devices.
Remote control not working	Replace the batteries in the remote control. Ensure there are no obstructions between the remote and the TV's IR sensor.
Poor picture quality (DTV)	Check antenna connection and position. Perform a channel rescan.

If the problem persists after trying these solutions, please contact AOC customer support.

## 7. SPECIFICATIONS

Feature	Specification
Model	LE24D1461
Screen Size	24 inches
Display Type	LED
Resolution	1920 x 1080 (Full HD)
Refresh Rate	60 Hz
Brightness	200 cd/m <sup>2</sup>
Dynamic Contrast Ratio	200,000:1
Response Time	25ms

Feature	Specification
Aspect Ratio	16:9
Connectivity	HDMI, USB
Integrated Tuner	DTV (Digital TV)
Dimensions with Stand (W x H x D)	559.64 x 352.42 x 120.33 mm
Dimensions without Stand (W x H x D)	559.64 x 340.87 x 44.9 mm
Net Weight	2.86 kg

## 8. WARRANTY AND SUPPORT

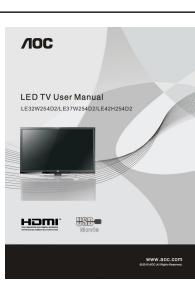
AOC products are manufactured to the highest quality standards. For information regarding your product's warranty coverage, please refer to the warranty card included with your purchase or visit the official AOC website.

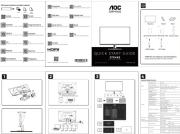
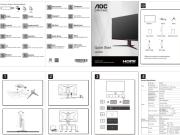
For technical assistance, troubleshooting beyond this manual, or service inquiries, please contact AOC customer support. Contact details can typically be found on the AOC website or in your product documentation.

**Online Support:** [www.aoc.com/support](http://www.aoc.com/support) (Example link, actual link may vary by region)

© 2023 AOC. All rights reserved. Information in this manual is subject to change without notice.

### Related Documents - LE24D1461

	<p><a href="#"><u>AOC 22B2H LED Monitor User Manual and Specifications</u></a></p> <p>Detailed user manual and technical specifications for the AOC 22B2H 21.5-inch Full HD LED monitor. Learn about setup, OSD menu adjustments, connectivity options (VGA, HDMI), software features (i-Menu, e-Saver, Screen+), and compliance.</p>
	<p><a href="#"><u>AOC LE32W254D2, LE37W254D2, LE42H254D2 LED Televisions - Product Overview</u></a></p> <p>Information and overview for AOC LED televisions, models LE32W254D2, LE37W254D2, and LE42H254D2. Features include automatic shutdown.</p>

	<p><a href="#"><b>AOC 27G4XE Gaming Monitor Quick Start Guide</b></a></p> <p>Concise guide to setting up and using the AOC 27G4XE gaming monitor, including specifications, connections, and OSD navigation.</p>
	<p><a href="#"><b>AOC CQ32G4E Gaming Monitor User Manual - Setup, Features, and Troubleshooting</b></a></p> <p>Comprehensive user manual for the AOC CQ32G4E gaming monitor. Covers setup, installation, features like Adaptive-Sync and HDR, troubleshooting, and technical specifications. Get the most out of your AOC gaming display.</p>
	<p><a href="#"><b>AOC 27E3QAF LCD Monitor Handleiding</b></a></p> <p>Gedetailleerde gebruikershandleiding voor de AOC 27E3QAF LCD-monitor, inclusief installatie, configuratie, functies, probleemoplossing en specificaties. Leer hoe u uw AOC-monitor kunt aansluiten, instellen en onderhouden.</p>
	<p><a href="#"><b>AOC 24G2ZE Gaming Monitor Quick Start Guide</b></a></p> <p>This guide provides essential information for setting up and using the AOC 24G2ZE gaming monitor, including connection instructions, OSD controls, and technical specifications.</p>