



Manuals.plus /

- › **UpStart Components** /
- › Instruction Manual for UpStart Components Replacement Light Bulb

UpStart Components ALB-6912W1Z004B-2PK-DL94

Product Instruction Manual

UpStart Components Replacement Light Bulb

PRODUCT OVERVIEW

This manual provides essential information for the installation, operation, and maintenance of your UpStart Components Replacement Light Bulb. This bulb is designed as a direct replacement for Kenmore/Sears 72180603500 Microwave and Kenmore/Sears 6912W1Z004B Light Bulbs.



Figure 1: Two UpStart Components replacement light bulbs, showing their clear glass and brass E17 bases.



Figure 2: A single replacement light bulb, viewed from an angle, highlighting its tubular shape and filament structure.



Figure 3: Close-up view of the E17 screw base of the light bulb, showing the contact point.

SAFETY INFORMATION

- Always disconnect power to the appliance before attempting to replace the light bulb.

- Allow the old bulb to cool completely before handling to prevent burns.
- Handle new bulbs by the base or with a cloth to avoid transferring oils from your skin, which can shorten bulb life.
- Ensure the replacement bulb specifications match the original bulb requirements of your appliance.
- Dispose of old bulbs responsibly according to local regulations.

SETUP AND INSTALLATION

Follow these steps to safely install your new replacement light bulb:

1. **Locate the Bulb:** Identify the light bulb compartment in your Kenmore/Sears microwave. Refer to your microwave's original user manual for exact location and access instructions if needed.
2. **Disconnect Power:** Unplug the microwave from the electrical outlet or turn off the circuit breaker supplying power to the microwave. This is a critical safety step.
3. **Remove Old Bulb:** Carefully unscrew the old bulb counter-clockwise. If the bulb is broken, use pliers or a potato to grip and turn the base.
4. **Insert New Bulb:** Gently screw the new UpStart Components replacement bulb clockwise into the socket until it is snug. Do not overtighten.
5. **Restore Power:** Plug the microwave back into the electrical outlet or turn on the circuit breaker.
6. **Test:** Turn on the microwave light to ensure the new bulb is functioning correctly.

OPERATING INSTRUCTIONS

Once installed, the replacement light bulb operates in conjunction with your microwave's existing lighting controls. There are no specific operating instructions for the bulb itself beyond its proper installation.

- The bulb will illuminate when the microwave door is opened or when the internal light function is activated (if applicable to your microwave model).
- For external cooktop lighting (if applicable), use the dedicated light control button on your microwave's control panel.

MAINTENANCE

The UpStart Components replacement light bulb is designed for long-lasting performance and requires minimal maintenance.

- **Cleaning:** If the bulb or its housing becomes dirty, ensure the microwave is unplugged and the bulb is cool. Wipe the bulb gently with a soft, dry cloth. Do not use liquid cleaners directly on the bulb.
- **Replacement:** Replace the bulb when it burns out. Follow the "Setup and Installation" steps for safe replacement.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Bulb does not light up after installation.	Bulb not screwed in tightly. No power to the microwave. Defective bulb. Microwave light switch/circuit issue.	Ensure bulb is screwed in firmly. Check if microwave is plugged in and circuit breaker is on. Test with another known working bulb if available. Consult a qualified technician if microwave light circuit is suspected.
Bulb burns out quickly.	Overtightening during installation. Frequent power surges. Incorrect bulb wattage/voltage for appliance.	Install bulb gently, do not overtighten. Consider a surge protector for your microwave. Verify bulb specifications match appliance requirements.

SPECIFICATIONS

Attribute	Value
Brand	UpStart Components
Model Number	ALB-6912W1Z004B-2PK-DL94
Compatibility	Kenmore/Sears 72180603500 Microwave, Kenmore/Sears 6912W1Z004B Light Bulb
Wattage	30 Watts
Voltage	125 Volts
Bulb Base	E17 (Intermediate Screw Base)
Bulb Shape Size	T25 (Tubular, 25mm diameter)
Dimensions (approx.)	1 x 2.2 x 2.75 inches (25.4 x 55.9 x 69.85 mm)
Material	Glass
Quantity	2 bulbs per pack

WARRANTY AND SUPPORT

This product is an UpStart Components brand replacement part. Any warranties for this product are offered solely by UpStart Components. For warranty claims or technical support, please refer to the contact information provided with your purchase or visit the official UpStart Components website.

Note: This product is not affiliated with any OEM brands and is not covered under any warranties offered by the original manufacturers. All mentions of brand names or model descriptions are made strictly to illustrate compatibility. All brand names and logos are registered trademarks of their respective owners.



