

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [UpStart Components](#) /

› UpStart Components Replacement Light Bulb User Manual

UpStart Components ALB-6912W1Z004B-6PK-DL52

Replacement Light Bulb Instruction Manual

Model: ALB-6912W1Z004B-6PK-DL52

INTRODUCTION

Thank you for choosing the UpStart Components Replacement Light Bulb. This product is engineered to provide reliable illumination for your microwave oven, serving as a direct replacement for Kenmore/Sears 72180044700 and LG 6912W1Z004B light bulbs. Each pack contains six bulbs, ensuring you have spares for future needs. These bulbs feature superior-crafted filaments for extended lifespan and are made with quality glass to ensure they arrive in optimal condition.



Image: A pack of six replacement light bulbs, showcasing their clear glass and E17 screw bases.

SETUP AND INSTALLATION

Before attempting any installation, ensure the microwave oven is completely disconnected from its power source to prevent electrical shock. Refer to your microwave oven's original manual for specific instructions on accessing and replacing the light bulb, as procedures may vary by model.

1. **Safety First:** Unplug the microwave oven from the wall outlet or turn off the circuit breaker supplying power to the appliance.
2. **Locate Bulb Access:** Identify the light bulb compartment. This is typically located behind a cover or panel, often secured by screws.
3. **Remove Old Bulb:** Carefully unscrew the old light bulb counter-clockwise. If the bulb is broken, use appropriate tools and protective gear to remove any remaining glass or base.
4. **Install New Bulb:** Gently screw the new UpStart Components replacement bulb clockwise into the socket until it is finger-tight. Do not overtighten.
5. **Secure Cover:** Reattach any covers or panels that were removed during the process.
6. **Restore Power:** Plug the microwave oven back into the wall outlet or turn on the circuit breaker.



Image: A detailed side view of a single replacement bulb, showing its E17 base and filament structure.

OPERATING INSTRUCTIONS

Once the replacement bulb is installed and power is restored to the microwave oven, the bulb will operate automatically when the microwave's internal light is activated (e.g., when the door is opened or during cooking cycles, depending on your microwave model's design).

MAINTENANCE

These light bulbs are designed for long-lasting performance and require minimal maintenance. To ensure optimal light output and bulb longevity:

- **Cleaning:** If the bulb becomes dusty or dirty, ensure the microwave is unplugged and the bulb is cool before gently wiping it with a soft, dry cloth. Do not use liquid cleaners directly on the bulb.
- **Handling:** Avoid touching the glass portion of the bulb with bare hands during installation, as oils from your skin can create hot spots and reduce bulb life. Use a clean cloth or gloves.
- **Replacement:** Replace the bulb when it burns out or if its brightness significantly diminishes.

TROUBLESHOOTING

If the new light bulb does not function after installation, consider the following:

- **No Light:**
 - Ensure the microwave oven is properly plugged into a live electrical outlet.
 - Verify that the circuit breaker for the microwave oven is in the 'ON' position.
 - Check if the bulb is securely screwed into the socket. Unscrew and re-screw it firmly.
 - Inspect the bulb for any visible damage (e.g., broken filament, cracked glass). If damaged, replace with another bulb from the pack.
- **Flickering Light:**
 - Ensure the bulb is tightly screwed into the socket. A loose connection can cause flickering.
 - Verify the voltage of your microwave oven matches the bulb's specifications (125V).

If issues persist after performing these checks, it may indicate a problem with the microwave oven's electrical system or socket, and professional service may be required.

SPECIFICATIONS



Image: A close-up view of the E17 screw base of the replacement bulb.

Specification	Detail
Brand	UpStart Components

Specification	Detail
Model Number	ALB-6912W1Z004B-6PK-DL52
Wattage	30 Watts
Voltage	125 Volts
Bulb Shape Size	T25*65mm
Bulb Base	E17
Material	Glass
Unit Count	6.0 Count
Special Feature	Long Lasting
Product Dimensions	1 x 6.6 x 2.75 inches

WARRANTY INFORMATION

This product is an UpStart Components brand replacement part. It is not an OEM (Original Equipment Manufacturer) product and is not affiliated with any OEM brands. Therefore, this product is not covered under any warranties offered by the original manufacturers of the appliances it is compatible with.

Any warranties for this specific replacement product are offered solely by UpStart Components. For details regarding the warranty terms and conditions, please refer to the packaging or contact UpStart Components directly.

SUPPORT

For technical assistance, questions regarding installation, or warranty inquiries, please contact UpStart Components customer support. Contact information can typically be found on the product packaging or on the official UpStart Components website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B075B2SZYG>

More documents and user manuals: <https://manuals.plus/>