



Manuals.plus /

› Tekswamp /

› Tekswamp Replacement Remote Control User Manual for Technics SA-DX950

Tekswamp SA-DX950

Tekswamp Replacement Remote Control User Manual

For Technics SA-DX950 Audio/Video Receiver

INTRODUCTION

This manual provides essential information for the proper use and maintenance of your Tekswamp Replacement Remote Control, designed specifically for the Technics SA-DX950 Audio/Video Receiver. This remote is engineered to provide most of the original commands for your device without requiring additional programming.

Please read this manual thoroughly before operating the remote control to ensure optimal performance and longevity.

PRODUCT OVERVIEW

The Tekswamp Replacement Remote Control is a compact and durable device designed for comfortable everyday use. It features an intuitive button layout and is built to last.



Figure 1: Top view of the Tekswamp Replacement Remote Control, showing the button layout including power, menu navigation, and numeric keys.

Key Features:

- **Ergonomic Design:** Features comfortable, easy-to-reach buttons in a compact, rectangular body, convenient for everyday use and transportation.
- **Power Efficiency:** The electrical circuit requires minimal power, allowing the remote to operate even when batteries are nearing depletion.
- **ON Indicator:** A light illuminates when any active button is pressed, confirming the remote is functioning and sending an IR signal.
- **Durability:** Manufactured from strong, durable plastic to resist breakage. Buttons are designed to be comfortable yet not overly sensitive, preventing accidental signals and wear.
- **Security Screw:** Includes a childproofing feature to prevent unauthorized access to internal components, addressing potential choking hazards.

SETUP

Battery Installation:

The remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.



Figure 2: Bottom view of the remote control, illustrating the battery compartment cover.

3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.



Figure 3: Open battery compartment, showing the correct orientation for AAA battery insertion.

4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

No additional programming is required for this remote control. It is ready for use once batteries are installed.

OPERATING INSTRUCTIONS

Basic Functions:

This remote control is guaranteed to perform the most essential functions for your Technics SA-DX950 receiver:

- **Power On/Off:** Use the **Power** button (usually red) to turn your device on or off.
- **Menu Navigation:** Utilize the directional arrow keys and the **OK** button to access and navigate through your device's menu system.
- **Input Signal Selection:** Use the **SRC** (Source) button or similar input selection buttons to choose your desired audio/video input.
- **Volume Control:** Adjust volume using the **V+** and **V-** buttons.

Advanced Functions and Compatibility:

The remote provides most of the original commands. Functions such as page flip, keystone correction, video adjustment, and numeric input are typically available. However, in rare cases, some specific functions may not work properly with certain devices due to variations in original equipment manufacturer (OEM) remote codes or device firmware. This remote does not include a laser pointer function.

MAINTENANCE

Battery Replacement:

Replace batteries when the remote's response becomes sluggish or the ON indicator light dims. Always replace both batteries simultaneously with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning:

To clean the remote control, wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or immerse the remote in water.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are installed correctly with proper polarity (+/-).
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote and the device's IR receiver.
 - Ensure you are within the effective range and pointing the remote directly at the device.
- **Certain functions not working:**
 - As noted in the Operating Instructions, some highly specific or rarely used functions may not be fully supported by this replacement remote. This is normal and does not indicate a defect.
 - Refer to your Technics SA-DX950 receiver's original manual for specific function details.

SPECIFICATIONS

Attribute	Detail
Product Dimensions	1.5 x 0.8 x 5.5 inches
Item Weight	2 ounces
Batteries Required	2 AAA batteries (not included)
Manufacturer	TL Electronics CO.
Country of Origin	China
Compatible Devices	Home Theater (specifically Technics SA-DX950)
Max Number of Supported Devices	1
Color	Black

WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your Tekswamp Replacement Remote Control, please contact the seller, TeKswamp, directly through the platform where the purchase was made. Please refer to your purchase documentation for specific warranty details, if applicable.