

## Tekswamp TeK-311827

# Tekswamp Replacement Remote Control for Sharp CD-DK890 User Manual

## INTRODUCTION

This Tekswamp replacement remote control is specifically designed for use with the **Sharp CD-DK890** stereo system. It provides most of the original commands for your device without requiring any additional programming. The remote is engineered for ease of use and durability.

## Key Features:

- **Ergonomic Design:** Features comfortable, easy-to-reach buttons in a compact, rectangular body for convenient everyday use.
- **Low Power Consumption:** The electrical circuit requires minimal power, ensuring operation even when batteries are nearing depletion.
- **ON Indicator:** An indicator light illuminates after any active button is pressed, confirming the remote is functioning and sending an infrared (IR) signal.
- **Durable Construction:** Manufactured from strong, durable plastic to resist breakage. Buttons are designed to be comfortable yet not overly sensitive, preventing accidental signals and wear.
- **Security Screw:** Includes a childproofing security screw to prevent unauthorized access to internal components, reducing choking hazards.

**Note on Compatibility:** While this remote provides most essential functions, some specific commands such as page flip, keystone correction, video adjustment, and certain number functions may not work properly with all devices. This remote does not include a laser pointer.

## SETUP: BATTERY INSTALLATION

The Tekswamp replacement remote control requires two (2) AAA alkaline batteries for operation. Batteries are not included with the remote.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: Rear view of the Tekswamp remote control with the battery cover open, illustrating the correct insertion of two AAA batteries.



Image: The back of the Tekswamp remote control with the battery compartment securely closed.

## OPERATING INSTRUCTIONS

Once batteries are installed, the remote is ready for use with your Sharp CD-DK890 stereo system. No programming is required.

1. **Point and Aim:** Ensure the remote control is pointed directly at the infrared receiver on your Sharp CD-DK890 stereo system. Obstructions between the remote and the device can prevent signal transmission.
2. **Power On/Off:** Press the **Power** button (usually red) to turn the stereo system on or off.
3. **Navigation:** Use the directional arrow buttons (**Up, Down, Left, Right**) and the **OK** button (or Enter) to navigate through menus and confirm selections.
4. **Input Selection:** Use the **SRC** (Source) or similar buttons to cycle through available input signals (e.g., CD, Radio, Aux).
5. **Volume Control:** Adjust the volume using the **V+** (Volume Up) and **V-** (Volume Down) buttons.
6. **Signal Confirmation:** Observe the ON indicator light on the remote. It will briefly illuminate when any button is pressed, confirming that the remote is sending an IR signal.



Image: Front view of the Tekswamp remote control, displaying the button layout for various functions.



Image: Angled view of the Tekswamp remote control, providing a clearer perspective of the main control buttons.

## MAINTENANCE

Proper care and maintenance will ensure the longevity and optimal performance of your remote control.

- **Cleaning:** Clean the remote control periodically with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the surface or internal components.
- **Battery Replacement:** Replace both AAA batteries when the remote's performance degrades, or if the ON indicator light fails to illuminate when buttons are pressed. Always replace both batteries at the same time with new ones of the same type.
- **Battery Polarity:** Always ensure batteries are inserted with the correct positive (+) and negative (-) polarity as indicated inside the battery compartment.
- **Storage:** If the remote control will not be used for an extended period (e.g., several weeks or months), remove the batteries to prevent leakage and potential damage to the remote.
- **Environment:** Avoid exposing the remote to extreme temperatures, direct sunlight, high humidity, or dusty environments.

## TROUBLESHOOTING

If you experience issues with your Tekswamp replacement remote control, refer to the following common solutions:

- **Remote Not Responding:**

- Check if the batteries are correctly installed and have sufficient charge. Replace them if necessary.
- Ensure there is a clear line of sight between the remote's IR emitter and the Sharp CD-DK890 stereo system's IR receiver. Remove any obstructions.
- Verify that the remote is compatible with your specific Sharp CD-DK890 model.

- **Limited Functionality:**

- As a replacement remote, some advanced or device-specific functions (e.g., certain setup menus, specific audio modes) may not be fully supported. This is normal for universal or replacement remotes.
- Refer to the original Sharp CD-DK890 stereo system's manual for specific function requirements or limitations.

- **ON Indicator Not Lighting Up:**

- This typically indicates low or depleted batteries. Replace both AAA batteries with new ones.
- Ensure batteries are inserted with correct polarity.

## SPECIFICATIONS

<b>Brand</b>	Tekswamp
<b>Remote Model Number</b>	TeK-311827
<b>Compatible Device</b>	Sharp CD-DK890 Stereo System
<b>Connectivity Technology</b>	Infrared (IR)
<b>Number of Buttons</b>	31
<b>Maximum Range</b>	7 Meters (approximately 23 feet)
<b>Battery Type</b>	2 x AAA Alkaline batteries (not included)
<b>Item Weight</b>	2 Ounces (approximately 56.7 grams)
<b>Color</b>	Black

## WARRANTY INFORMATION

This Tekswamp product is covered by a standard manufacturer's warranty. For specific details regarding warranty coverage, duration, and claims process, please refer to the retailer's return policy or contact Tekswamp customer support directly. Proof of purchase may be required for warranty service.

## CUSTOMER SUPPORT

For technical assistance, troubleshooting guidance beyond this manual, or general inquiries about your Tekswamp replacement remote control, please contact Tekswamp customer support.

You can typically find support information by visiting the official Tekswamp store on Amazon:

**[Visit the Tekswamp Store on Amazon](#)**