

Tekswamp HS-U746

Tekswamp Replacement Remote Control for Mitsubishi HS-U746 User Manual

Model: HS-U746

1. INTRODUCTION

This manual provides instructions for the Tekswamp Replacement Remote Control, designed for use with the Mitsubishi HS-U746 VCR. This remote offers most of the original commands for your device without requiring additional programming. It is engineered for ease of use and reliable performance.

2. PRODUCT OVERVIEW



Figure 2.1: Front view of the Tekswamp Replacement Remote Control.

The Tekswamp remote control is designed with comfortable, easy-to-reach buttons within a compact, rectangular body, making it convenient for daily use. Its electrical circuit is optimized for low power consumption, ensuring operation even when batteries are nearing depletion. An ON indicator light illuminates when any active button is pressed, confirming that the remote is functioning and transmitting an IR signal. The remote is constructed from durable plastic to resist breakage, and its buttons are designed to be responsive yet not overly sensitive, preventing accidental signals and premature wear.

Key Features:

- **Ergonomic Design:** Comfortable, easy-to-reach buttons in a compact form factor.
- **Low Power Consumption:** Efficient electrical circuit for extended battery life.
- **ON Indicator:** Visual confirmation of signal transmission.
- **Durable Construction:** Made from strong plastic to withstand daily use.
- **Responsive Buttons:** Designed for optimal tactile feedback without excessive sensitivity.
- **Security Screw:** A childproofing feature to prevent access to internal components.

3. SETUP

3.1 Battery Installation

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.

2. Slide the battery compartment cover downwards or press the latch and lift to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Figure 3.1: Battery compartment with AAA batteries installed.

Note: Always use new batteries and dispose of old batteries responsibly. If the remote will not be used for an extended period, remove the batteries to prevent leakage.

4. OPERATING INSTRUCTIONS

This replacement remote control is designed to provide most of the essential functions of your original Mitsubishi HS-U746 VCR remote. No additional programming is required; simply point the remote at your VCR and press the desired button.

4.1 Basic Functions

- **Power On/Off:** Press the **POWER** button to turn your VCR on or off.
- **Menu Navigation:** Use the directional arrow buttons (▲ ▼ ◀▶) and the **OK** button to navigate through the VCR's menu system.
- **Input Signal Selection:** Use the **SRC** (Source) button to cycle through available input signals.
- **Playback Controls:** Standard playback controls such as Play, Pause, Stop, Rewind, and Fast Forward are available.

4.2 Advanced Functions and Limitations

While this remote provides comprehensive functionality, some specific functions may vary or not be fully

supported depending on the exact model and firmware of your Mitsubishi HS-U746 VCR. These may include:

- Page flip functions
- Keystone correction
- Advanced video adjustment settings
- Specific numerical input functions (though basic number buttons are present)

This remote does *not* include a laser pointer function.

5. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or immerse the remote in liquid.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Replace batteries when the remote's response becomes sluggish or the ON indicator light dims. Remove batteries if the remote will not be used for an extended period to prevent corrosion.
- **Avoid Drops:** While durable, repeated drops can damage the internal components. Handle with care.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA batteries, ensuring correct polarity (+/-).
Remote's ON indicator light does not illuminate.	Batteries are dead or remote is faulty.	Replace batteries. If the issue persists, contact support.
Remote works intermittently.	Low battery power; obstruction between remote and VCR; remote too far from VCR.	Replace batteries. Ensure a clear line of sight to the VCR's IR receiver. Move closer to the VCR.
Certain functions do not work.	Function not supported by this replacement remote or specific VCR model.	Refer to Section 4.2 for known limitations. This remote provides most, but not all, original functions.

7. SPECIFICATIONS

- **Product Dimensions:** 1.5 x 0.8 x 5.5 inches
- **Item Weight:** 2 ounces
- **Batteries Required:** 2 x AAA (not included)
- **Compatible Devices:** Mitsubishi HS-U746 VCR
- **Color:** Black
- **Manufacturer:** TL Electronics CO. (Brand: Tekswamp)

8. WARRANTY AND SUPPORT

This Tekswamp replacement remote control is designed to be a reliable substitute for your original remote. For specific warranty information or technical support, please refer to the seller or the Tekswamp brand's official support channels.

For further assistance, please contact the retailer from whom you purchased this product.