



[Manuals.plus](#) /

› [Tekswamp](#) /

› Tekswamp Replacement Remote Control for Adcom GTP450 User Manual

## Tekswamp TeK-311886

# Tekswamp Replacement Remote Control for Adcom GTP450 User Manual

Model: TeK-311886

## INTRODUCTION

This manual provides instructions for the Tekswamp Replacement Remote Control, designed for use with the Adcom GTP450. This remote offers most of the original commands for your device without requiring additional programming. It is guaranteed to control power, menu navigation, and input signal selection. Please note that some specific functions may not operate identically to the original remote.



Image: Front view of the Tekswamp Replacement Remote Control, showing its ergonomic design and button layout.

## SETUP

### 1. Battery Installation

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: The back of the remote control with the battery compartment open, illustrating the correct placement for two AAA batteries.

## 2. Compatibility

This remote control is specifically designed for the Adcom GTP450 model. No additional programming or setup is required. Simply install the batteries, and the remote is ready for use with your compatible device.

## OPERATING INSTRUCTIONS

The Tekswamp remote control provides essential functions for your Adcom GTP450. Point the remote directly at the infrared receiver on your device for optimal performance.



Image: Top-down view of the remote control, highlighting the layout and labels of all available buttons.

### Basic Functions:

- **Power Button:** Turns the device on or off.
- **Menu Navigation:** Use the directional arrows (Up, Down, Left, Right) and the **OK** button to navigate through menus and confirm selections.
- **Input Signal Selection (SRC):** Cycles through available input sources.
- **Mute:** Mutes or unmutes the audio.

### Important Considerations:

While this remote replicates most original functions, some specific features may behave differently or not be fully supported. These can include, but are not limited to, page flip, keystone correction, video adjustment, and certain numerical inputs. Volume control functionality may also vary. This remote does not include a laser pointer feature.

## MAINTENANCE

## Battery Replacement:

Replace batteries when the remote's response becomes sluggish or the ON indicator light fails to illuminate consistently. Always replace both AAA batteries simultaneously with new ones to ensure optimal performance.

## Cleaning:

To clean the remote, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners, as these can damage the remote's finish or internal components.

## Security Screw:

The remote features a security screw on the battery compartment. This is a childproofing measure designed to prevent unauthorized access to small parts and reduce choking hazards. Ensure this screw is securely fastened after battery replacement.

## TROUBLESHOOTING

---

- **Remote is unresponsive:**
  - Check if the batteries are installed correctly with the correct polarity (+/-).
  - Replace old batteries with new AAA batteries.
  - Ensure there is a clear line of sight between the remote's infrared emitter and the device's receiver. Obstructions can block the signal.
  - Verify that the remote is pointed directly at the device.
- **Some functions do not work:**
  - As noted in the Operating Instructions, certain advanced or specific functions (e.g., page flip, keystone correction, video adjustment, some numerical inputs, and potentially volume control) may not be fully supported by this replacement remote. This is normal behavior for some universal replacement remotes.
  - Confirm that the function you are trying to use was originally available on the Adcom GTP450 and its original remote.
- **ON Indicator light does not illuminate:**
  - This indicates that the remote is not sending an IR signal. Check and replace batteries.

## SPECIFICATIONS

---

<b>Brand</b>	Tekswamp
<b>Model Number</b>	TeK-311886
<b>Compatible Device</b>	Adcom GTP450 (Home Theater)
<b>Connectivity Technology</b>	Infrared
<b>Power Source</b>	2 x AAA Batteries (Alkaline recommended)
<b>Maximum Range</b>	10 Meters
<b>Button Quantity</b>	31
<b>Color</b>	Black
<b>Item Weight</b>	2 Ounces

## WARRANTY AND SUPPORT

---

For any issues or questions regarding your Tekswamp Replacement Remote Control, please refer to the retailer's return policy or contact Tekswamp customer support through their official channels. Keep your purchase receipt for warranty claims, if applicable.

© 2024 Tekswamp. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.