

[Manuals.plus](#) /

› [Cutex](#) /

› Cutex Upper Looper Instruction Manual for Juki MO-3600, MO-3900, MO-6700, MO-6900 Series Overlock Sewing Machines (Part #119-99208)

Cutex 119-99208

Cutex Upper Looper Instruction Manual

FOR JUKI MO-3600, MO-3700, MO-3900, MO-6700, MO-6900 SERIES OVERLOCK SEWING MACHINES (PART #119-99208)

Introduction

This manual provides essential information for the proper installation, operation, and maintenance of the Cutex Upper Looper, part number 119-99208. This component is designed for specific Juki industrial overlock sewing machines. Please read these instructions carefully before attempting any installation or maintenance to ensure correct function and to prevent damage to the part or your sewing machine.

Product Overview

The upper looper is a critical component in an overlock sewing machine, responsible for forming the upper loop of the stitch. This Cutex replacement part is manufactured to specifications compatible with the listed Juki models, ensuring reliable performance when properly installed.



Figure 1: The Cutex Upper Looper (Part #119-99208). This image displays the metallic, L-shaped component designed for specific Juki industrial overlock sewing machines.

Compatibility

This Cutex Upper Looper (Part #119-99208) is compatible with the following Juki Industrial Overlock Sewing Machine series:

- Juki MO-3600 Series
- Juki MO-3700 Series
- Juki MO-3900 Series
- Juki MO-6700 Series
- Juki MO-6900 Series

Note: Always verify the part number against your machine's requirements before installation.

Installation (Setup)

Replacing an upper looper requires careful attention to detail. If you are unfamiliar with this procedure, it is highly recommended to consult a qualified sewing machine technician or refer to your specific Juki machine's service manual.

1. **Safety First:** Always turn off and unplug your sewing machine from the power source before attempting any installation or maintenance.
2. **Access the Looper Area:** Open the necessary covers on your Juki overlock machine to gain clear access to the looper mechanism.
3. **Remove the Old Looper:** Carefully loosen the screw(s) securing the existing upper looper. Note its exact position and orientation before removal.
4. **Install the New Looper:** Position the new Cutex Upper Looper (Part #119-99208) in the same orientation as the one removed. Ensure it seats correctly.
5. **Secure the Looper:** Gently tighten the securing screw(s). Do not overtighten, as this can strip threads or damage the looper.
6. **Adjust and Test:** After installation, it is crucial to check the timing and clearance between the upper looper, lower looper, and needles. Incorrect adjustment can lead to skipped stitches, thread breakage, or machine damage. Refer to your Juki machine's manual for precise adjustment procedures. Perform a manual test stitch before resuming normal operation.

Warning: Improper installation or adjustment can cause severe damage to your sewing machine and may void its warranty. Seek professional assistance if unsure.

Operation

Once the Cutex Upper Looper is correctly installed and adjusted, it will function as an integral part of your Juki overlock machine's stitching mechanism. No specific operational steps are required for the looper itself beyond ensuring its proper installation. The machine's normal operation will engage the looper to form stitches.

Maintenance

Regular maintenance of your overlock machine, including the looper area, will extend the life of the component and ensure consistent stitch quality.

- **Cleaning:** Periodically clean lint and thread debris from around the looper and its mechanism using a brush or compressed air.
- **Inspection:** Visually inspect the looper for any signs of wear, bending, or nicks that could snag thread or affect stitch formation. Replace if damage is observed.
- **Lubrication:** Follow your Juki machine's manual for recommended lubrication points and frequency, ensuring the looper shaft and moving parts are adequately oiled.

Troubleshooting

If you experience issues after installing the new upper looper, consider the following common problems and solutions:

- **Skipped Stitches:**
 - Check looper timing and clearance with the needle.
 - Ensure the looper is not bent or damaged.
 - Verify proper threading of the machine.
- **Thread Breakage (Upper Looper Thread):**
 - Inspect the looper for burrs or rough spots.
 - Check thread tension settings.
 - Ensure the thread path is clear and free of obstructions.
- **Poor Stitch Quality:**
 - Re-check looper installation and adjustments.
 - Verify that the correct type and size of needle and thread are being used.

For persistent issues, consult your Juki machine's comprehensive troubleshooting guide or contact a professional technician.

Specifications

Part Number:	119-99208
Product Type:	Upper Looper
Brand:	Cutex
Compatibility:	Juki MO-3600, MO-3700, MO-3900, MO-6700, MO-6900 Series Overlock Sewing Machines

Warranty and Support

Specific warranty information for the Cutex Upper Looper (Part #119-99208) was not provided in the product details. For warranty inquiries, technical support, or to purchase additional parts, please contact the seller or the manufacturer directly. Retain your proof of purchase for any warranty claims. For general support regarding your Juki sewing machine, please refer to your machine's official documentation or contact Juki customer service.