

Manuals.plus /
 Nostalgic /
 Nostalgic Warehouse Egg & Dart Deco Electrical Outlet Switch Plate Cover Polished Brass Double Toggle Instruction Manual

Nostalgic 719975

Nostalgic Warehouse Egg & Dart Deco Electrical Outlet Switch Plate Cover

Model: 719975 | Brand: Nostalgic Warehouse

1. PRODUCT OVERVIEW

The Nostalgic Warehouse Egg and Dart Electric Outlet Cover Plate is designed to enhance your living space with a classic and elegant aesthetic. Crafted from durable hot-forged brass, these switch and outlet plates feature intricate, neoclassical details that complement various home décor styles. They are built for longevity and easy installation, providing a sophisticated upgrade to any room.



Image: Front view of the Polished Brass Double Toggle Switch Plate, showcasing its intricate Egg & Dart border design.

2. FEATURES

- **Authentic Egg & Dart Design:** Neoclassical details add elegance and glamor to any home décor.
- **Exceptional Craftsmanship:** Made from solid hot-forged brass, ensuring durability and exquisite detail.
- **Premium Finishes:** Available in multiple beautiful finishes to suit modern, vintage, or traditional interior designs.
- **Quick & Easy DIY Installation:** Simple to install with all required hardware included.
- **Historically Inspired Hardware:** Reflects over 40 years of commitment to vintage-inspired designs and quality.



Forged from 100% brass for fine detail and durability.

Solid brass construction offers exceptional durability, corrosion resistance, low maintenance, aesthetic appeal, enhanced value, and versatility, making it an ideal choice for high-quality hardware and fixtures.

Image: A close-up view highlighting the solid brass construction and fine details of the switch plate, emphasizing its durability and aesthetic appeal.

3. SETUP AND INSTALLATION

Installation of your Nostalgic Warehouse switch plate is designed to be straightforward. All necessary hardware is included to facilitate a quick and easy upgrade to your electrical outlets and switches.

1. **Safety First:** Before beginning installation, ensure the power to the corresponding electrical circuit is turned off at the circuit breaker.
2. **Remove Old Plate:** Carefully unscrew and remove the existing switch or outlet plate.
3. **Position New Plate:** Align the new Nostalgic Warehouse plate over the electrical device.
4. **Secure Plate:** Use the provided screws to gently secure the new plate. *Do not overtighten*, as this can damage the plate or the electrical device.
5. **Restore Power:** Once the plate is securely installed, restore power at the circuit breaker.

Note: If you are unsure about any step, consult a qualified electrician.

4. OPERATING INSTRUCTIONS

This product is a decorative electrical outlet and switch plate cover. Its primary function is aesthetic enhancement and protection of the electrical components behind it. Operation is limited to the normal use of the electrical switches or outlets it covers.

For toggle switch plates, simply flip the toggle switch up or down to control the connected light or device. For outlet covers, insert electrical plugs into the receptacles as usual.

5. MAINTENANCE

To maintain the beauty and finish of your Nostalgic Warehouse Egg & Dart plate, follow these guidelines:

- **Cleaning:** Wipe gently with a soft, damp cloth. Avoid abrasive cleaners, solvents, or polishes that may damage the finish.
- **Polished Brass Finish:** The polished brass finish is designed to maintain its shine. Regular dusting with a soft cloth is usually sufficient.
- **Unlacquered Brass (if applicable):** If you have an unlacquered brass variant, it will naturally develop a unique patina over time. This is a desired characteristic for many and does not indicate a defect. If a polished look is preferred, specialized brass polish can be used, but this will remove the patina.
- **Avoid Chemicals:** Do not expose the plate to harsh chemicals or cleaning agents, as these can cause discoloration or damage.

6. TROUBLESHOOTING

As a non-electrical component, troubleshooting for the plate itself is minimal. Most issues relate to installation or the underlying electrical device.

Common Issues and Solutions

Issue	Possible Cause	Solution
Plate does not sit flush against the wall.	Underlying electrical box or device not properly seated; overtightened screws.	Loosen screws slightly, adjust the electrical device if possible, then retighten carefully. Ensure wall surface is flat.
Scratches or damage to the finish.	Abrasive cleaning, impact during installation or use.	For minor scratches on polished brass, a non-abrasive brass polish might help. For significant damage, replacement may be necessary.

If you experience issues with the electrical function of your switch or outlet, consult a qualified electrician. Do not attempt electrical repairs yourself unless you are qualified.

7. SPECIFICATIONS

Switch Type: Toggle

Material: Brass

Color: Polished Brass

Finish Type: Polished

Configuration: Double

Installation Type: Screw-In

Item Weight: 7.2 ounces

Product Dimensions: 4.88 x 4.88 x 0.38 inches

Model Number: 719975

UPC: 640697199757

Manufacturer: Nostalgic Warehouse

Country of Origin: India

8. WARRANTY AND SUPPORT

Nostalgic Warehouse products are known for their quality and durability. While specific warranty details are not provided in the immediate product information, the brand emphasizes its commitment to lasting products and exceptional craftsmanship.

For any product inquiries, support, or to learn more about Nostalgic Warehouse's offerings, please visit their official store or contact their customer service. They are dedicated to preserving architectural heritage and ensuring customer satisfaction.

Your browser does not support the video tag.

Video: An official video from Nostalgic Warehouse showcasing the quality and design of their switchplates, highlighting why they stand out.

You can find more information and contact details on the [Nostalgic Warehouse Brand Store](#).

© 2024 Nostalgic Warehouse. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B075DK27MY>

More documents and user manuals: <https://manuals.plus/>