

Silva Schneider WKS 1-36

Silva Schneider Homeline WKS 1-36 Wine Refrigerator User Manual

Model: WKS 1-36

1. INTRODUCTION

Thank you for choosing the Silva Schneider Homeline WKS 1-36 Wine Refrigerator. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read these instructions carefully before use and keep them for future reference.

2. SAFETY INSTRUCTIONS

- Ensure the appliance is properly grounded.
- Do not operate the appliance with a damaged power cord or plug.
- Keep ventilation openings clear of obstructions.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- This appliance is intended for household use only.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not allow children to play with or inside the appliance.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. Inspect the appliance for any damage during transit. Report any damage to your retailer immediately.

3.2 Placement

- Place the wine refrigerator on a firm, level surface capable of supporting its weight when fully loaded.
- Ensure adequate ventilation around the appliance. Leave at least 10 cm (4 inches) of space at the back and sides for proper air circulation.

- Avoid placing the appliance in direct sunlight or near heat sources such as ovens, radiators, or heaters, as this can affect cooling performance and energy consumption.
- Do not install in areas with high humidity.

3.3 Leveling

The appliance is equipped with adjustable feet. Use a spirit level to ensure the unit is perfectly level. Adjust the feet by turning them clockwise or counter-clockwise until the appliance is stable and level.

3.4 Initial Cleaning

Before first use, clean the interior and exterior of the wine refrigerator with a soft cloth and a mild detergent. Rinse with clean water and dry thoroughly.

3.5 Power Connection

After placement and cleaning, allow the appliance to stand upright for at least 2-4 hours before connecting it to a power outlet. This allows the refrigerant to settle. Connect the power cord to a dedicated, grounded electrical outlet.



Image 1: The Silva Schneider Homeline WKS 1-36 Wine Refrigerator with its door open, revealing multiple shelves filled with wine bottles. This illustrates the internal layout and storage capacity.

4. OPERATING INSTRUCTIONS

4.1 Electronic Temperature Control

The wine refrigerator features electronic temperature control, allowing you to set the desired temperature between 5°C and 18°C (41°F and 64°F). Use the control panel, typically located at the top of the unit, to adjust the temperature. Press the '+' or '-' buttons to increase or decrease the temperature setting. The display will show the current internal temperature or the set temperature.

4.2 Loading Bottles

The WKS 1-36 has a capacity of 96 liters, accommodating up to 34 standard wine bottles. It is equipped with 6 1/2 storage grids designed to securely hold bottles. Arrange bottles to allow for proper air circulation within the unit. Avoid overloading the shelves.



Image 2: A full front view of the Silva Schneider Homeline WKS 1-36 Wine Refrigerator, showcasing its sleek design with a glass door and stainless steel frame, filled with wine bottles.

4.3 Door Operation


The appliance features a glass door with a stainless steel frame. Ensure the door is closed properly after each use to maintain the internal temperature and energy efficiency. Avoid opening the door frequently or for extended periods.



Elektronische Temperatur
Einstellung



herausziehbare
Chrom-Einlageböden

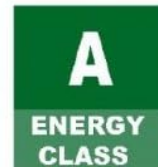

Weintemperierschrank :

- Nutzinhalt 96 l
- für 34 Weinflaschen
- Elektronische Temperaturregelung (5°C bis 18°C)
- Glastür mit Edelstahlrahmen
- Energieeffizienzklasse A (0,38 kWh/ Jahr)
- 6 ½ Einlagegitter für Flaschen
- verstellbare Füße

Image 3: This image highlights key features of the wine refrigerator, including the electronic temperature setting display, the design of the pull-out chrome shelves for easy access to bottles, and the Energy Class A rating, indicating its energy efficiency.

5. MAINTENANCE

5.1 Cleaning the Interior

To clean the interior, unplug the appliance. Remove all bottles and shelves. Wash the interior surfaces with a solution of mild detergent and warm water. Rinse with clean water and dry thoroughly with a soft cloth. Do not use abrasive cleaners or solvents.

5.2 Cleaning the Exterior

Clean the exterior surfaces, including the glass door and stainless steel frame, with a soft cloth and a mild, non-abrasive cleaner. For stainless steel, use a specialized stainless steel cleaner to maintain its finish. Wipe dry immediately to prevent water spots.

5.3 Power Disconnection

Always unplug the wine refrigerator from the power outlet before performing any cleaning or maintenance tasks to prevent electric shock.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not operate	No power supply. Power cord not plugged in. Circuit breaker tripped.	Check power connection. Ensure plug is fully inserted. Reset circuit breaker.
Temperature is not cold enough	Door not closed properly. Door opened too frequently. Ambient temperature too high. Ventilation blocked. Temperature setting too high.	Ensure door is sealed. Reduce door openings. Move appliance to a cooler location. Clear obstructions from vents. Lower temperature setting.
Excessive noise	Appliance not level. Objects vibrating against the unit.	Adjust leveling feet. Ensure nothing is touching the appliance.
Light not working	Light bulb faulty (if replaceable). Electrical issue.	Consult a qualified technician if the light is not working.

7. SPECIFICATIONS

- Model:** WKS 1-36
- Brand:** Silva Schneider
- Capacity:** 96 Liters
- Bottle Capacity:** 34 standard wine bottles
- Temperature Range:** 5°C to 18°C (41°F to 64°F)
- Energy Efficiency Class:** A
- Annual Energy Consumption:** Approximately 0.38 kWh/year
- Dimensions (H x W x D):** 842 x 490 x 440 mm (33.1 x 19.3 x 17.3 inches)
- Weight:** 29 kg (63.9 lbs)
- Features:** Electronic temperature control, Glass door with stainless steel frame, 6 1/2 storage grids, Adjustable feet

8. WARRANTY AND SUPPORT

This Silva Schneider appliance comes with a standard manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions. For technical support, service, or spare parts, please contact your retailer or the authorized Silva Schneider service center in your region. Keep your purchase receipt as proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question