

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Techwood](#) /

› Techwood TRP-1366 Multifunction Food Processor Instruction Manual

Techwood TRP-1366

Techwood TRP-1366 Multifunction Food Processor Instruction Manual

INTRODUCTION

Thank you for purchasing the Techwood TRP-1366 Multifunction Food Processor. This appliance is designed to assist you with various kitchen tasks, including mixing, kneading, blending, and mincing. Please read this instruction manual carefully before first use to ensure safe and optimal operation. Keep this manual for future reference.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Do not immerse the motor unit in water or any other liquid. Clean with a damp cloth only.
- Keep hands and utensils away from moving parts during operation to prevent injury.
- Always unplug the appliance from the power supply before assembling, disassembling, or cleaning.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Avoid contact with sharp blades. Handle with care.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only original Techwood accessories and attachments.
- Do not overload the motor. Refer to the maximum capacities in the operating section.

PRODUCT COMPONENTS

The Techwood TRP-1366 Multifunction Food Processor comes with several components to facilitate various culinary tasks.

- **Motor Unit:** The main body housing the 1300W motor and control dial.
- **Stainless Steel Mixing Bowl:** 6.5-liter capacity bowl for mixing and kneading.
- **Tilt-Head with Locking Button:** Allows easy access to the mixing bowl and attachments.

- **Splash Guard:** Transparent cover to prevent splattering during operation.
- **Dough Hook:** For kneading heavy doughs.
- **Whisk:** For whipping cream, egg whites, and light batters.
- **Flat Beater:** For mixing cakes, cookies, and general batters.
- **Glass Blender:** 1.5-liter capacity for blending liquids, smoothies, and sauces.
- **Meat Grinder Attachment:** For mincing meat.



Image: The Techwood TRP-1366 Food Processor and its various attachments as seen in the product packaging.

SETUP

Before first use, clean all parts that will come into contact with food. Ensure the appliance is unplugged.

Assembling the Mixer

1. Place the motor unit on a stable, flat, and dry surface.
2. Press the tilt-head locking button and lift the motor head.
3. Place the stainless steel mixing bowl onto the base and turn it clockwise until it locks securely.
4. Insert the desired attachment (dough hook, whisk, or flat beater) into the attachment shaft and turn it counter-clockwise until it clicks into place.
5. Lower the motor head until it locks into position. You should hear a click.
6. Attach the splash guard by aligning it with the mixing bowl and rotating it until it fits snugly.



Image: The Techwood TRP-1366 Food Processor with its head tilted up, showing the whisk attachment and mixing bowl.

Assembling the Blender

1. Ensure the blender base with blades is securely attached to the glass jug.
2. Remove the cover from the top attachment port on the motor unit.
3. Place the assembled glass blender onto the attachment port and turn it clockwise until it locks.

Assembling the Meat Grinder

1. Assemble the meat grinder components (screw, blade, grinding plate, ring nut).
2. Remove the front attachment port cover from the motor unit.
3. Insert the assembled meat grinder into the front attachment port and secure it with the locking mechanism.



Image: The Techwood TRP-1366 Food Processor with the meat grinder attachment installed on the front port.

OPERATING INSTRUCTIONS

The appliance features a 6-speed selector dial and a pulse function for precise control.

Using the Mixer (Dough Hook, Whisk, Flat Beater)

1. Ensure the mixer is correctly assembled with the desired attachment and mixing bowl.
2. Add ingredients to the mixing bowl. Do not exceed the maximum capacity of 6.5 liters.
3. Plug the appliance into a 220-240V~ 50Hz power outlet.
4. Turn the speed selector dial to the desired speed (1-6). Start with a lower speed and gradually increase if needed.
5. For short bursts of maximum power, turn the dial to the 'P' (Pulse) setting and hold. Release to stop.
6. When finished, turn the speed selector dial to '0' (Off) and unplug the appliance.
7. Press the tilt-head locking button to lift the motor head and remove the attachment and bowl.

Using the Blender

1. Ensure the blender is correctly assembled and securely attached to the motor unit.
2. Add ingredients to the glass blender jug. Do not exceed the maximum capacity of 1.5 liters.
3. Secure the blender lid.
4. Plug the appliance into a power outlet.
5. Turn the speed selector dial to the desired speed (1-6) or use the 'P' (Pulse) function for quick blending.
6. When finished, turn the speed selector dial to '0' (Off) and unplug the appliance.
7. Carefully remove the blender jug.

Using the Meat Grinder

1. Ensure the meat grinder is correctly assembled and securely attached to the motor unit.
2. Prepare meat by cutting it into small pieces that fit into the feeding tube. Remove bones and tough sinews.
3. Place a bowl under the grinder outlet to collect the minced meat.
4. Plug the appliance into a power outlet.
5. Turn the speed selector dial to a medium speed (e.g., 3-4).
6. Feed the meat into the feeding tube using the food pusher. Never use your fingers or other utensils.
7. When finished, turn the speed selector dial to '0' (Off) and unplug the appliance.
8. Disassemble the meat grinder for cleaning.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygiene of your appliance.

Cleaning the Motor Unit

- Always unplug the appliance before cleaning.
- Wipe the exterior of the motor unit with a damp cloth. Do not use abrasive cleaners or immerse in water.

Cleaning Attachments and Bowls

- The stainless steel mixing bowl, dough hook, whisk, flat beater, glass blender jug, and meat grinder components (except the motor unit) are generally dishwasher safe. Refer to specific instructions for each part if unsure.
- For manual cleaning, wash in warm, soapy water, rinse thoroughly, and dry immediately.
- Exercise extreme caution when handling the blender blades and meat grinder blade as they are very sharp.

TROUBLESHOOTING

If you encounter issues with your Techwood TRP-1366, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not start.	Not plugged in; power switch off; motor head not locked; attachment not correctly installed.	Check power connection; ensure speed dial is not at '0'; ensure motor head is fully lowered and locked; verify attachment installation.

Problem	Possible Cause	Solution
Motor stops during operation.	Overload protection activated; power interruption.	Turn off, unplug, and allow to cool for 15-20 minutes. Reduce load if overloaded. Check power supply.
Attachments not mixing properly.	Incorrect attachment for task; insufficient ingredients.	Ensure correct attachment is used (e.g., whisk for light mixtures, dough hook for heavy dough). Add more ingredients if too little for the bowl size.
Loud noise or vibration.	Appliance not on a stable surface; attachment not properly secured.	Place on a flat, stable surface. Re-check that all attachments and the mixing bowl are securely locked.

If the problem persists, contact Techwood customer support.

SPECIFICATIONS

Key technical details for the Techwood TRP-1366 Multifunction Food Processor:

- **Model:** TRP-1366
- **Brand:** Techwood
- **Power:** 1300 Watts
- **Voltage:** 220-240V~ 50Hz
- **Mixing Bowl Capacity:** 6.5 Liters (Stainless Steel)
- **Blender Capacity:** 1.5 Liters (Glass)
- **Speeds:** 6 speed settings + Pulse function
- **Control Type:** Push Button / Rotary Dial
- **Special Feature:** Planetary Mixing System
- **Product Dimensions (D x W x H):** Approximately 60 cm x 30 cm x 38 cm
- **Item Weight:** Approximately 8 kg (17.64 lbs)
- **Blade Material:** Stainless Steel
- **Dishwasher Safe Parts:** Yes (refer to cleaning section for details)

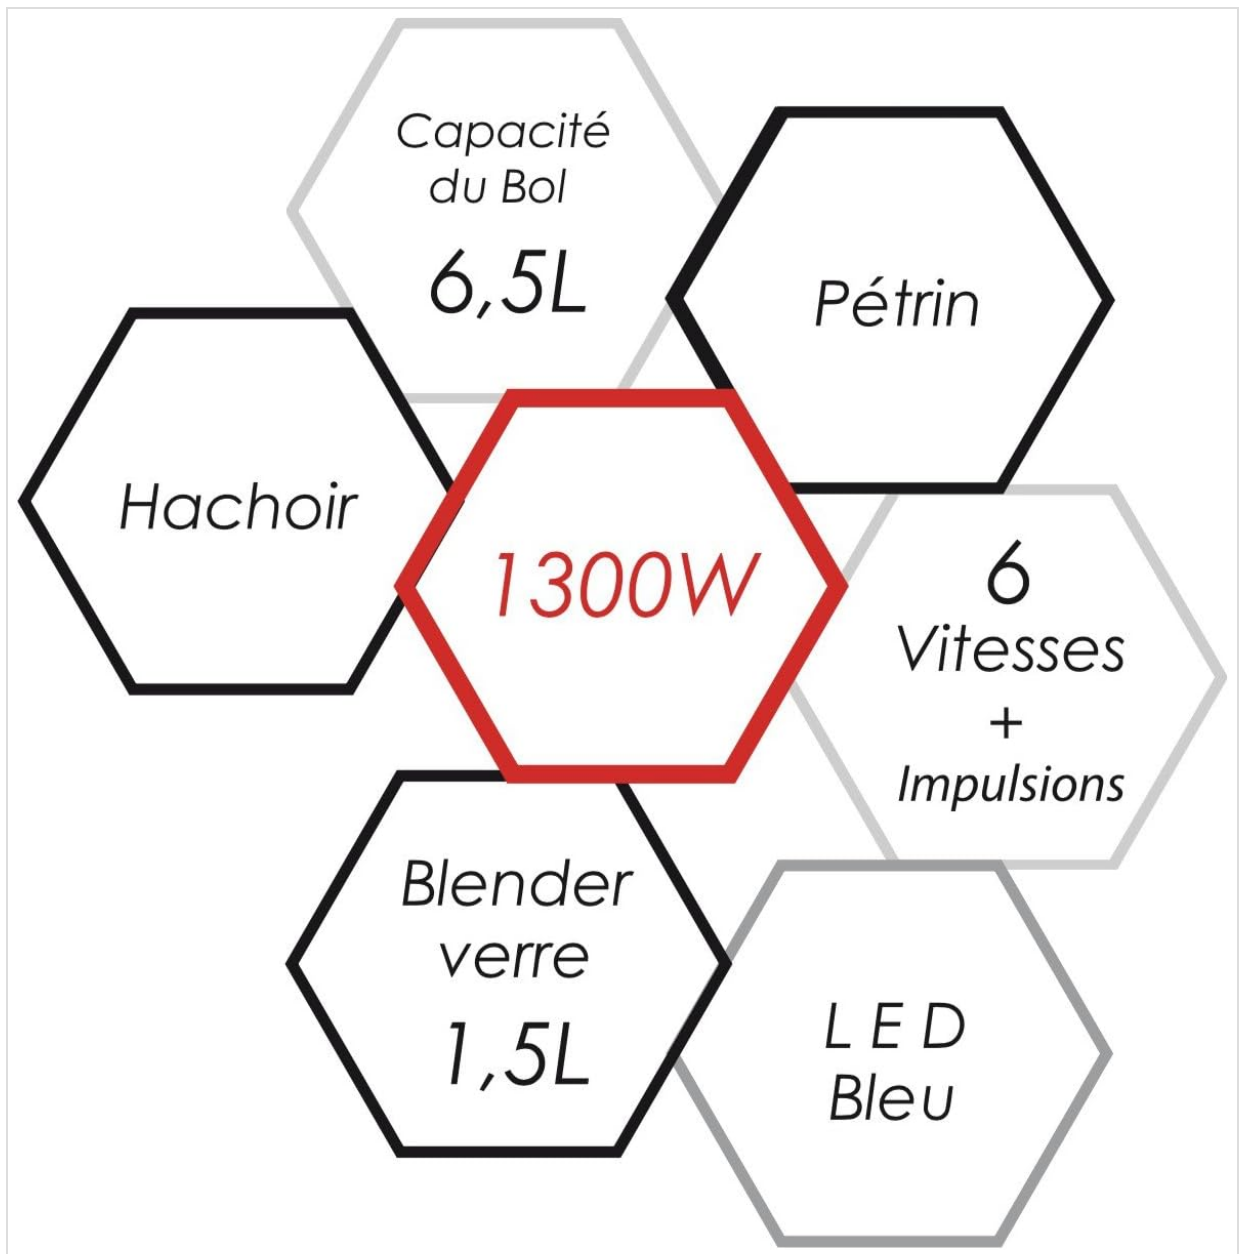


Image: A visual summary of the Techwood TRP-1366's main features and capacities.

WARRANTY AND SUPPORT

This Techwood TRP-1366 Multifunction Food Processor comes with a **2-year manufacturer warranty**.

For warranty claims, technical support, or spare parts, please contact your retailer or the official Techwood customer service. Keep your proof of purchase for warranty validation.

For more information, you may visit the [Techwood Brand Store](#).