

**Nokia TA-1036-R**

# Nokia 3310 3G Mobile Phone User Manual

Model: TA-1036-R

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Nokia 3310 3G mobile phone. Please read this guide carefully before operating the device. The Nokia 3310 3G combines classic design with modern features, offering reliable communication and entertainment.

Key features include a long-lasting battery, a clear 2.4-inch LCD screen, the classic Snake game, a 2MP camera, and essential connectivity options.

## 2. WHAT'S IN THE Box

Your Nokia 3310 3G package should contain the following items:

- Nokia 3310 3G Device
- Nokia MicroUSB Charger
- Charging/Data Cable
- Quick Start Guide

## 3. DEVICE OVERVIEW



Figure 3.1: Front view of the Nokia 3310 3G, showing the display and keypad.



Figure 3.2: Back view of the Nokia 3310 3G, highlighting the camera and flash.

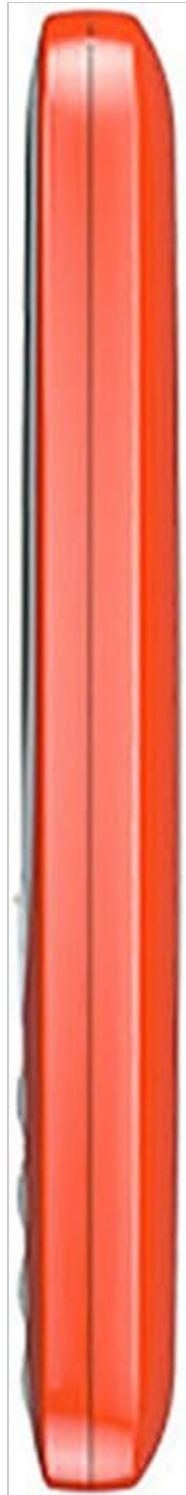


Figure 3.3: Side view of the Nokia 3310 3G, illustrating its compact design.

## 4. SETUP

---

### 4.1 Inserting the SIM Card and Battery

1. Remove the back cover of the phone by gently prying it open from the notch.
2. If the battery is already inserted, remove it by lifting it from the bottom edge.
3. Insert your SIM card(s) into the designated slot(s) with the gold contacts facing down. Ensure it clicks into place.
4. Insert the battery, aligning the gold contacts with the phone's terminals.
5. Replace the back cover, pressing firmly until it snaps into place.

## 4.2 Charging the Battery

1. Connect the Micro USB end of the charging cable to the phone's charging port.
2. Plug the other end of the charger into a wall outlet.
3. The battery indicator on the screen will show charging progress.
4. Once fully charged, disconnect the charger.

## 4.3 Powering On/Off

- To power on: Press and hold the Power key (usually the red end call button) until the phone vibrates and the Nokia logo appears.
- To power off: Press and hold the Power key, then select "Power off" from the options on the screen.

# 5. BASIC OPERATION

---

## 5.1 Navigation

- Use the **Navigation key** (the central D-pad) to scroll through menus and options.
- Press the **Center key** to select an item or confirm an action.
- Use the **Left and Right selection keys** (soft keys below the screen) for context-sensitive options displayed on the screen.
- Press the **End key** (red button) to return to the home screen or end a call.

## 5.2 Making Calls

1. From the home screen, enter the phone number using the keypad.
2. Press the **Call key** (green button) to initiate the call.
3. To end a call, press the **End key**.
4. To answer an incoming call, press the **Call key**.

## 5.3 Sending Messages

1. Go to *Menu > Messaging*.
2. Select *Create message* or *New message*.
3. Enter your message using the keypad. The phone supports predictive text (T9) for faster typing.
4. Enter the recipient's phone number or select from your contacts.
5. Select *Send*.



Figure 5.1: Nokia 3310 3G phones showing the messaging interface.

## 6. FEATURES

### 6.1 Camera

The Nokia 3310 3G is equipped with a 2MP rear camera and an LED flash. To use the camera:

1. Go to *Menu > Camera*.
2. Frame your shot using the screen as a viewfinder.
3. Press the **Center key** to take a photo.
4. Photos are saved to the phone's memory or an inserted MicroSD card.

### 6.2 Snake Game

Enjoy the classic Snake game with a modern update. To play:

1. Go to *Menu > Games > Snake*
2. Use the **Navigation key** to control the snake and eat food to grow longer.
3. Avoid hitting walls or your own tail.



Figure 6.1: The Nokia 3310 3G featuring the updated Snake game.

### 6.3 Connectivity

- **Bluetooth 2.1:** For connecting to wireless headsets, car kits, or transferring files. Access via *Menu > Settings > Connectivity > Bluetooth*.
- **Micro USB:** For charging and connecting to a computer for data transfer.
- **3.5 mm Audio Jack:** For connecting wired headphones.
- **3G Network:** Provides mobile data connectivity for basic internet browsing and online features.

## 7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the phone's surface. Avoid liquid cleaners.
- **Storage:** Store the phone in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid overcharging and fully discharging the battery frequently.
- **Water Resistance:** The phone has a water-resistant rating, but it is not waterproof. Avoid submerging it in water.

## 8. TROUBLESHOOTING

Problem	Solution
Phone does not power on	Ensure the battery is correctly inserted and charged. Connect the charger and try again.
Cannot make or receive calls	Check if the SIM card is properly inserted. Verify network signal strength. Contact your service provider if the issue persists.
Battery drains quickly	Reduce screen brightness. Close unused applications. Limit background data usage.
Phone freezes or becomes unresponsive	Remove and reinsert the battery to perform a soft reset. If the issue continues, consider a factory reset (backup data first).
Cannot connect to Bluetooth device	Ensure Bluetooth is enabled on both devices. Make sure both devices are in pairing mode and within range.

## 9. SPECIFICATIONS

Feature	Detail
Model Number	TA-1036-R
Product Dimensions	4.61 x 2.06 x 0.53 inches
Item Weight	1.6 ounces
Display	2.4 Inches LCD, 320 x 240 pixels
Camera	2.0 MP with LED flash
RAM	0.5 GB
Memory Storage Capacity	32 GB (via MicroSD card slot)
Battery	1 Lithium Polymer (1220 mAh), up to 24 hours talk time
Connectivity	3G Cellular, Bluetooth 2.1, Micro USB, 3.5 mm Audio Jack
Operating System	Android <i>(Note: This is likely a misclassification in the source data, as feature phones typically run proprietary OS like KaiOS or Series 30+.)</i>
Human Interface Input	Keypad

## 10. OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

This video provides a visual overview of the Nokia 3310 3G phone's design and key functionalities, including calling, messaging, and the Snake game. It showcases the phone's various color options and user interface.

## **11. WARRANTY AND SUPPORT**

---

For warranty information, technical support, or service inquiries, please refer to the warranty card included in your product package or visit the official Nokia support website. Keep your proof of purchase for warranty claims.