

MAX POWER MPD125L

Max Power MPD125L Karaoke DJ Speaker System User Manual

Model: MPD125L

INTRODUCTION

Thank you for purchasing the Max Power MPD125L Karaoke DJ Speaker System. This portable 12-inch speaker system is designed to deliver powerful sound and vibrant LED lighting for your entertainment needs. It features a built-in rechargeable battery, multiple connectivity options including USB, SD, AM/FM radio, and Bluetooth, along with a strong amplifier for an immersive audio experience.

Please read this manual thoroughly before operating the device to ensure proper use, optimal performance, and to prevent damage.

SAFETY INFORMATION

- Do not expose the unit to rain or moisture to prevent fire or electric shock.
- Do not open the casing. There are no user-serviceable parts inside. Refer all servicing to qualified personnel.
- Place the unit on a stable, flat surface to prevent it from falling.
- Keep the unit away from direct sunlight, heat sources, and excessive dust.
- Ensure proper ventilation. Do not block ventilation openings.
- Use only the power adapter supplied with the unit.
- Unplug the unit during lightning storms or when unused for long periods.
- Avoid placing heavy objects on the power cord.
- Do not insert any objects into the unit's openings.

PACKAGE CONTENTS

Please check that all items are present and in good condition:

- Max Power MPD125L Karaoke DJ Speaker System
- Wireless Microphone
- Wireless Remote Control
- Power Adapter/Charging Cable
- User Manual (this document)

PRODUCT FEATURES



Image: Front view of the Max Power MPD125L Karaoke DJ Speaker System. It is a black, portable speaker with a retractable handle on top and wheels at the bottom. The front features a large speaker grille with blue LED lights illuminating the woofer, indicating its active state.

- **Portable Design:** 12-inch speaker with built-in retractable handle and wheels for easy transport.
- **Powerful Audio:** 4000W peak power output for loud and clear sound with good bass.
- **Built-in Rechargeable Battery:** Provides up to 4 hours of continuous playback. (Battery size: 12V/2.6A)
- **LED Dance Lights:** Integrated LED lights that flash, transforming any room into a disco club.
- **Multiple Connectivity Options:**
 - **Bluetooth:** Wireless streaming from compatible devices (laptops, smartphones).
 - **USB Slot:** For playing audio files from USB drives.
 - **SD Slot:** For playing audio files from SD cards.
 - **AM/FM Radio:** Built-in tuner for radio broadcasts.
- **Karaoke Functionality:** Includes a wireless microphone for karaoke sessions.
- **Full-Function Wireless Remote Control:** For convenient operation from a distance.
- **Impedance:** 4 Ohms.
- **Frequency Response:** 40 Hz - 20 kHz.

SETUP

1. Charging the Speaker

1. Locate the DC input port on the speaker (usually on the rear panel).
2. Connect the supplied power adapter to the DC input port.
3. Plug the power adapter into a standard electrical outlet.
4. The charging indicator light (if present) will illuminate, typically red, during charging and turn green when fully charged.

5. Allow approximately 4-6 hours for a full charge before first use. The speaker can be used while charging.

2. Wireless Microphone Setup

1. Insert appropriate batteries (not included, usually AA) into the wireless microphone.
2. Turn on the microphone. It should automatically pair with the speaker.
3. Adjust the microphone volume knob on the speaker's control panel to your desired level.

3. Remote Control Setup

1. Insert appropriate batteries (not included, usually AAA) into the wireless remote control.
2. Point the remote control towards the speaker's IR receiver (usually on the front panel or near the controls) to operate.

OPERATING INSTRUCTIONS

1. Power On/Off

Locate the Power switch (usually a rocker switch) on the speaker's control panel. Flip it to the "ON" position to power on the speaker. Flip it to "OFF" to power off.

2. Mode Selection

Press the "MODE" button on the control panel or remote control to cycle through available input modes: Bluetooth, USB, SD, FM Radio, AM Radio, AUX (if available).

3. Bluetooth Pairing

1. Turn on the speaker and select Bluetooth mode. The speaker will typically announce "Bluetooth Mode" or display "BT" and enter pairing mode (indicated by a flashing Bluetooth indicator).
2. On your smartphone, tablet, or laptop, enable Bluetooth and search for new devices.
3. Select "MPD125L" (or similar name) from the list of available devices.
4. Once paired, the speaker will confirm with an audible tone or a solid Bluetooth indicator light. You can now play audio wirelessly.

4. USB/SD Playback

1. Insert a USB flash drive or SD card (pre-loaded with MP3 or compatible audio files) into the respective slot.
2. The speaker should automatically switch to USB/SD mode and begin playing the first track. If not, press the "MODE" button to select USB or SD mode.
3. Use the Play/Pause, Next Track, and Previous Track buttons on the control panel or remote to navigate.

5. AM/FM Radio Operation

1. Select FM or AM radio mode using the "MODE" button.
2. Press and hold the Play/Pause button (often labeled "SCAN") to automatically scan and save available radio stations.
3. Use the Next Track and Previous Track buttons to switch between saved stations.
4. Extend the telescopic antenna (if present) for better reception.

6. Karaoke Function

Ensure the wireless microphone is powered on and paired. Play your desired music through any input mode (Bluetooth,

USB, etc.). Speak or sing into the microphone. Adjust the microphone volume and echo effects (if available) using the dedicated knobs on the control panel.

7. LED Dance Lights

The LED lights typically activate automatically when the speaker is powered on. There may be a dedicated button (e.g., "LIGHT" or "LED") on the control panel or remote to toggle them on/off or change patterns.

8. Volume Control

Adjust the master volume using the main volume knob on the speaker's control panel or the volume buttons on the remote control.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the exterior of the speaker. Do not use liquid cleaners or abrasive chemicals.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Recharge the battery at least once every 3 months if not in regular use.
- **Ventilation:** Ensure the speaker's ventilation openings are clear of dust and debris to prevent overheating.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted. Power cable not connected properly.	Connect the speaker to a power outlet and allow it to charge. Ensure the power cable is securely plugged into both the speaker and the outlet.
No sound from speaker.	Volume is too low. Incorrect input mode selected. Device not properly connected (Bluetooth/USB/SD).	Increase the master volume. Press the "MODE" button to select the correct input. Re-pair Bluetooth device, re-insert USB/SD, or check AUX cable connection.
Bluetooth device won't pair.	Speaker not in pairing mode. Device too far from speaker. Bluetooth on device is off.	Ensure speaker is in Bluetooth mode and indicator is flashing. Move device closer to the speaker (within 10 meters). Enable Bluetooth on your device.
Microphone not working.	Microphone is off or batteries are dead. Microphone volume is too low.	Turn on the microphone and replace batteries if necessary. Increase the microphone volume knob on the speaker.
Radio reception is poor.	Weak signal. Antenna not extended.	Relocate the speaker to an area with better signal. Fully extend the telescopic antenna.

SPECIFICATIONS

Model Number	MPD125L
--------------	---------

Brand	MAX POWER
Peak Power Output	4000 Watts
Impedance	4 Ohms
Frequency Response	40 Hz - 20 kHz
Battery Size	12V / 2.6A
Battery Life	Up to 4 hours
Product Dimensions (L x W x H)	33.02 x 38.1 x 58.42 cm (13 x 15 x 23 inches)
Product Weight	15.88 kg (35 lbs)
Compatible Devices	Laptop, Smartphone
Connector Type	USB
UPC	703510623201

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

For further assistance or inquiries, please visit the official MAX POWER website or contact their customer service department.

