



Manuals.plus /

› Moulinex /

› Moulinex DD6558 Quickchef 3in1 Immersion Blender Instruction Manual

Moulinex DD6558

Moulinex DD6558 Quickchef 3in1 Immersion Blender Instruction Manual

Model: DD6558

1. INTRODUCTION

The Moulinex DD6558 Quickchef 3in1 Immersion Blender is a high-performance kitchen tool designed for versatile food preparation. Featuring a powerful 1000W motor and advanced Powelix Technology blades, it ensures quick and smooth results for a variety of recipes. This manual provides essential information for safe and effective use of your appliance.



Image 1: The Moulinex DD6558 Quickchef 3in1 Immersion Blender with its included accessories.

2. SAFETY INFORMATION

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- Always unplug the appliance from the power supply before assembly, disassembly, or cleaning.
- Do not immerse the motor unit in water or any other liquid. Clean with a damp cloth only.
- Blades are sharp. Handle with extreme care during assembly, disassembly, and cleaning.
- This appliance is not intended for use by children. Keep the appliance and its cord out of reach of children.

- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Avoid contact with moving parts.
- Do not use attachments not recommended or sold by the manufacturer.
- Ensure the appliance is placed on a stable, flat, dry surface before use.

3. PRODUCT COMPONENTS

Your Moulinex DD6558 Quickchef 3in1 Immersion Blender includes the following components:

- **Motor Unit:** The main body containing the 1000W motor and speed controls.
- **Immersion Blender Foot:** Stainless steel blending shaft with Powelix blades.
- **800 ml Beaker:** For blending liquids and preparing sauces.
- **500 ml Chopper:** For mincing and chopping ingredients.
- **Whisk Attachment:** For whipping cream, beating eggs, and emulsifying.



Image 2: The versatile Moulinex Quickchef Immersion Blender shown with ingredients for various preparations.

4. SETUP AND ASSEMBLY

Before first use, wash all detachable parts (beaker, chopper bowl, whisk, and blending foot) in warm soapy water, rinse, and dry thoroughly. The motor unit should be wiped with a damp cloth.

4.1 Attaching the Immersion Blender Foot

1. Align the immersion blender foot with the motor unit.
2. Twist clockwise until it locks securely into place.
3. To detach, twist counter-clockwise and pull apart.

4.2 Attaching the Whisk Attachment

1. Insert the whisk into the whisk adapter.
2. Align the whisk adapter with the motor unit.
3. Twist clockwise until it locks securely into place.
4. To detach, twist counter-clockwise and pull apart.

4.3 Attaching the Chopper

1. Place the chopper blade onto the central pin inside the chopper bowl.
2. Add ingredients to the chopper bowl.
3. Place the chopper lid onto the bowl.
4. Align the motor unit with the chopper lid and twist clockwise until it locks.
5. To detach, twist counter-clockwise and lift the motor unit, then remove the lid and blade carefully.

Your browser does not support the video tag.

Video 1: Demonstration of assembling and disassembling the Moulinex Quickchef 3in1 Immersion Blender attachments.

5. OPERATING INSTRUCTIONS

The Moulinex DD6558 features 10 variable speeds and a Turbo Boost function for optimal control over your blending tasks.

5.1 General Blending (Immersion Blender Foot)

1. Ensure the immersion blender foot is securely attached to the motor unit.
2. Place ingredients in the 800ml beaker or another suitable container.
3. Immerse the blending foot into the ingredients.
4. Plug the appliance into a power outlet.
5. Press and hold the power button to start blending. Rotate the speed dial on top of the motor unit to adjust between 10 speeds.
6. For maximum power, press the Turbo button.

7. Blend until desired consistency is achieved.
8. Release the power button to stop. Unplug the appliance before removing the blending foot.

10 VELOCITÀ



Image 3: Close-up of the hand blender's motor unit, highlighting the 10-speed control dial.

5.2 Using the Chopper

1. Assemble the chopper as described in Section 4.3.
2. Plug the appliance into a power outlet.
3. Press and hold the power button to operate. Use short pulses for coarse chopping or continuous blending for finer results.
4. Release the power button to stop. Unplug the appliance before disassembling.

5.3 Using the Whisk

1. Assemble the whisk attachment as described in Section 4.2.
2. Place ingredients in a suitable bowl.
3. Plug the appliance into a power outlet.
4. Press and hold the power button to operate. Adjust speed as needed.

5. Release the power button to stop. Unplug the appliance before disassembling.

Your browser does not support the video tag.

Video 2: Demonstration of preparing mayonnaise using the Moulinex Quickchef 3in1 Immersion Blender.

6. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your appliance.

- Always unplug the appliance before cleaning.
- **Motor Unit:** Wipe with a damp cloth. Do not immerse in water.
- **Blending Foot, Beaker, Chopper Bowl, Whisk:** These parts can be washed in warm soapy water. Rinse thoroughly and dry immediately.
- **Chopper Blade:** Handle with extreme care due to sharp edges. Wash under running water with a brush if necessary, then dry.
- The product is **not** dishwasher safe. Hand washing is recommended for all detachable parts.
- Store the appliance and its accessories in a dry place.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not start.	Not plugged in; power outlet not working; attachment not securely locked.	Check power connection; try another outlet; ensure attachment is locked into motor unit.
Motor stops during operation.	Overheating due to prolonged use or too much load; ingredients too hard.	Unplug and let cool for 15-20 minutes; reduce ingredient quantity or cut into smaller pieces.
Poor blending results.	Insufficient liquid; ingredients too large; incorrect speed setting.	Add more liquid; cut ingredients smaller; increase speed or use Turbo function.
Leakage from chopper.	Lid not properly sealed; chopper bowl overfilled.	Ensure lid is securely attached; do not exceed maximum fill line.

8. SPECIFICATIONS

Feature	Detail
Brand	Moulinex
Model	DD6558
Power	1000 W
Speeds	10 variable speeds + Turbo Boost
Color	Steel / Black
Material	Stainless Steel (blades and blending foot)
Product Dimensions (HxWxD)	40H x 7W x 7D cm
Beaker Capacity	800 ml
Chopper Capacity	500 ml
Special Feature	Powelix Technology Blades
Dishwasher Safe	No
BPA Free	Yes



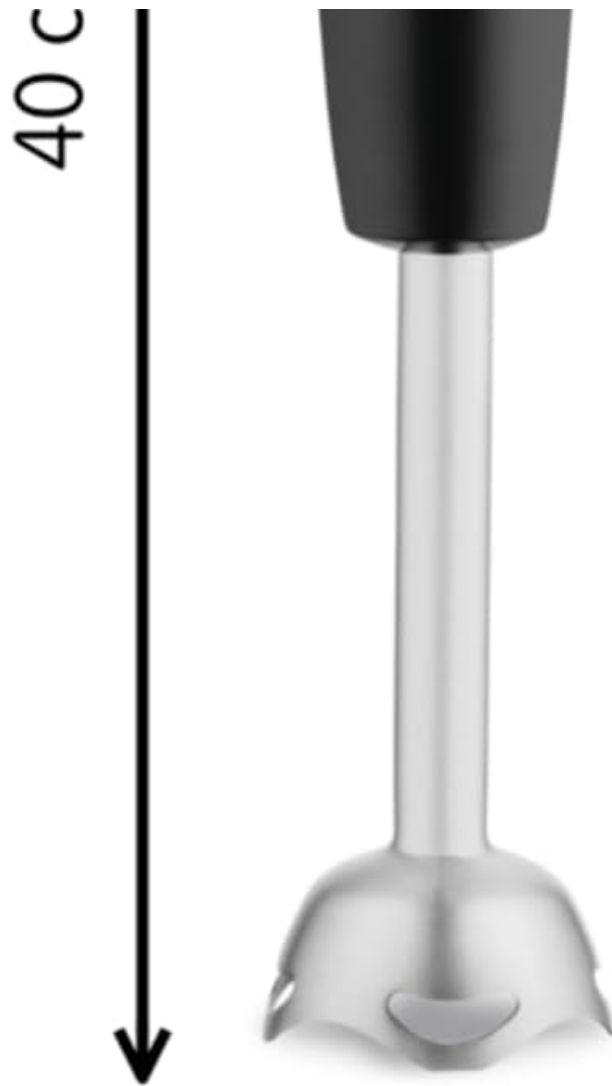


Image 4: Product dimensions of the Moulinex Quickchef Immersion Blender.

9. WARRANTY AND SUPPORT

This product comes with a Limited Warranty. For detailed warranty information and customer support, please refer to the warranty card included in the product packaging or visit the official Moulinex website. Moulinex is committed to providing innovative solutions and supports its products with authorized service centers worldwide.

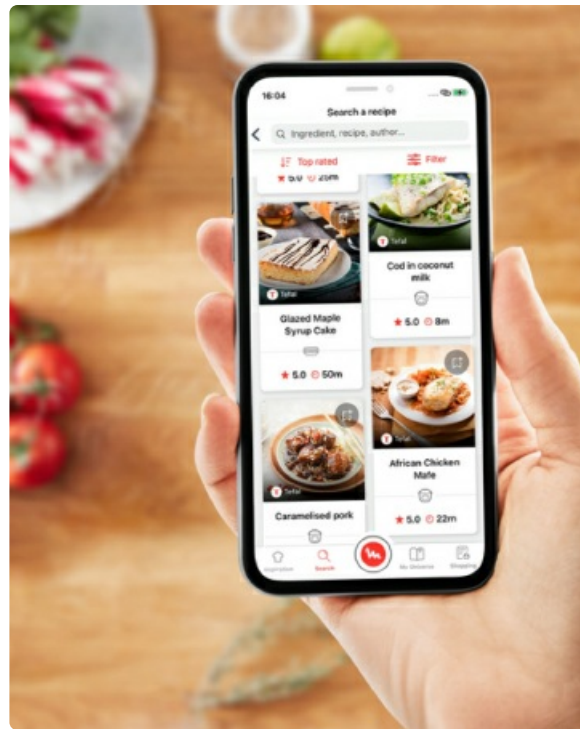


Image 5: Moulinex's commitment to product repairability for 15 years.