

[Manuals.plus](#) /

› [adonit](#) /

› Adonit Dash 3 Replacement Tip User Manual

adonit ARD3TS

Adonit Dash 3 Replacement Tip User Manual

Brand: **adonit** | Model: **ARD3TS**

INTRODUCTION

This manual provides essential information for the proper use and maintenance of your Adonit Dash 3 Replacement Tips. These tips are original Adonit parts designed specifically for the Adonit Dash 3 stylus to ensure premium performance and results.

PACKAGE CONTENTS

- 2 x Adonit Dash 3 Replacement Tips

SETUP: REPLACING THE TIP

Follow these steps to correctly replace the tip on your Adonit Dash 3 stylus:

1. **Remove the old tip:** Gently twist the existing tip on your Adonit Dash 3 stylus counterclockwise until it detaches.
2. **Insert the new tip:** Align the new replacement tip with the stylus barrel.
3. **Secure the new tip:** Twist the new tip clockwise until it is firmly secured. Do not overtighten.



ADONIT DASH 3

replacement tips

Twist counterclockwise
to remove tip.

Twist clockwise to
secure replacement tip.



color :  satin chrome

Image: Packaging for Adonit Dash 3 replacement tips, illustrating the counterclockwise twist to remove and clockwise twist to secure the tip. The package shows two tips and indicates "satin chrome" color.



Image: A close-up view of the Adonit Dash 3 stylus tip, showing its fine point design and the metallic body of the stylus.

OPERATING INSTRUCTIONS

Once the replacement tip is securely installed, your Adonit Dash 3 stylus is ready for use. The tip functions identically to the original tip, providing precise input on compatible touchscreens.

- Ensure your stylus is charged and powered on if required by your specific Dash 3 model.
- Use the stylus as you normally would for writing, drawing, or navigating on your device's screen.
- These tips are designed for optimal performance with the Adonit Dash 3 stylus only.

MAINTENANCE

Proper maintenance can extend the lifespan of your stylus tips:

- **Cleaning:** Gently wipe the tip with a soft, dry, lint-free cloth if it accumulates dust or debris. Do not use harsh chemicals or abrasive materials.
- **Storage:** Store your stylus in a protective case or a safe place to prevent accidental damage to the tip when not in

use.

- **Avoid Excessive Pressure:** While durable, applying excessive force during use can accelerate tip wear.
- **Regular Inspection:** Periodically inspect the tip for signs of wear or damage. Replace the tip if it appears worn down or if performance degrades.

TROUBLESHOOTING

If you encounter issues with your replacement tips, consider the following:

Problem	Possible Cause / Solution
Tip not responding or inconsistent input	Incorrect installation: Ensure the tip is twisted clockwise until fully secured. Stylus battery: Check if your Adonit Dash 3 stylus has sufficient battery charge. Screen protector: Some thick screen protectors may interfere with stylus performance. Worn tip: If the tip is visibly worn or damaged, replace it with a new one.
Tip wears out quickly	Excessive pressure: Reduce the pressure applied during use. Surface texture: Using the stylus on rough or textured surfaces can increase wear. Defective tip: Although rare, a manufacturing defect could cause premature wear. Contact Adonit support if issues persist with multiple tips.
Tip scratches screen	Tip worn through: This is critical. If the soft material of the tip has worn away exposing a harder inner component, immediately replace the tip to prevent screen damage. Debris on tip: Ensure there is no hard debris stuck to the tip.

SPECIFICATIONS

Product Dimensions	0.2 x 0.08 x 0.2 inches
Item Weight	0.317 ounces
ASIN	B075FXHBJ4
Item Model Number	ARD3TS
Manufacturer	Adonit
Date First Available	September 29, 2017

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the official Adonit website or contact Adonit customer service directly. Keep your purchase receipt for warranty claims.

Official Adonit Website: www.adonit.net

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question