

LELO SONA

LELO SONA Sonic Massager Instruction Manual

Model: SONA (6171)

INTRODUCTION

The LELO SONA Sonic Massager is designed to provide clitoral stimulation using sonic waves. This device is waterproof, rechargeable, and crafted from ultra-smooth silicone for comfortable use. This manual provides essential information for the safe and effective operation and maintenance of your LELO SONA device.

WHAT'S IN THE BOX

Upon opening your LELO SONA package, you will find the following items:

- LELO SONA Sonic Massager
- USB Charging Cable
- Satin Storage Pouch
- Warranty Registration Card
- Detailed Instruction Manual (this document)
- Personal Moisturizer Sachet (water-based lubricant)



Image: LELO SONA package contents.

KEY FEATURES

- **Sonic Wave Stimulation:** Utilizes sonic pulses for clitoral stimulation, offering a distinct sensation compared to traditional vibrations.
- **8 Pleasure Settings:** A range of 8 modes to customize the experience from gentle murmurs to satisfying pulses.
- **Premium Silicone:** Crafted from high-quality, ultra-smooth silicone for a luxurious feel and body-safe use.
- **100% Waterproof:** IPX7 certified, making it safe for use in water and easy to clean.
- **Rechargeable:** Equipped with a long-lasting rechargeable battery for extended use.
- **Ergonomic Design:** Sculpted to fit comfortably in hand for ease of use.



Image: LELO SONA features overview.

SETUP

Initial Charging

Before first use, fully charge your LELO SONA device. This typically takes approximately 2 hours.

1. Locate the USB charging cable provided in the package.
2. Plug the small end of the USB cable into the charging port on your LELO SONA device.
3. Connect the larger end of the USB cable to any USB port, such as a laptop or a wall adapter (not included).
4. The LED lights on the device will blink to indicate charging. They will stop blinking or remain steadily lit when fully charged.

Important: Ensure the charging port is completely dry before plugging in the cable to prevent damage. Use only the LELO charging cable to avoid damaging your device. Do not leave the device charging overnight or use it while it's plugged in to prevent battery damage.

Your browser does not support the video tag.

Video: Official LELO SONA instructional video demonstrating charging and basic operation.

OPERATING INSTRUCTIONS

Unlocking the Device (Travel Lock)

If your device does not turn on, it may be in travel lock mode. To unlock it:

- Press and hold both the + and - buttons simultaneously for 5 seconds. The lights will indicate it's unlocked.

Basic Operation

1. **To Turn On:** Press the + button. The LED lights will blink to indicate the battery level.
2. **To Switch Between Modes:** Press the center button (infinity symbol) to cycle through the 8 available pleasure settings.
3. **To Decrease or Increase Intensity:** Use the + and - buttons to adjust the intensity within the selected mode.
4. **To Turn Off:** Hold down the - button until the device powers off.

Usage Tips

Place SONA's tip over - but not on - your clit. By pressing the + button you can turn SONA on and then continue using +/- to find the perfect intensity for you. Apply a little water-based personal lubricant to help create a seal between your body and SONA. Thanks to the indirect contact, SONA is perfect for prolonged use, creating wave of climax after climax in a way you've truly never felt before.



Features



SONSONIC TECHNOLOGY

deep and gentle sonic wave stimulation



8 SETTINGS

from a teasing murmur to a satisfying pulse



SCULPTED FOR YOUR PLEASURE

made from a single piece of silicone



WATERPROOF DESIGN

perfect for the bath and shower



EXTRA LONG-LASTING CHARGE

longer time for pleasure



EXTRA-SOFT SILICONE

premium silicone that feels warm to the touch

Image: How to use the LELO SONA massager.

MAINTENANCE

Cleaning

Proper cleaning after each use is essential for hygiene and to prolong the life of your device.

1. Wash the device with lukewarm water and a gentle, silicone-safe soap.
2. Alternatively, use a specialized toy cleaning spray (e.g., LELO Premium Cleaning Spray). Spray it on, leave for 5 seconds, then gently wipe away.
3. Pay close attention to cleaning the mouth of the device. Spray cleaning solution inside and wipe thoroughly. Avoid applying excessive force or scrubbing, as this can damage the opening.
4. Rinse thoroughly with clean water and pat dry with a lint-free cloth.

Storage

Store your LELO SONA in the provided satin pouch in a dry, safe place away from direct sunlight or extreme temperatures. Avoid storing it with other toys made of different materials to prevent material degradation.

TROUBLESHOOTING

- **Device not turning on:** Ensure the device is fully charged. Check if the travel lock is activated (see "Unlocking the Device" above).
- **Weak or inconsistent stimulation:** Ensure the device is fully charged. Clean the device thoroughly, especially the mouth, to ensure no debris is obstructing the sonic waves.
- **Charging issues:** Ensure the charging cable is securely connected and the USB port is functional. Verify the charging port on the device is dry before connecting.
- **Skin irritation:** Discontinue use immediately. Ensure you are using a water-based lubricant and cleaning the device properly. Consult a healthcare professional if irritation persists.

SPECIFICATIONS

Brand	LELO
Model Name	SONA
Item Model Number	6171
Material	Silicone, ABS Plastic
Color	Black
Product Dimensions	3.9 x 3.46 x 2.2 inches
Item Weight	4.48 ounces
Battery	1 Lithium Polymer battery (included)
Waterproof Rating	IPX7

WARRANTY & SUPPORT

The LELO SONA Sonic Massager comes with a **1-year warranty** against manufacturing defects. Please refer to the Warranty Registration Card included in your package for detailed terms and conditions, and instructions on how to register your product for extended warranty benefits.

For further assistance, product support, or to inquire about warranty claims, please visit the official LELO website or contact LELO customer service directly. Contact information can typically be found on the LELO website or on your warranty card.