

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Better Living](#) /
- › [Better Living Clever Triple Shower Dispenser User Manual](#)

Better Living 77354

Better Living Clever Triple Shower Dispenser User Manual

Model: 77354

PRODUCT OVERVIEW

The Better Living Clever Triple Shower Dispenser is designed to organize your shower space by neatly storing and dispensing shampoo, conditioner, and body wash. Its modern design and convenient lever-button operation make it a practical addition to any bathroom. Each chamber holds 17 oz (500mL) of liquid, and the unit includes accessory hooks for razors or loofahs. This dispenser offers a tool-free installation method for easy setup.



Image: Front view of the Better Living Clever Triple Shower Dispenser, showcasing its three clear chambers and white/chrome finish.

SETUP AND INSTALLATION

The Clever Triple Shower Dispenser is designed for easy, tool-free installation using the included waterproof silicone glue and double-sided tape. For optimal adhesion and long-term stability, follow these steps carefully:

- 1. Prepare the Surface:** Thoroughly clean the desired installation area on your shower wall. Ensure the surface is dry and free of soap scum, dirt, or residue. For best results, clean with rubbing alcohol and allow to dry completely.
- 2. Apply Adhesive:** Apply the waterproof silicone glue to the back of the mounting bracket. Ensure even coverage. Attach the double-sided tape strips to the designated areas on the bracket.
- 3. Position and Press:** Carefully position the dispenser on the cleaned wall surface. Press firmly for at least 30 seconds to ensure good contact with the adhesive.
- 4. Secure with Tape (Optional but Recommended):** Use masking tape to temporarily hold the bracket in place while the silicone dries.
- 5. Allow to Cure:** It is crucial to allow the adhesive to cure for a minimum of 24 hours before filling the chambers or using the dispenser. Do not touch or use the shower during this curing period.
- 6. Attach Chambers:** Once the adhesive is fully cured, slide the individual dispenser chambers onto the mounting bracket until they click securely into place.



Image: An illustrative diagram detailing the "No Tools Installation" process, highlighting the included waterproof silicone glue, 2-sided tape, and liquid labels, and showing how the chambers click into the mounted base.

OPERATING INSTRUCTIONS

Using your Clever Triple Shower Dispenser is straightforward. Follow these steps for filling and dispensing:


Filling the Chambers:

- Gently lift each individual chamber from the mounting bracket.
- Remove the top lid of the chamber.
- Pour your desired liquid (shampoo, conditioner, body wash) into the chamber. Each chamber holds up to 17 oz (500mL).
- Replace the lid securely and re-insert the chamber onto the mounting bracket until it clicks into place.
- Use the included liquid labels to identify the contents of each chamber.

NO TOOLS INSTALLATION

Damage-Free Mounting

WHAT'S IN THE BOX

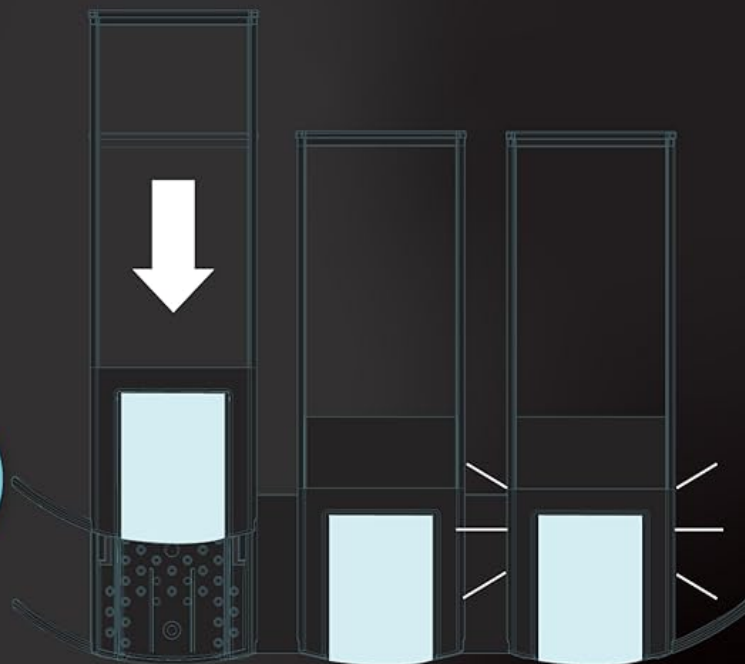

EASY TO REMOVE

CLICK!

Image: The Clever Triple Shower Dispenser filled with liquids, showing labels for Body Wash, Shampoo, and Conditioner, and indicating a capacity of 17 fl oz (500 mL) per chamber.

Dispensing Liquids:

- Place your hand or a loofah under the nozzle of the desired chamber.
- Press the large lever button firmly to dispense the liquid.
- Release the button to stop dispensing.

Priming the Pump (First Use or After Refill):

For the first use or after refilling a chamber, you may need to prime the pump to ensure smooth dispensing, especially with thicker liquids like conditioner.

1. Fully depress the large chrome button.
2. While the button is depressed, use a finger to plug the small nozzle where the soap comes out.
3. Release the large chrome button while keeping the nozzle plugged.
4. Remove your finger from the nozzle.
5. Repeat this "press, plug, release, remove" sequence several times until the liquid begins to dispense consistently. This may take around a dozen repetitions depending on the liquid's viscosity.



Image: The Clever Triple Shower Dispenser mounted on a white tiled shower wall, filled with blue body wash, white shampoo, and light blue conditioner. A blue loofah hangs from one of the accessory hooks.

MAINTENANCE AND CLEANING

Regular cleaning will ensure the longevity and hygienic operation of your dispenser.

- **Exterior Cleaning:** Wipe the exterior of the dispenser with a soft, damp cloth and mild soap. Avoid abrasive cleaners or solvents that could damage the finish.
- **Chamber Cleaning:** For thorough cleaning, remove the individual chambers from the mounting bracket. You can rinse them with warm water. If switching liquid types, it is recommended to wash the chambers thoroughly to prevent mixing residues.
- **Pump Maintenance:** If a pump becomes clogged or sticky, remove the chamber and rinse the pump mechanism under warm water. Priming the pump after cleaning (as described in the Operating section) may be necessary.



Image: A hand demonstrating the easy removal of a dispenser chamber from its wall-mounted base, emphasizing the convenience for refilling or cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Dispenser not dispensing liquid.	Pump not primed; air in the pump; liquid too thick; chamber empty.	Prime the pump as described in the "Operating Instructions" section. Ensure the chamber is filled. If liquid is very thick, consider diluting slightly if safe for the product.
Dispenser unit falls off the wall.	Improper surface preparation; insufficient curing time for adhesive; surface not suitable for adhesive.	Ensure the wall surface is thoroughly cleaned and dry before installation. Allow the adhesive to cure for a full 24 hours without disturbance. Re-install following all steps precisely. Ensure the surface is smooth and non-porous.
Liquid leaks from the dispenser.	Chamber lid not sealed properly; pump mechanism issue.	Check that the chamber lid is securely closed. Remove the chamber and inspect the pump mechanism for any visible damage or blockages. Clean the pump if necessary.

SPECIFICATIONS

Model Number: 77354

Color: White/Chrome

Material: Chrome (BPA Free)

Product Dimensions (L x W x H): 11.25" x 3.5" x 8.25"

Liquid Volume per Chamber: 17 oz (500 mL)

Number of Chambers: 3

Item Weight: 1.81 pounds

Included Components: Soap and Shower Triple Dispenser, waterproof silicone glue, double-sided tape, liquid labels.

Assembly Required: No (installation only)

Batteries Required: No

UPC: 773315773548

WARRANTY INFORMATION

Better Living Products offers a **Lifetime Pump Warranty** for this dispenser. For details regarding warranty claims or service, please refer to the contact information provided by Better Living Products or visit their official website.

CUSTOMER SUPPORT

Should you have any questions, require assistance with installation, or need to address any issues not covered in this manual, please contact Better Living Products customer support. Refer to the product packaging or the manufacturer's official website for the most current contact details.

IMPORTANT NOTES ON VIDEO CONTENT

Please note that while there are associated videos for this product, specific details regarding their type (e.g., m3u8) and creator (e.g., "Seller") were not provided in the input data. Therefore, no videos could be embedded in this manual as per the specified requirements.